

**BY ORDER OF THE SECRETARY
OF THE AIR FORCE**

**AIR FORCE INSTRUCTION 11-2F-16V3
18 DECEMBER 2013**



**8TH FIGHTER
WING Supplement
29 APRIL 2014**

Certified Current On 23 February 2016

Flying Operations

F-16-OPERATIONS PROCEDURES

COMPLIANCE WITH THIS PUBLICATION IS MANDATORY

ACCESSIBILITY: Publications and forms are available for downloading or ordering on the e-Publishing website at www.e-Publishing.af.mil

RELEASABILITY: There are no releasability restrictions on this publication.

OPR: HQ ACC/A3TO

Certified by: HQ USAF/A3O
(Maj Gen Steven M. Shepro)

Supersedes: AFI11-2F-16V3,
18 February 2010

Pages: 106

(8FW)

OPR: 8 OG/OGV

Certified by: 8 OG/CC
(Colonel Peter M. Bilodeau)

Supersedes: AFI11-2F16V3_8FWSUP1,
10 May 2012

Pages: 50

This publication establishes effective and safe operations of the F-16 and implements AFD 11-2, *Aircrew Operations*; AFD 11-4, *Aviation Service*; and AFI 11-202V3, *General Flight Rules*. It establishes the minimum Air Force operations procedures for personnel performing duties in the F-16. This publication applies to the US Air Force Reserve Command (AFRC) and the Air National Guard (ANG). MAJCOMs, Direct Reporting Units (DRU) and Field Operating Agencies (FOA) will forward proposed MAJCOM/DRU/FOA-level supplements to this volume to HQ USAF/A3O-AI, through HQ ACC/A3TO, for approval prior to publication IAW AFD 11-2, paragraph 2.2. Copies of approved and published supplements will be provided by the issuing office to HQ USAF/A3O-AI, HQ ACC/A3TO, and the user MAJCOM/ DRU/FOA offices of primary responsibility (OPR). Field units below MAJCOM/DRU/FOA level will forward copies of their supplements of this publication to their parent MAJCOM/DRU/FOA OPR for post-publication review. **Note:** The above applies only to those DRUs/FOAs that report directly to HQ USAF. Keep supplements current by complying with AFI 33-360, *Publications and Forms Management*. Unless another approval authority is cited, waiver authority for this volume is the MAJCOM/A3, or COMAFFOR for those aircrew and assets under the

COMAFFOR's oversight. Requests for waivers must be submitted through the chain of command to the appropriate Tier waiver approval authority or if a non-tier requirement, to the publication OPR for consideration. COMAFFOR will notify HQ ACC/A3 and home station MAJCOM/A3 of waivers within 72 hours of approval. Refer recommended changes and questions about this publication to the Office of Primary Responsibility (OPR) using the AF Form 847, *Recommendation for Change of Publication*; route AF Forms 847 from the field through the appropriate functional chain of command. HQ ACC/A3 will coordinate all changes to the basic volume with all MAJCOM/A3s. Ensure that all records created as a result of processes prescribed in this publication are maintained in accordance with AFMAN 33-363, *Management of Records*, and disposed of in accordance with the Air Force Records Disposition Schedule (RDS), located in the Air Force Records Information Management System (AFRIMS). **Note:** This instruction contains references to the following field (subordinate level) publications and forms which, until converted to departmental level publications and forms may be obtained from the respective MAJCOM publication distribution office.

(8FW) This supplement implements **AFI 11-2F-16V3, *F-16 Operations Procedures*, 23 January 2014**. This supplement applies to all assigned, attached or associated units to the 8th Fighter Wing, Kunsan Air Base, Republic of Korea. Refer recommended changes and questions about this publication to the Office of Primary Responsibility (OPR) using the AF Form 847, *Recommendation for Change of Publication*; route the AF Forms 847 from the field through the appropriate functional chain of command. Ensure that all records created as a result of processes prescribed in this publication are maintained in accordance with Air Force Manual (AFMAN) 33-363, *Management of Records*, and disposed of in accordance with Air Force Records Information Management System (AFRIMS) Records Disposition Schedule (RDS). The use of the name or mark of any specific manufacturer, commercial product, commodity, or service in this publication does not imply endorsement by the Air Force.

SUMMARY OF CHANGES

This document has been substantially revised and must be completely reviewed. Major changes include: over water flight waivers, Digital Terrain System planning, ARTS/PARS guidance, removal of TFR procedures, targeting pod procedures, AIFF interrogation usage, trail recovery procedures, simulated gun employment, hung ordnance recovery changes, configuration changes for HARTS maneuvers, wake turbulence landing spacing, G-Awareness exercise procedures, NVG procedures, HUD as a primary flight reference, CAT D approach usage, air abort addition, hung ordnance change, SAR procedures addition, identifies Tiered waiver authorities for unit level compliance items, and numerous administrative changes.

(8FW) This document has been substantially revised and must be reviewed in its entirety.

Chapter 1—GENERAL GUIDANCE	7
1.1. Responsibilities.	7
Chapter 2—MISSION PLANNING	8
Section 2A—General	8

2.1.	Responsibilities.	8
2.2.	Bird/Wildlife Aircraft Strike Hazard (BASH) Programs.	8
2.3.	Standards.	8
2.4.	CBRNE.	8
2.5.	Flight Material Preparation.	8
2.6.	Fuel Conservation.	9
2.7.	Overwater.	9
2.8.	Briefing and Debriefing.	10
2.9.	Unit Developed Checklists/Local Pilot Aids.	11
Section 2B—Night (see also night sections of Chapter 3, Chapter 5 and Chapter 6)		11
2.10.	Minimum Safe Altitude (MSA).	11
2.11.	Night chart requirements.	12
Chapter 3—NORMAL OPERATING PROCEDURES		13
Section 3A—Ground Operations		13
3.1.	Preflight.	13
3.2.	Ground Visual Signals.	13
3.3.	Taxi and Arming.	14
3.4.	EOR Inspections and Before Takeoff Checks.	14
3.5.	Flight Lineup.	15
Section 3B—Takeoff and Departure		15
3.6.	Takeoff.	15
3.7.	Initial Join-up and Rejoins.	16
Section 3C—Enroute		16
3.8.	Air Refueling.	16
3.9.	Aircraft Handling Characteristics (AHC) and Automated Recovery Training Series (ARTS)/Maneuvering Parameters.	16
3.10.	Formation, General.	17
3.11.	G-Awareness Exercises (G-Ex) (Reference AFTTP 3-3.	18
3.12.	Tactical Formations.	19
3.13.	Chase Formation.	19
3.14.	Show Formation.	20
3.15.	Low Altitude Operations (reference AFTTP 3-1.	20

Section 3D—Recovery and Landing	21
3.16. Gear Checks.	21
3.17. Angle of Attack (AOA).	21
3.18. Landing restrictions.	21
3.19. Desired touchdown point and spacing.	21
3.20. Low Approaches.	22
3.21. Touch-and-Go Landings.	22
3.22. Overhead Traffic Patterns.	22
3.23. Tactical Overhead Traffic Patterns.	22
3.24. Closed Traffic Patterns.	23
3.25. Back Seat Approaches and Landings.	23
3.26. Formation Approaches and Landings.	23
Section 3E—Night (see also night sections of Chapter 2, Chapter 5 and Chapter 6)	24
3.27. General Night Procedures.	24
3.28. Night Vision Goggles (NVG) Procedures.	24
Section 3F—Other	26
3.29. Targeting Pod Operations.	26
3.30. Radio Procedures.	26
3.31. Lap Belts.	27
3.32. Change of Aircraft Control.	27
3.33. Fuel Requirements.	27
3.34. Radar Altimeters and Terrain Warning/Avoidance Systems.	28
3.35. ALOW Setting.	28
3.36. Wind and Sea State Restrictions.	28
3.37. Airborne Interrogator Friend Foe (AIFF) Operation.	28
Chapter 4—INSTRUMENT PROCEDURES	29
4.1. General.	29
4.2. Takeoff and Initial Join-up.	29
4.3. Trail Procedures.	29
4.4. Formation Break-up.	31
4.5. Formation Penetration.	31
4.6. Formation Approach.	32

4.7. Instrument Approach Procedures.	32
Chapter 5—AIR-TO-AIR WEAPONS EMPLOYMENT	33
5.1. General.	33
5.2. Simulated Gun Employment.	33
5.3. Maneuvering Limitations.	33
CHAPTER 6—AIR-TO-SURFACE WEAPONS EMPLOYMENT	34
Section 6A—General	34
6.1. General.	34
6.2. Simulated Gun Employment.	34
6.3. Training Missions with a Hot Gun.	34
6.4. Simulated Attacks against off-Range or Manned Targets.	34
6.5. Weather.	34
6.6. Pop-Up Attacks.	34
6.7. Target Identification.	34
6.8. Safety of Ground Personnel.	35
Section 6B—Night	35
6.9. Altitude.	35
6.10. Bank Angle.	35
Chapter 7—ABNORMAL OPERATING PROCEDURES	36
7.1. General.	36
7.2. Critical Action Procedures (CAPs).	36
7.3. Ground Aborts.	36
7.4. Takeoff Aborts.	37
7.5. Air Aborts.	37
7.6. Radio Failure (NORDO).	37
7.7. Severe Weather Penetration.	39
7.8. Spatial Disorientation (SD).	39
7.9. Lost Wingman.	39
7.10. Armament System Malfunctions.	40
7.11. In-flight Practice of Emergency Procedures.	41
7.12. Search and Rescue (SAR) Procedures.	42
7.13. Post Arresting Gear Engagement Procedures.	42

Chapter 8—LOCAL OPERATING PROCEDURES	43
8.1. General.	43
8.1. (8FW) General.	43
Table 8.1. (Added-8FW) VFR Entry Points	53
8.2. If applicable, include procedures for the following in the appropriate section above:	75
8.3. Instructions.	76
Attachment 1—GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION	77
Attachment 1—(8FW) GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION	82
Attachment 2—CHEMICAL, BIOLOGICAL, RADIOLOGICAL, NUCLEAR, AND HIGH YIELD EXPLOSIVE (CBRNE) OPERATIONS (T-1)	85
Attachment 3—FLIGHT BRIEFING GUIDES	87
Attachment 4—CRITICAL ACTION PROCEDURES (CAPS)	95
Attachment 5—(Added-8FW) KUNSAN AIRFIELD DIAGRAM	97
Attachment 6—(Added-8FW) KOREAN MILITARY OPERATING AREAS (MOA)	98
Attachment 7—(Added-8FW) KOREAN RESTRICTED AREAS	99
Attachment 8—(Added-8FW) KUNSAN TAXI FLOW	100
Attachment 9—(Added-8FW) VFR ENTRY POINTS	101
Attachment 10—(Added-8FW) PATTERN REENTRY/BREAKOUT PROCEDURES	102
Attachment 11—(Added-8FW) KUNSAN OVERHEAD AND SFO PATTERNS	103
Attachment 12—(Added-8FW) KUNSAN LOCAL DEPARTURE TRANSITIONS	104
Attachment 13—(Added-8FW) KUNSAN LOCAL CLIMBOUT	105
Attachment 14—(Added-8FW) APPROVED GROUND HOLDING AREAS (POST-ARM)	106

Chapter 1

GENERAL GUIDANCE

1.1. Responsibilities. This instruction prescribes procedures for operating F-16 aircraft under most circumstances. It is not a substitute for sound judgment. Procedures not specifically addressed may be accomplished if they enhance safe and effective mission accomplishment.

Chapter 2

MISSION PLANNING

Section 2A—General

2.1. Responsibilities. The responsibility for mission planning is shared jointly by all flight members and the operations and intelligence functions of fighter organizations. Accomplish sufficient flight planning to ensure safe mission execution, to include fuel requirements, map preparation, and takeoff/landing data. **(T-1).**

2.2. Bird/Wildlife Aircraft Strike Hazard (BASH) Programs. Bird Watch Conditions are defined in AFI 91-202, *The US Air Force Mishap Prevention Program*, and AFPAM 91-212, *Bird/Wildlife Aircraft Strike Hazard (BASH) Management Techniques*. The OG/CC will determine local BASH procedures. **(T-1).**

2.2.1. Takeoffs, landings, or low-levels within one hour of either sunrise or sunset during the phase II period increase likelihood of birdstrike. Significant bird hazards are published in FLIP GP, the IFR Supplement and local airfield guidance.

2.2.2. When operating at airfields where no BASH program exists, pilots will make appropriate decisions based on observable bird conditions and seek assistance from local airfield personnel. **(T-1).**

2.2.3. Pilots will consider bird migratory patterns during enroute portion of the mission to minimize the potential of an in-flight bird strike. The Bird Avoidance Model (BAM) on United States Avian Hazard Advisory System (<http://www.usahas.com>) provides BASH information, including regionalized CONUS bird migration, PFPS software overlay, and latest news. See AFPAM 91-212 for additional information. **(T-1).**

2.3. Standards. The OG/CC may publish and approve group or wing standards. Operations Group Stan/Eval (OGV) will review all standards for AFI 11-series compliance prior to publication. **(T-1).**

2.4. CBRNE. Procedures for operation in a CBRNE-threat environment are contained in [Attachment 2](#).

2.5. Flight Material Preparation.

2.5.1. Mission Data Card (MDC). The minimum TOLD requirements on the MDC are: 2,000 foot acceleration check speed (if computed takeoff roll exceeds 2,500 feet); refusal speed (dry/wet); rotation speed; takeoff speed; takeoff distance; normal landing speed and distance (dry/wet); heavyweight (immediately after takeoff) landing speed and distance (dry/wet). If computed takeoff roll is less than 2,500 feet, evaluate aircraft performance by comparing actual takeoff distance to computed takeoff distance or use a 1000 foot acceleration check speed. **(T-1).**

2.5.2. Local Area Maps. A local area map is not required if pilot aids include jettison areas, divert information, controlled bailout areas, and provide sufficient detail of the local area to remain within assigned training areas. **(T-1).**

2.5.3. Enroute Charts. Pilots may substitute FLIP enroute charts for maps on navigational flights within areas adequately covered by these charts.

2.5.4. Low Altitude Maps.

2.5.4.1. On low altitude flights, each pilot will carry a current map (updated using Chart Update Manual or electronic equivalent) of the route/operating area. It will be of such scale and quality that the detail of terrain features, hazards, and chart annotations permits navigation and safe mission accomplishment. Circle/highlight manmade obstacles at above planned flight altitude within 5nm of the planned route. Annotate time or distance tick marks and headings. **(T-1)**.

2.5.4.2. Annotate route abort altitude (RAA) using the IFR Off Airways guidance in AFI 11-202V3 chapter 8. **(T-1)**.

2.5.4.3. For flights inside the Continental United States (CONUS) under Visual Flight Rules (VFR) or inside Military Training Routes (MTR), comply with the following:

2.5.4.3.1. Use FLIP AP/1B and either sectional aeronautical charts or mission planning software (e.g. PFPS/Falcon View/JMPS). Select the following overlay options for PFPS/Falcon View: airports/heliports, airspace boundaries, airways, MTR, parachute jump and special use airspace boundaries. **(T-1)**.

2.5.4.3.2. Annotate Low level charts, or locally developed low-level route books, with location and dimensions of class B/C/D airspace, military airfields, civil airfields, and other potential high density traffic areas (e.g., parachute activity areas and ultra light/hang glider/glider sites) within 5 NM of any planned VFR route or MTR lateral boundary. Annotate airfield approach control frequencies in the vicinity of class B/C/D airspace as well as the intersection of other VR/IR routes or other areas of conflict. **(T-1)**.

2.5.4.4. Outside the CONUS, follow gaining MAJCOM, theater, or host nation guidance on mission planning. If no such guidance exists, use the best charts or flight planning software overlay options available to accomplish the intent of maximizing traffic awareness and awareness of controlled airspace boundaries. **(T-1)**.

2.5.5. Digital Terrain System (DTS) and Automatic Ground Collision Avoidance System (AGCAS). F-16 mission planners will ensure RDTED coverage is adequate for the mission area and is loaded to each flight member's ADTC to ensure maximum AGCAS protection. Without appropriate RDTED coverage, or when corrupted data is present, AGCAS will still provide recovery protection to 50 feet MSL, however this may not prevent potential ground collision when MSL elevation is higher. **(T-1)**.

2.5.6. All qualified crewmembers will carry current checklists on every flight. **(T-1)**.

2.6. Fuel Conservation. Manage aviation fuel as a limited commodity and precious resource. Design procedures for optimal fuel use and efficiencies throughout all phases of mission execution, to include ground operations, flight plans, power settings and climb/descent profiles. Incorporate enroute tasks to make maximum use of airborne learning opportunities. **(T-1)**.

2.7. Overwater. Planned flights over water, outside of the local training area (e.g., deployments, cross countries, Programmed Delivery for Maintenance (PDM) inputs, etc) will be

accomplished two-ship as a minimum. **(T-1)**. Single ship over water flights, outside of the local training area, require OG/CC approval. **(T-3)**. For deployments under ACC/AOS movement control, AFI 11-207 waiver authorities will apply.

2.8. Briefing and Debriefing.

2.8.1. All flight members will attend the briefing unless previously coordinated with unit/squadron supervisors. Flight leads are responsible for presenting a logical briefing to promote a safe and effective mission. Structure flight briefings to accommodate the capabilities of each pilot in the flight. Any item published in CAF/wing/group/squadron standards or AFIs and understood by all participants may be briefed as "standard." **(T-1)**.

2.8.2. Flight leads must plan adequate time to discuss required briefing items depending on complexity of the mission and pilot capabilities, and must start flight briefings at least 1.5 hours before scheduled takeoff. Alert briefings will start in sufficient time to be completed prior to pilot changeover. Items may be briefed in any sequence, provided all minimum requirements listed in this AFI and AFI 11-202V3 are addressed. Additional time and CRM emphasis is required in D-model sorties especially on FAM and Incentive flights. Passenger must demonstrate oxygen regulator use, ability to establish multiple airways and mask removal after being strapped in. **(T-1)**. Reference [Attachment 3](#) for example briefing guides. All flight briefings will include:

2.8.2.1. Weather and NOTAMs **(T-1)**.

2.8.2.2. Emergency procedures **(T-1)**.

2.8.2.3. Mission priorities and task management. **(T-1)**.

2.8.2.4. Significant rules (e.g. SPINS, Training Rules, ROE). **(T-1)**.

2.8.2.5. Flight member responsibilities and deconfliction contracts. Flight leads will brief a formation deconfliction/blind/get well plan for every phase of flight. **(T-1)**.

2.8.3. Low-level Briefings will emphasize **(T-1)**:

2.8.3.1. Obstacle/terrain acquisition and avoidance, bird hazards, emergency actions and weather avoidance with route abort procedures. **(T-1)**.

2.8.3.2. Employment of all Collision Avoidance Advisories and Digital Terrain System warnings to include AGCAS. **(T-1)**.

2.8.3.3. Human factors to include task prioritization, g-excess illusion, and perceptual issues associated with flight over water/featureless terrain. **(T-1)**.

2.8.3.4. Airfield approach control frequencies in the vicinity of class B/C/D airspace as well as the intersection of other VR/IR routes or other areas of conflict. **(T-1)**.

2.8.4. Dissimilar Formation Briefing. Emphasize proper position to ensure wingtip clearance, flight member responsibilities, and aircraft-unique requirements for each phase of flight. **(T-1)**.

2.8.5. Alternate Mission/Events and Multiple Go Days. **(T-1)**.

2.8.5.1. Brief an alternate mission for each flight that is less complex than the primary mission. Unbriefed missions/events will not be flown. Mission elements may be

modified and briefed airborne as long as flight safety is not compromised. Flight leads will ensure changes are acknowledged by all flight members. Continuation training (CT) missions may fly primary or alternate missions in any sequence. **(T-1)**.

2.8.5.2. During deployed operations, exercises, or multiple-go days when aircraft turn times do not allow follow-on mission brief(s), if all flight members attend an initial flight brief, the flight lead need only brief any changes for subsequent flights. **(T-1)**.

2.8.5.3. On multiple-go days, subsequent missions will be of equal or less complexity. Schedule and plan upgrade events on the first sortie only. If that sortie is non-effective for weather, maintenance or airspace, IPs may elect to accomplish the planned upgrade events in the second sortie. **(T-1)**.

2.8.6. Debriefing.

2.8.6.1. All missions will be debriefed and address in-flight execution, flight member responsibilities, deconfliction contracts, tactical employment priorities, and sensor management. **(T-1)**.

2.8.6.2. Flight leads will review the video/audio record of all tactical portions of the sortie to assess flight members' AGSM effectiveness. **(T-1)**. It is imperative to evaluate not only during the G-ex, but also after the pilot has had time to fatigue--typically when the AGSM breaks down and G-induced Loss of Consciousness (GLOC) occurs. Pilots with poor AGSM technique or low G-tolerance will be identified to the operations officer. **(T-1)**. The squadron commander has the option of directing refresher centrifuge training in accordance with AFI 11-404, *Centrifuge Training for High-G Aircrew*.

2.9. Unit Developed Checklists/Local Pilot Aids. Unit developed checklists used in lieu of flight manual checklists must contain all items, verbatim and in order, unless specifically addressed in the flight manual. **(T-1)**. Pilot aids will contain:

2.9.1. Briefing guides (reference [Attachment 3](#) for examples). **(T-1)**.

2.9.2. Local radio channelization. **(T-1)**.

2.9.3. Appropriate airfield diagrams, to include cable/net barrier information. **(T-1)**.

2.9.4. Emergency information (impoundment procedures, emergency action checklists, NORDO procedures, divert information, search and rescue procedures, etc). **(T-1)**.

2.9.5. Divert base cable and barrier information. **(T-1)**.

2.9.6. Bailout and jettison areas. **(T-1)**.

2.9.7. Cross-country procedures to include: command and control, engine documentation, Joint Oil Analysis Program (JOAP) samples, and aircraft servicing. **(T-1)**.

2.9.8. Other information as desired such as: stereo flight plans, turn procedures, local training areas, instrument preflight, and alert setup procedures.

Section 2B—Night (see also *night* of Chapter 3, [Chapter 5](#) and [Chapter 6](#))

2.10. Minimum Safe Altitude (MSA). Compute the MSA for each leg of the intended route of flight in accordance with AFI 11-214. **(T-1)**.

2.11. Night chart requirements. Minimum requirement is a Form 70 or chart/map containing headings, RAAs, MSAs, and maximum/minimum route structure altitudes. **(T-1)**.

Chapter 3

NORMAL OPERATING PROCEDURES

Section 3A—Ground Operations

3.1. Preflight.

- 3.1.1. [B/D model aircraft] when the rear cockpit is occupied by other than a fully qualified F-16 pilot, place the stick control switch in the FWD position. **(T-1)**.
- 3.1.2. Do not carry baggage/equipment in an unoccupied rear cockpit; in the avionics bay behind the cockpit; or in the aft canopy fixed transparency area (turtle back). **(T-1)**.
- 3.1.3. Do not place objects in or on top of the engine intake. **(T-1)**.
- 3.1.4. Secure publications, maps and personal items to avoid flight control/ throttle interference. **(T-1)**.
- 3.1.5. Select Pressure Breathing (PBG) except when using Aircrew Eye and Respiratory Protection System (AERPS) or Aircrew Chemical Defense Equipment (ACDE). **(T-1)**.
- 3.1.6. If flying with the COMBAT EDGE vest, remove the port plug on the CRU-94/120 (if installed), stow the plug during flight to prevent a FOD hazard, then re-install upon completion of the sortie. **(T-1)**.
- 3.1.7. Ensure ejection seat survival kit deployment switch is in the automatic position. **(T-1)**.
- 3.1.8. Do not select CAT I on the Stores Configuration Switch with Category III configurations IAW T.O. 1F-16-1-2. **(T-1)**.

3.2. Ground Visual Signals. Normally, pilot and ground crew will communicate by the intercom system during all start-engine, pre-taxi and end of runway (EOR) checks. Use the intercom system to the maximum extent possible anytime maintenance technicians are performing "redballs" on the aircraft and for EPU checks performed in congested areas. **(T-1)**. Do not actuate any system which endangers ground crew prior to receiving acknowledgment. Units with an active air defense commitment may waive use of ground intercom during alert scrambles. **(T-1)**. When ground intercom is not used, visual signals will be in accordance with AFI 11-218, *Aircraft Operation and Movement on the Ground*, and this volume. **(T-1)**. The crew chief will repeat the given signal when it is safe to operate the system. **(T-1)**.

3.2.1. The following signals augment AFI 11-218:

- 3.2.1.1. EPU OPERATIONAL CHECK. Raise two fingers and rotate hand. **(T-1)**.
- 3.2.1.2. FLIGHT CONTROLS CLEAR. Raise arm, clench fist, and make a stirring motion. **(T-1)**.
- 3.2.1.3. BRAKE CHECK. Hold left or right arm horizontal, open hand and push forward, breaking at the wrist (as in applying rudder pedal pressure with feet). **(T-1)**.
- 3.2.1.4. LOSS OF BRAKES WHILE TAXIING. Lower tailhook. **(T-1)**.
- 3.2.1.5. GUN ARMAMENT CHECK. Point index finger forward with thumb upward simulating a pistol and shake head (yes or no). **(T-1)**.

3.2.1.6. EPU ACTIVATION. Raise hand with palm open and perform shoving motion indicating "stay away." Then cup hands over oxygen mask indicating hydrazine vapors may be present. **(T-1)**.

3.3. Taxi and Arming.

3.3.1. Taxi Interval/Speed. Minimum taxi interval is 150 feet staggered or 300 feet in trail. Spacing may be reduced when holding short of or entering the runway. Unless mission requirements dictate, limit taxi speed to 30 knots, 15 knots over a raised cable, and 10 knots in turns. **(T-1)**.

3.3.2. Ice/Snow Conditions. Do not taxi during ice and/or snow conditions until all portions of the taxi route and runway have been checked for safe conditions. **(T-1)**. When ice and/or snow are present on the taxiway, taxi on the centerline with a minimum of 300 feet spacing. **(T-1)**. Minimum RCR for taxi is 10. **(T-3)**.

3.3.3. Ice FOD Procedures. The following procedures apply when the conditions in T.O. 1F-16-1 indicate engine damage due to icing is possible.

3.3.3.1. If conditions warrant, the Supervisor of Flying (SOF)/Top 3 will have the first flight lead start 5 minutes early to check for inlet ice formation. **(T-1)**.

3.3.3.2. Position ANTI ICE switch to ON prior to engine start. **(T-1)**.

3.3.3.3. An ice FOD monitor must be available to monitor the engine inlet for ice buildup whenever the aircraft is stopped for an extended period of time (i.e. ramp/shelter and EOR). **(T-1)**. Avoid standing water and snow/slush accumulations.

3.3.3.4. Hold in the arming spot with an ice FOD monitor present until cleared for take-off. **(T-1)**.

3.3.3.5. Shutdown immediately if icing is visually detected and notify the SOF/Top 3. **(T-1)**. Make an appropriate entry in the aircraft forms and qualified personnel must accomplish an intake inspection prior to restarting the engine. **(T-1)**.

3.3.4. EPU Check. Do not allow maintenance technicians to approach the aircraft until the EPU check is complete. **(T-1)**. Use intercom or a "thumbs up" signal to indicate when safe. **(T-1)**.

3.4. EOR Inspections and Before Takeoff Checks. Place hands in view of ground personnel while the quick check inspection and/or arming/de-arming are in progress. **(T-1)**. If the intercom system is not used during EOR checks, the pilot will establish and maintain visual contact with the chief and use visual signals. **(T-1)**. EOR inspections will be accomplished immediately prior to takeoff at a designated location, usually near the end of the runway or while departing the chock area (not required for alert scrambles). **(T-1)**. At non-USAF bases, make every attempt to coordinate an EOR inspection with the host maintenance unit. **(T-1)**.

3.4.1. Forward Firing Ordnance. Do not taxi in front of aircraft being armed/de-armed with forward firing ordnance. **(T-1)**.

3.4.2. Flight members will inspect each other for proper configuration and any abnormalities. **(T-1)**.

3.5. Flight Lineup. Consider weather conditions, runway conditions, and runway width. Minimum spacing between separated elements/flights is 500 feet. **(T-1)**. Wingmen must maintain wingtip clearance with their element lead. **(T-1)**. If runway width permits, lineup with wingtip clearance between all aircraft in the flight. **(T-1)**.

Section 3B—Takeoff and Departure

3.6. Takeoff.

3.6.1. Do not takeoff when the RCR is less than 10. **(T-1)**.

3.6.2. Pilots will review takeoff data with emphasis on takeoff and abort factors such as short/wet runway, heavy gross weights, cable configurations and abort sequence in formation flights. **(T-1)**.

3.6.3. On training missions, do not takeoff if the computed takeoff roll exceeds 80 percent of the available runway single ship or 70 percent for a formation takeoff. **(T-1)**.

3.6.4. Ensure a compatible departure end cable is raised for all takeoffs and landings (including remotely operated cables). **(T-3)**.

3.6.5. OG/CC may approve intersection takeoffs if operational requirements dictate. **(T-3)**.

3.6.6. Make an afterburner takeoff anytime the computed MIL power takeoff roll exceeds 50 percent of the available runway. **(T-1)**.

3.6.7. Centerline Stores. Start the takeoff roll beyond a raised approach end cable unless runway length, runway conditions (wet/icy), winds, gross weight or cable availability dictate otherwise. **(T-1)**. Exception: aircraft with a centerline fuel tank may takeoff across approach end BAK-12 arrestment cables with an 8-point tie down system.

3.6.8. Minimum takeoff interval between aircraft/elements is 10 seconds (15 seconds for afterburner). **(T-1)**. Increase interval to 20 seconds minimum for join-up on top or when carrying live air-to-surface ordnance (excluding BDU-33s and 20mm ammunition). **(T-1)**.

3.6.9. After releasing brakes, aircraft/elements will steer toward the center of the runway. **(T-1)**.

3.6.10. Formation Takeoff.

3.6.10.1. Formation takeoffs are restricted to two aircraft. **(T-1)**.

3.6.10.2. Do not make formation takeoffs when:

3.6.10.2.1. Runway width is less than 125 feet. **(T-1)**.

3.6.10.2.2. Standing water, ice, slush or snow is on the runway. **(T-1)**.

3.6.10.2.3. The crosswind or gust component exceeds 15 knots. **(T-1)**.

3.6.10.2.4. Loaded with live munitions (excluding air-to-air missiles, BDU-33s, 20mm ammunition, 2.75 rockets, AGM-88, AGM-65, and night illumination flares). **(T-1)**.

3.6.10.2.5. Ferrying aircraft from contractor/AFMC facilities. **(T-1)**.

3.6.10.2.6. Asymmetric loading or a difference of more than 2,500 pounds gross weight. **(T-1)**.

3.7. Initial Join-up and Rejoins.

3.7.1. Day weather minimums for VFR join-ups below a ceiling are 1,500 foot ceiling and 3 miles (5 km) visibility. **(T-1)**.

3.7.2. Flight leads will maintain 350 KIAS until join-up is accomplished unless mission requirements necessitate a different airspeed. **(T-1)**. Pilots may delay AB cancellation to establish closure on lead or lead element. OG/CCs may approve different climb and cruise airspeeds within dash one limits. **(T-3)**.

3.7.3. Battle damage/bomb check will be accomplished on RTB, when practical (i.e., weather prohibits accomplishing BD check). This check is mandatory after expending any ordnance (including 20mm ammunition). **(T-1)**.

3.7.4. Accomplish air-to-air systems checks above 10,000 feet MSL when practical. **(T-1)**.

3.7.5. For further join-up procedures, see Night Operational Procedures (**Section 3E**) and Instrument Procedures (**Chapter 4**).

Section 3C—Enroute

3.8. Air Refueling.

3.8.1. Pilots undergoing initial or recurrency training in air refueling will not refuel with a student boom operator. **(T-1)**. Lead/IP will announce when an upgrade or requal pilot is in the formation and will request a qualified (non-student) boomer. **(T-1)**.

3.8.2. Pilots will inform boom operator when refueling from particular tanker type (e.g., KC-10, KC-135) for the first time. **(T-1)**.

3.8.3. Quick flow procedures are authorized and will be conducted IAW ATP-56B and AFTTP 3-3.F-16. **(T-1)**.

3.9. Aircraft Handling Characteristics (AHC) and Automated Recovery Training Series (ARTS)/Maneuvering Parameters.

3.9.1. The following are the minimum altitudes for the prescribed maneuvers.

3.9.1.1. Confidence Maneuvers/Advanced Handling - 10,000 feet AGL, except dive recovery maneuver (15,000 feet AGL minimum entry altitude). **(T-1)**.

3.9.1.2. Horn Awareness and Recovery Training series (HARTS) numbers 1, 2 and 3 - 10,000 feet AGL. **(T-1)**.

3.9.1.3. HARTS series numbers 4 and 5 - 15,000 feet AGL. **(T-1)**.

3.9.1.4. Aircraft will not descend below 5,000 feet AGL during aerobatic maneuvering. **(T-1)**.

3.9.1.5. HARTS 3 with PARS – 10,000 feet AGL. **(T-1)**.

3.9.1.6. ARTS 2 – 8,000 feet AGL. **(T-1)**.

3.9.1.7. ARTS series number 1, 3, 4, and 5 – 5,000 feet AGL. **(T-1)**.

3.9.2. Avoid flight through wingtip vortices/jet wash. **(T-1)**. If unavoidable, the aircraft should be unloaded immediately to approximately 1 G.

3.9.3. Do not manually extend the trailing edge flaps in an attempt to improve aircraft performance. **(T-1)**. EXCEPTION: Trailing edge flaps may be manually extended during intercepts performed by airspace control alert tasked unit aircraft, or during low/slow (below 5000 feet AGL) VID training, on targets traveling at less than 200 KIAS.

3.9.4. Do not attempt to bypass flight control limiters to improve performance. **(T-1)**. Examples are: transfer fuel to alter center of gravity (CG), manual pitch override (MPO) to gain additional negative G or assaulting two limiters at low airspeed.

3.9.5. The minimum airspeed for all maneuvering is based upon activation of the low speed warning tone. When the low speed warning tone sounds, the pilot will take action to correct the low speed condition. **(T-1)**.

3.9.6. The following is guidance for Horn Awareness and Recovery Training Series (HARTS) (reference AFTTP 3-3.F-16):

3.9.6.1. HARTS maneuvers will be flown in CAT-1 loaded aircraft only. **(T-1)**.

3.9.6.2. In F-16 C/D Block 40-52 aircraft, do not fly HARTS maneuvers 4 and 5 unless in one of the following configurations: Clean (no tanks), or 300 gallon centerline tank. MAU-12s may be carried on stations 3 and 7, and/or AIM-9/AMDs/ACMI/CATM-120s may be carried on stations 1, 2, 8 and/or 9. CATM-120s will be symmetrically loaded if carried. AIM-9/AMD/ACMI can be symmetric or one missile asymmetric. Inlet mounted TGP and/or HTS pods may be carried. **(T-1)**.

3.9.6.3. For all F-16 Blocks, external tanks should be dry to avoid a faster than expected airspeed bleed-off due to excessive weight during the pull up, for all HARTS maneuvers.

3.9.7. The following is guidance for Automated Recovery Training Series (ARTS) for AGCAS/ Pilot Activated Recovery System (PARS) recovery profiles (reference AFTTP3-3.F-16): **(T-1)**.

3.9.7.1. With exception of the HARTS 3 with PARS maneuver, AGCAS/PARS demo maneuvers may be flown in any aircraft configuration unless concern for over-g exists. However, a CAT I loading is preferred to demonstrate the full maneuvering potential of the automated recovery system. Potential for over-g exists if any Nose-low PARS maneuver is performed when the aircraft configuration has a symmetric g-limit of less than 6.2 g CAT I or 5.2 g CAT III.

3.9.7.2. AGCAS recoveries shall not be demonstrated by executing dive maneuvers toward the ground. AGCAS is designed to provide a minimal buffer above the ground during recovery and must not be intentionally activated.

3.10. Formation, General. Flight leads and instructors will ensure contracts, roles and responsibilities of each flight member are established, briefed, executed and debriefed. **(T-1)**. Flight members will immediately notify lead if unable to fulfill basic responsibilities, contracts or other assigned tasks. **(T-1)**. Flight leads will avoid tasking element leads/wingmen beyond their abilities without sacrificing basic responsibilities. **(T-1)**. Reference AFTTP 3-3.F-16 and AFTTP 3-1.F-16.

3.10.1. The flight lead is always responsible for flight actions. **(T-1)**. Wingmen will be prepared to take the lead when directed. **(T-1)**.

3.10.2. In IMC, the maximum flight size in visual formation is four aircraft except when flying in close formation with a tanker. **(T-1)**.

3.10.3. Do not use rolling maneuvers to maintain or regain formation position below 5,000 feet AGL or in airspace where aerobatics are prohibited. **(T-1)**.

3.10.4. Use airborne visual signals in accordance with AFI 11-205, *Aircraft Cockpit and Formation Flight Signals*, or detailed in local procedures. **(T-1)**. Initiate configuration changes for four-ship flights by radio call, when practical. When formation position changes are directed by radio, all wingmen will acknowledge prior to initiating the change. **(T-1)**. A radio call is mandatory when directing position changes at night or under instrument conditions. **(T-1)**.

3.10.5. Flight leads will not break up flights from visual or sensor formations until each pilot has a fix from which to navigate (visual, radar, INS or TACAN). **(T-1)**.

3.10.6. Lead changes.

3.10.6.1. The minimum altitude for changing leads within a formation is 500 feet AGL over land or 1,000 feet AGL over water [see also Night Operational Procedures ([Section 3E](#))]. **(T-1)**.

3.10.6.2. During limited visibility conditions (e.g., night, IMC) initiate lead changes from a stabilized, wings level attitude [see also Night Operational Procedures ([Section 3E](#)) and Instrument Procedures ([Chapter 4](#))]. **(T-1)**.

3.10.6.3. Do not initiate lead changes with the wingman further back than normal fingertip or route position, or greater than 30 degrees back from line abreast. **(T-1)**.

3.11. G-Awareness Exercises (G-Ex) (Reference AFTTP 3-3. F-16 and AFI 11-214).

3.11.1. A G-Ex is required if planned maneuvering will exceed 5G. Accomplish the G-Ex day or night, only in VMC, with a discernible horizon, and only when unaided or NVG-aided visual cues are adequate to safely perform the maneuver. **(T-1)**. If these requirements are not met, omit the G-Ex and reduce mission tasking to limit maneuvering to 5G. **(T-1)**.

3.11.2. Unless performing a syllabus required event (e.g., chase of a G-Ex), flight members will follow AFTTP 3-3.F-16 G-Awareness Exercise Procedures. **(T-1)**. Use on-board systems (e.g. air-to-air TACAN, Radar, data link) to establish separation prior to maneuver execution. **(T-1)**.

3.11.3. Conduct the G-Ex in order of preference listed below to help ensure the airspace is clear from potential traffic conflicts. **(T-1)**. If practical, use ATC to help clear the airspace:

3.11.3.1. Special Use Airspace (e.g., Restricted/Warning areas, Air Traffic Control Assigned Airspace (ATCAA), MOAs and MAJCOM approved large scale exercise/special mission areas).

3.11.3.2. In VFR only above 10,000 feet MSL outside of special use airspace.

3.11.3.3. In VFR only inside the confines of a Military Training Route (MTR).

3.11.3.4. In VFR only below 10,000 feet MSL outside of special use airspace.

3.11.4. Flight/element leads flying outside of CONUS will follow gaining MAJCOM, theater or host nation guidance on airspace in which G-Ex may be performed. **(T-1)**. If no such guidance exists, follow the above procedures to the maximum practical extent.

3.12. Tactical Formations.

3.12.1. Tactical Maneuvering. Wingmen/elements must maneuver relative to the flight lead/lead element and they must maintain sight. **(T-1)**. Trailing aircraft/elements are responsible for deconflicting with lead aircraft/elements and will do so vertically when required. **(T-1)**. At low altitude, wingmen/trailing elements will deconflict high. **(T-1)**. Trailing aircraft/element(s) will maintain sufficient spacing so that primary emphasis during formation maneuvering/turns is on low altitude awareness and deconfliction within elements, not on deconfliction between elements. **(T-1)**. Normally, the wingman is responsible for flight path deconfliction, but the flight/element lead becomes primarily responsible when: **(T-1)**.

3.12.1.1. Tactical maneuvering places the leader well aft of the wingman's 3/9 line or forces the wingman's primary attention away from the leader (e.g., wingman becomes engaged fighter).

3.12.1.2. The wingman calls "padlocked".

3.12.1.3. The wingman calls "blind". Primary deconfliction responsibility transfers back to the wingman once the wingman acknowledges a visual on his lead.

3.12.2. Loss of Visual ("Blind") Procedures.

3.12.2.1. Flight members will call blind with an altitude to the hundreds of feet, i.e., "Blind 16.9". **(T-1)**. The visual flight member will respond with "visual" and talk eyes on. **(T-1)**.

3.12.2.2. If the other flight member is also "Blind," they will call blind with an altitude. **(T-1)**. Lead will be directive to ensure altitude separation is maintained and direct the wingman's flow direction. **(T-1)**. Use a minimum of 500 feet (1,000 feet above 5,000 feet AGL) altitude separation. Avoid climbs/descents through the deconfliction altitude. All flight members must visually clear their flight path. **(T-1)**.

3.12.2.3. If there is no timely acknowledgment of the original "Blind 16.9" call, then the flight member/element initiating the call will maneuver away from the last known position of the other flight member/element and climb/descend if necessary. **(T-1)**. If visual contact is still not regained, the flight lead will take additional positive action to ensure flight path deconfliction. **(T-1)**. Scenario restrictions such as sanctuary altitudes and/or adversary blocks must be considered.

3.12.3. Sensor formations. If SA is lost or "Blind" in a sensor formation, call "Blind" with altitude and follow the above procedures. **(T-1)**. Wingmen will strive to maintain an altitude stack at all times in sensor formation. **(T-1)**.

3.13. Chase Formation.

3.13.1. Restrictions. Any pilot may fly safety chase for aircraft under emergency or impending emergency conditions. All chase events may be flown by IP/Flight Examiners

(FEs) or upgrading IPs under the supervision of an IP. Qualified pilots, including Initial Qualification Training (IQT)/Mission Qualification Training (MQT) pilots who have successfully completed an Instrument/Qualification evaluation) may chase as safety observer for aircraft performing simulated instrument flight or hung ordnance patterns. Specialized missions (i.e., OT&E, Weapon System Evaluation Program (WSEP), live weapons delivery, etc) and training conducted IAW AFI 11-2F-16V1, *F-16--Aircrew Training*, may be chased by Combat Mission Ready (CMR)/Basic Mission Capable (BMC) pilots designated by group/squadron commanders.

3.13.2. Procedures.

3.13.2.1. On transition sorties, the chase aircraft will perform a single-ship takeoff. In-flight, the chase aircraft will maneuver as necessary, but must maintain nose-tail separation. The chase will not stack lower than lead aircraft below 1,000 feet AGL. In the traffic pattern, the chase aircraft may maneuver as necessary to observe performance. **(T-1)**.

3.13.2.2. A safety observer in chase will maneuver in a 30-60 degree cone with nose/tail clearance out to a range of 1 NM, from which he can effectively clear and/or provide assistance. **(T-1)**.

3.13.2.3. For live ordnance missions, the chase pilot is responsible for ensuring frag deconfliction is maintained for his aircraft. **(T-1)**.

3.14. Show Formation. Such formations will be specifically briefed and flown IAW applicable directives. Refer to AFI 11-209, *Aerial Event Policy & Procedures*, and applicable MAJCOM or ANG directives for specific rules and appropriate approval levels to participate in static displays and aerial events. **(T-1)**.

3.14.1. AGCAS SHOW mode may be selected only if operating IAW MAJCOM or ANG approved aerial events.

3.15. Low Altitude Operations (reference AFTTP 3-1. F-16 and AFTTP 3-3.F-16).

3.15.1. Airspeed and Altitude. The minimum airspeed for low level navigation is 300 KIAS and the minimum altitude is 1,000 feet AGL (or IAW approved step-down training). For night or IMC operation, the minimum altitude is the MSA (see AFI 11-214) unless operating under NVG LOWAT Procedures. **(T-1)**.

3.15.2. At low altitude, the immediate reaction to task saturation, diverted attention, knock-it-off, or emergencies is to climb to a prebriefed safe altitude (minimum 1,000 feet AGL). **(T-1)**.

3.15.2.1. When a “PULL-UP-PULL-UP” warning sounds, the pilot will take immediate action to ensure terrain clearance, while referencing the primary flight instruments. **(T-1)**.

3.15.2.2. F-16's with pilot-selectable GCAS Minimum Terrain Clearance (MTC) settings will set an altitude that does not result in “PULL-UP” warnings at normal operational altitudes. **(T-1)**. Minimum MTC is 50 feet for strafe and visual bombing, and 25% of LOWAT Category minimum altitude for all other operations. Wings with significant tall trees in the operating area or VR routes will account for average tree height when setting MTC altitudes. **(T-1)**.

3.15.2.3. F-16's equipped with an operational AGCAS will ensure NORM mode is selected prior to LOWAT operations down to 500' AGL to include HAS and LAS events. **(T-1)**. If operations are required below 500' AGL, AGCAS MIN mode may be selected to prevent nuisance fly-ups. **(T-3)**.

3.15.3. Weather. Consult FLIP for minimum weather on a VR or IR route. For low altitude training outside the CONUS, comply with theater/host nation guidance. **(T-1)**.

3.15.3.1. Deteriorating weather on a VR Route.

3.15.3.1.1. Able to maintain VMC. If it becomes apparent that weather ahead will not permit continued flight on the VR, maintain VMC, slow down, maneuver to exit the route structure, and establish a VFR hemispheric altitude. **(T-0)**.

3.15.3.1.2. Unable to maintain VMC. Climb to briefed deconfliction altitudes (reference Chapter 2). Squawk applicable (IFF/SIF) modes and codes and contact a controlling agency to pick up an IFR clearance if required. Maintain preplanned ground track. **(T-1)**.

3.15.4. Obstacle/Terrain Avoidance. If unable to visually acquire or ensure lateral separation from known vertical obstructions which are a factor to the route of flight, flight leads will immediately direct a climb NLT 3 NM prior to the obstacle to an altitude that ensures vertical separation. **(T-1)**.

3.15.5. At altitudes below 1,000 feet AGL, wingmen will not fly at a lower AGL altitude than lead. **(T-1)**.

3.15.6. When crossing high or hilly terrain, maintain positive G on the aircraft and do not exceed 120 degrees of bank. Maneuvering at less than 1 G is limited to upright bunting maneuvers. **(T-1)**.

Section 3D—Recovery and Landing

3.16. Gear Checks. For a VFR straight in, call gear down no later than 3 NM final. For an instrument approach (reference [Chapter 4](#)), call gear down at the final approach fix or published glide slope intercept point. For an overhead, call gear down departing the perch. For a SFO or FO, call gear down at base key. **(T-1)**.

3.17. Angle of Attack (AOA). Final approach will normally be flown at 11 degrees AOA. Pilots will compare the computed final approach airspeed with AOA. **(T-1)**.

3.18. Landing restrictions. When the computed landing roll exceeds 80 percent of the available runway, land at an alternate if possible. When the RCR at the base of intended landing is less than 10, land at an alternate if possible. Do not land over any raised web barrier (e.g., MA-1A, 61QS11). **(T-1)**.

3.19. Desired touchdown point and spacing.

3.19.1. The desired touchdown point is 500 feet from the aim point. The aim point for a VFR approach is the threshold. The aim point for a precision approach is the glide path interception point. To avoid possible speedbrake or nozzle damage, touch down either past a raised approach-end cable, or 500 feet prior to the cable. With centerline stores, touchdown will normally be past an approach-end cable. Circumstances that may dictate landing prior to

the cable include runway length, wind, runway condition (wet or icy), gross weight or an aircraft malfunction where full normal braking may not be available. Single-ship or formation landings with centerline stores may be made across BAK-12 arrestment cables which have been modified with an 8-point-tie-down system. **(T-1)**.

3.19.2. Touchdown spacing behind an aircraft while flying a 13 degree approach will be a minimum of 6,000 feet due to susceptibility of the aircraft to wake turbulence and speedbrake/tail scrapes. Minimum pattern and touchdown spacing between landing aircraft is 3,000 feet for similar aircraft (e.g., F-16 following F-16), 6,000 feet for dissimilar fighter aircraft (e.g., F-16 following F-15) or as directed by MAJCOM or the landing base, whichever is higher. **(T-1)**.

3.19.2.1. When wake turbulence is expected due to calm winds or when landing with a light tail wind, spacing will be increased to 6,000 feet minimum. **(T-1)**. Under these conditions, moderate to severe wake turbulence has been reported out to 7,000 foot touchdown spacing.

3.19.3. All aircraft will land in the center of the runway and clear to the cold side when speed/conditions permit. **(T-1)**.

3.20. Low Approaches.

3.20.1. Observe the following minimum altitudes: **(T-1)**.

3.20.1.1. IP/FEs flying chase position: 50 feet AGL.

3.20.1.2. Formation low approaches: 100 feet AGL.

3.20.1.3. Chase aircraft during an emergency: 300 feet AGL unless safety or circumstances dictate otherwise.

3.20.2. During go-around, remain 500 feet below VFR overhead traffic pattern altitude until crossing the departure end of the runway unless local procedures, missed approach/climbout procedures or controller instructions dictate otherwise.

3.21. Touch-and-Go Landings. Fly touch-and-go landings IAW AFI 11-202V3. Do not fly them with live or hung external ordnance or with fuel remaining in any external tank. **(T-1)**.

3.22. Overhead Traffic Patterns. Unless the OG/CC determines that local conditions (e.g., threat condition, populated areas) dictate otherwise, do not fly overhead patterns with unexpended heavy-weight ordnance (larger than BDU-33). **(T-3)**.

3.23. Tactical Overhead Traffic Patterns. Tactical entry to the overhead traffic pattern is permitted if the following conditions are met:

3.23.1. Published overhead pattern altitude and airspeed are used.

3.23.2. Specific procedures have been developed locally and coordinated with appropriate air traffic control agencies.

3.23.3. The flight consists of a maximum of four aircraft (aircraft/elements more than 6,000 feet in trail will be considered a separate flight).

3.23.4. No aircraft offset from the runway in the direction of the break (the intent is to avoid requiring a tighter than normal turn to arrive on normal downwind).

3.23.5. Normal downwind, base turn positions, and spacing are flown.

3.24. Closed Traffic Patterns. Initiate the pattern at the departure end of the runway unless directed/cleared otherwise by local procedures or the controlling agency. An element low approach may be followed by a sequential closed with controller approval. Plan to arrive on downwind at 200-250 KIAS.

3.25. Back Seat Approaches and Landings.

3.25.1. An upgrading IP may only accomplish back seat landings when an IP is in the front cockpit. **(T-1).**

3.25.2. During back seat approaches and landings, the front seat pilot will visually clear the area, monitor aircraft parameters/configurations and be prepared to direct a go-around or take control of the aircraft (as briefed by the rear cockpit IP) if necessary. **(T-1).**

3.26. Formation Approaches and Landings.

3.26.1. Aircraft must be symmetrically loaded. **(T-1).** Consider symmetrical as those stores loadings which do not require an abnormal trim or control application to counter a heavy wing or yaw during takeoff and acceleration to climb airspeed.

3.26.2. Elements will be led by a qualified flight lead unless an IP or flight lead qualified squadron supervisor is in the element. **(T-1).**

3.26.3. Use a rate of descent similar to a precision approach. Fly a published precision instrument approach if one is available. If not, fly a non-precision approach or VFR straight in and reference available lighting systems (e.g., VASI, PAPI) for descent angle. **(T-1).**

3.26.4. If the crosswind exceeds 5 knots, lead will position the wingman on the upwind side. **(T-1).**

3.26.5. The wingman will maintain a minimum of 10 feet lateral wingtip spacing. If the wingman overruns lead after landing, accept the overrun and maintain the appropriate side of the runway and wingtip clearance. Do not attempt to reposition behind lead. **(T-1).**

3.26.6. Do not make formation landings when: **(T-1).**

3.26.6.1. The crosswind or gust component exceeds 15 knots.

3.26.6.2. The runway is wet or reported wet.

3.26.6.3. There is ice, slush, or snow on the runway.

3.26.6.4. The runway width is less than 125 feet.

3.26.6.5. Arresting gear tape connectors extend onto the runway surface at the approach end of 125 foot wide runways (excluding overrun installations).

3.26.6.6. Landing with hung ordnance or unexpended live bombs.

3.26.6.7. The weather is less than 500 foot ceiling and 1.5 miles visibility (or a flight member's weather category, whichever is higher). This applies to chased approaches and formation low approaches.

Section 3E—Night (see also night of Chapter 2, Chapter 5 and Chapter 6)

3.27. General Night Procedures.

3.27.1. Night Ground Operations. The anti-collision (strobe) light may be OFF and the position lights STEADY if they prove to be a distraction. Taxi spacing will be a minimum of 300 feet and on the taxiway centerline. **(T-1)**. The taxi light will normally be used during all night taxiing. **Exception:** When the light might interfere with the vision of the pilot of an aircraft landing or taking off, the taxiing aircraft will come to a stop if the area cannot be visually cleared without the taxi light.

3.27.2. Night Takeoff. Aircraft will maintain the anti-collision light ON and position lights FLASH for takeoffs, unless IMC will be encountered shortly after takeoff. **(T-3)**. **Exception:** For formation takeoffs, flight/element leads will turn the anti-collision light OFF and position lights STEADY after reaching the run-up position on the runway. During a night formation takeoff, brake release, gear retraction and AB termination will be called on the radio. **(T-1)**. Following takeoff, each aircraft/element will climb on runway heading to 1,000 feet AGL before initiating turns, except where departure instructions specifically preclude compliance. **(T-3)**.

3.27.3. Night Join-up. Weather criteria for night join-up underneath a ceiling is 3,000 foot ceiling and 5 miles visibility. **(T-1)**. After join-up, the anti-collision light will be OFF and position lights will be STEADY for all except the last aircraft, which will keep the anti-collision light ON and position lights FLASH unless otherwise directed by the flight lead. **(T-3)**.

3.27.4. Position/Lead Changes. Unless operating with NVGs, do not change lead or wing positions below 1,500 feet AGL unless on radar downwind. Call such changes over the radio and initiate them from a stabilized, wings-level attitude whenever possible. **(T-1)**.

3.27.5. Night Break-up. Prior to a night formation break-up, the flight lead will confirm position and transmit attitude, altitude, airspeed, and altimeter setting. Wingmen will acknowledge and confirm good navigational aids. **(T-1)**.

3.27.6. Night Landing. Land from the most precise approach available. Night formation landings will only be performed when required for safe recovery of the aircraft. **(T-1)**.

3.28. Night Vision Goggles (NVG) Procedures.

3.28.1. NVG Preflight. NVGs must be preflight tested and adjusted/focused for the individual pilot using (in order of preference) the Hoffman ANV-20/20 Tester, a unit eye lane, or equivalent. **(T-1)**. Reference AFI 11-301V1, *Aircrew Flight Equipment (AFE) Program*.

3.28.2. Cockpit Lighting. Fly with NVGs only in aircraft whose cockpit lighting MAJCOM designates as NVG compatible. **(T-2)**. MAJCOMs will only make such a designation if all control and performance instruments are sufficiently illuminated by the NVG-compatible lighting so as to make them immediately available to the pilot in the event they need to transition to instruments. **(T-1)**.

3.28.3. Weather/Visibility/Illumination Levels/Minimum Altitudes/Discernable Horizon. Reference AFI 11-214, AFTTP 3-3.F-16, and AFI 11-202V3. All pilots conducting NVG

operations that include air-to-air/surface-to-air threat reactions or air-to-ground dynamic/diving deliveries will conduct a “30-Up and 30-Down” horizon orientation maneuver before conducting tactical maneuvering. **(T-1)**. This maneuver will be accomplished in VMC, above the MSA and should be completed after the G-awareness exercise. The purpose is to evaluate horizon conditions and practice an NVG horizon orientation and crosscheck. If airspace precludes the maneuver, pilots operating on NVGs will limit maneuvers to AFI11-214 “Restricted Maneuvering” guidelines. **(T-1)**. Pilots will adhere to the following guidelines when conducting the 30-Up and 30-Down maneuver: **(T-1)**.

3.28.3.1. In VMC conditions (with a discernible horizon), and with sufficient altitude (~3,000-5,000 feet) in approved operating airspace, accelerate to 350 KIAS minimum. Maintain a minimum spacing of 6000 feet between aircraft throughout the maneuver. The flight lead will announce, “Standby 30-UP, 30-Down” and will communicate a reference heading prior to execution for flight deconfliction. Flight members will verify correct spacing, heading, and entry parameters and will communicate “stand by” if not ready.

3.28.3.2. Flight leads will command “30 Up,” and all pilots will execute a military power, 3-4 G wings-level pull up to place the bore cross on the 30 degree pitch ladder. Pilots will evaluate and orient themselves with the horizon in the forward quadrants, both above and below the horizon while maintaining intra-flight deconfliction contracts. Take note of the physical cranial movement required to move the NVG field of regard back to the horizon, as well as the condition of the horizon due to ambient factors. If at any time the airspeed drops below 250 KIAS, weather is encountered, or symptoms of spatial disorientation are recognized, the pilot will immediately transition to primary flight instruments, call a “knock it off (with reason),” and conduct an IMC nose-high recovery.

3.28.3.3. After approximately 5 seconds, or sooner if airspace or altitude restrictions require, the flight lead will command “roll left (or right), 30 down”. All aircraft will roll inverted and accomplish the military power, 3-4 G wings-level pull to place the bore cross at the 30 degree nose-low, then roll upright on the reference heading. Once intra-flight deconfliction is assured, repeat the horizon crosscheck and visibility assessment while maintaining the 30 degree-nose low attitude.

3.28.3.4. If during any portion of the maneuver a flight member determines that the visibility or horizon reference is unsuitable for tactical maneuvering per AFI-11-214 guidance, the flight lead will modify the training profile and either transition to non-NVG formations or NVG formation tactics limited to AFI11-214 “Restricted Maneuvering” guidelines. Continually modify profiles or airspace utilization throughout the sortie if conditions change and no longer permit the planned maneuvering. Flight training modification includes: restricted maneuvering limitations (with or without NVGs) per AFI-11-214, a non-NVG formation IMC game plan, or accomplishing a briefed alternate mission without NVGs.

3.28.3.5. Pilots will continually cross-check visually perceived attitude aided by NVGs with frequent cross-checks of primary flight instruments throughout the mission.

3.28.4. NVG Qualifications. Do not wear NVGs in flight unless the pilot is NVG qualified or there is a qualified NVG IP in the flight (ratio of one NVG IP per non-NVG qualified

pilot). **(T-1)**. F-16B/D Familiarization flights are authorized if appropriate academics are accomplished and an NVG IP is in the front seat. **(T-1)**.

3.28.5. Radio Calls. All flight members will make a radio call when donning, raising, or stowing NVGs. **(T-1)**.

3.28.6. Obstacle/Intra-Flight Deconfliction. When flying in route, only one flight member per element will don/raise/stow NVGs at a time. Flight leads will call turns if forced to maneuver while flight members are donning/raising/stowing NVGs. **(T-1)**.

3.28.7. Takeoffs/Landings. NVGs will be stowed or raised during takeoff until at or above 2,000 feet AGL in climbing or level flight and only in VMC. Stow or raise NVGs no later than 5 minutes prior to landing unless NVGs are required to handle an emergency or mission requirements dictate. **(T-1)**.

3.28.8. NVG Use during Air to Air Refueling (AAR). Stow or raise NVGs no later than the stern position and resume NVG use no earlier than boom disconnect. **(T-1)**.

Section 3F—Other

3.29. Targeting Pod Operations. Do not use the TGP for anything other than navigational SA below 1,000 feet AGL (e.g., Only VID aircraft, designate for weapons delivery, etc. above 1,000 feet AGL). **(T-1)**. (USAFWC, Test, and AATC: Minimum altitudes for TGP operations are established in WIC or test syllabus requirements, continuation training plans or operational test and evaluation requirements).

3.30. Radio Procedures. Preface all communications with the complete flight call sign (except for wingman acknowledgment). Transmit only that information essential for mission accomplishment or safety of flight. **(T-1)**.

3.30.1. Radio Checks. Acknowledge radio checks, which do not require the transmission of specific data by individual flight members, in turn (EXAMPLE: "2, 3, 4"). Acknowledgment indicates the appropriate action is either complete, is in the process of being completed or is understood by the flight member. **(T-1)**.

3.30.2. Clearance Acknowledgement. All flight members will acknowledge understanding the initial air traffic control (ATC) clearance. If flight members are not monitoring in-flight ATC frequency, the flight lead will pass all ATC instructions to the flight. Flight members will acknowledge subsequent ATC instructions when directed by the flight lead. **(T-1)**.

3.30.3. Brevity code and other terminology will be IAW AFI 11-214 and AFTTP 3-1. General Planning, *General Planning and Employment Considerations*. **(T-1)**.

3.30.4. Ops Checks.

3.30.4.1. Monitor the fuel system carefully to identify low fuel, trapped fuel or an out of balance situation as soon as possible. Frequency should be increased during tactical maneuvering at high power settings. Ops checks are required: **(T-1)**.

3.30.4.1.1. During climb or at level-off after takeoff.

3.30.4.1.2. When external fuel tanks (if carried) are empty.

3.30.4.1.3. Prior to each (D)ACBT engagement or intercept.

3.30.4.1.4. Prior to entering an air-to-surface range, once while on the range if multiple passes are made and after departing the range.

3.30.4.2. Minimum items to check are engine instruments, total and internal fuel quantities/balance, G-suit connection, oxygen system and cabin altitude. If the G-suit malfunctions or becomes disconnected, terminate all ACBT maneuvering until normal operation is reestablished. **(T-1)**.

3.30.4.3. For formation flights, the flight lead will initiate ops checks by radio call or visual signal. Response will be made by radio call or visual signal. **(T-1)**.

3.30.4.3.1. During Ops checks, ensure the fuel quantity selector knob is returned to the NORM position. **(T-1)**. Totalizer-only Ops checks may be used periodically during high demand phases of flight.

3.30.4.3.2. For mandatory ops checks when external tanks are carried, each flight member will check the external tank(s) and add "Tank(s) feeding/dry" to the Ops Check. **(T-1)**. Once the tank(s) have been confirmed and called dry, this may be omitted from subsequent ops checks.

3.30.4.3.3. Do not substitute data-linked fuel status for operations checks. **(T-1)**.

3.31. Lap Belts. Use extreme caution when disconnecting the lap belt in flight due to potential for lap belt buckle/side-stick controller/throttle interference.

3.32. Change of Aircraft Control. Both pilots of an F-16B/D must know at all times who has control of the aircraft. Transfer of aircraft control will be made with the statement "You have the aircraft." The pilot receiving control of the aircraft will acknowledge "I have the aircraft." Once assuming control of the aircraft, maintain control until relinquishing it as stated above. **(T-1)**. **Exception:** If the intercom fails, the pilot in the front cockpit (if not in control of the aircraft) will rock the wings and assume control of the aircraft, radios and navigational equipment unless briefed otherwise. **(T-3)**.

3.33. Fuel Requirements. (T-1).

3.33.1. Joker Fuel. A briefed fuel quantity needed to terminate an event and proceed with the remainder of the mission.

3.33.2. Bingo Fuel. A briefed fuel state which allows the aircraft to return to the base of intended landing or alternate, if required, using preplanned recovery parameters and arriving with normal recovery fuel as listed below:

3.33.3. Normal Recovery Fuel. The fuel quantity on initial or at the FAF at the base of intended landing or alternate, if required. This fuel quantity will be the higher of what is established locally or:

3.33.3.1. All F-16 Blocks 10 through 32 - 1,000 pounds.

3.33.3.2. All F-16 Blocks 40 and higher - 1,200 pounds.

3.33.4. Minimum/Emergency Fuel. Declare the following when it becomes apparent that an aircraft will enter initial or start an instrument final approach at the base of intended landing or alternate, if required, with:

3.33.4.1. Minimum Fuel:

3.33.4.1.1. All F-16 Blocks 10 through 32 - 800 pounds or less.

3.33.4.1.2. All F-16 Blocks 40 and higher - 1,000 pounds or less.

3.33.4.2. Emergency Fuel:

3.33.4.2.1. All F-16 Blocks 10 through 32 - 600 pounds or less.

3.33.4.2.2. All F-16 Blocks 40 and higher - 800 pounds or less.

3.33.5. Afterburner Use. Do not use AB below 2,000 pounds total fuel or established bingo fuel, whichever is higher, unless required for safety of flight.

3.34. Radar Altimeters and Terrain Warning/Avoidance Systems.

3.34.1. If the aircraft is equipped with such systems (CARA, DTS, PGCAS, AGCAS, etc.), turn them on for all flights. Set LIS altitude advisory as appropriate on all missions. PGCAS will be enabled with a minimum altitude setting of 200 feet for day operations and 700 feet for night operations. AGCAS mode (NORM/MIN/SHOW) will be set per mission requirements and confirmed mode selected. AGCAS should only be turned off if a known system malfunction affecting safety of flight requires system deactivation. Pilots will ensure that the appropriate values are set prior to takeoff. For low altitude operations GCAS settings, reference 3.15.2.2 this publication. **(T-1)**.

3.35. ALOW Setting. Set the ALOW function of the radar altimeter at the briefed minimum altitude, the command-directed minimum altitude, or as briefed, whichever is highest. **(T-1)**.

3.36. Wind and Sea State Restrictions. Do not conduct training missions when surface winds along the intended route of flight exceed 35 knots steady state. Do not conduct over water training missions when surface winds exceed 25 knots steady state or when the sea state exceeds 10 feet (or 4 meters-USAFA). **(T-1)**. This is not intended to restrict operations when only a small portion of the route is affected. **(T-3)**. The OG/CC or equivalent is the waiver authority.

3.37. Airborne Interrogator Friend Foe (AIFF) Operation. (T-1).

3.37.1. To reduce the potential for adverse effects on Combat Identification, Air Traffic Control, and Traffic Collision Avoidance systems, pilots will limit interrogations to the minimum required for the mission.

3.37.2. For AIFF operations within the United States and its Possessions (US&P), pilots will comply with the equipment and operational restrictions as specified in the applicable Radio Frequency Authorizations (RFA's) which can be obtained from the unit spectrum management office.

Chapter 4

INSTRUMENT PROCEDURES

4.1. General.

4.1.1. Head-Up Display (HUD) Use. Regardless of Block, do not use the HUD to recover from an unusual attitude or while executing lost wingman procedures except when no other reference is available. The HUD in F-16 Block 25/30/32 aircraft and Block 40/42/50/52 aircraft has been certified as a primary flight instrument and may be used as a primary flight reference in night/IMC conditions. The HUD in all other F-16 Blocks may be used as an additional instrument reference only. No F-16 Block may use the HUD as the sole reference in night/IMC conditions. **(T-1)**.

4.1.2. INS/GPS or EGI Use. The F-16 INS/GPS and EGI are approved for enroute Area Navigation (RNAV). Neither RNAV nor GPS approaches are authorized.

4.1.3. Simulated Instrument Flight. Simulated instrument flight requires a qualified safety observer in the aircraft or in a chase aircraft. The observer may occupy either seat of the F-16B/D provided the intercom is operable. Use the radar to aid in clearing the area. Pilots in F-16A/C aircraft may not log simulated instrument flight without a chase. They may fly multiple approaches in VMC without a chase, but will place their primary emphasis on seeing and avoiding other aircraft. Chase aircraft may move into close formation on final for a formation landing provided simulated instrument flight is terminated. **(T-1)**.

4.2. Takeoff and Initial Join-up.

4.2.1. If weather is below 1,500 foot ceiling and 3 miles (5 km), each aircraft and element will climb on takeoff heading to 1,000 feet AGL before initiating any turns, except when departure instructions specifically preclude compliance. **(T-1)**.

4.3. Trail Procedures.

4.3.1. General. During trail formations, basic instrument flying is the first priority and will not be sacrificed when performing secondary trail tasks. Strictly adhere to the briefed airspeeds, power settings, altitudes, headings and turn points. If task saturation occurs, cease attempts to maintain radar contact, immediately concentrate on flying the instrument procedure, then notify the flight lead. The flight lead will notify ATC. **(T-1)**.

4.3.1.1. Flight leaders will request non-standard formation from ATC. **(T-1)**.

4.3.1.2. ATC instructions issued to the lead aircraft apply to the entire flight.

4.3.1.3. Normal spacing is 2-3 NM.

4.3.1.4. Each aircraft and element will follow the No Radar/Sensor Contact procedures until the aircraft or element immediately in trail has radar/sensor contact and called "tied." **(T-1)**.

4.3.2. No Radar/Sensor Contact. **(T-1)**.

4.3.2.1. The flight leader will call initiating all turns. Subsequent aircraft must delay turns to maintain the desired spacing.

4.3.2.2. Each aircraft and element will maintain 20 seconds or 2-3 NM spacing using all available aircraft systems and navigational aids to monitor position.

4.3.2.3. During climbs and descents, each aircraft or element will call passing each 5,000 foot altitude increment with altitude and heading (or heading passing) until join-up, level-off, or the following aircraft or element calls "tied."

4.3.2.4. Each aircraft and element will call initiating any altitude or heading change. Acknowledgments are not required; however, it is imperative that preceding aircraft or elements monitor the radio transmissions and progress of the succeeding aircraft and elements, and immediately correct deviations from the planned route.

4.3.2.5. Each aircraft and element will maintain at least 1,000 feet vertical separation from the preceding aircraft or element until establishing radar or visual contact, except in instances where departure instructions specifically preclude compliance. Reduce vertical separation to 500 feet if necessary to comply with MSA restrictions.

4.3.2.6. In the event a visual join-up cannot be accomplished on top or at level-off, the flight leader will request altitude separation for each succeeding aircraft or element to meet the requirements of the above paragraph.

4.3.3. Radar Contact. **(T-1)**.

4.3.3.1. Each aircraft and element will call "tied" when radar contact is established with the preceding aircraft. Once all aircraft are tied, no further radio calls are required, except to acknowledge ATC instructions, unless radar contact is lost.

4.3.3.2. In flights of three or more aircraft, use all available aircraft systems (i.e., radar, TACAN, AAI, etc.) to ensure that trail is maintained on the correct aircraft.

4.3.4. Trail Departures. **(T-1)**.

4.3.4.1. Use a minimum of 20 seconds takeoff spacing.

4.3.4.2. Each aircraft/element will accelerate in MIL or AB power until reaching 350 KIAS (or as required by local procedures). Upon reaching this speed, the flight leader will set a pre-briefed power setting. Climb at 350 KIAS until reaching cruise Mach/TAS, unless otherwise briefed.

4.3.4.3. Make all turns using 30 degrees of bank.

4.3.5. En Route Trail. Flight leads must brief airspeeds, power settings, and configurations. **(T-1)**.

4.3.6. Trail Recovery. **(T-1)**.

4.3.6.1. Trail recoveries are only authorized at locations where procedures have been established. Appropriate ATC agencies must approve and local operating procedures must address trail recovery procedures. As a minimum, procedures must address each recovery profile, missed approach, climb-out, desired and maximum spacing requirements, lost contact and lost communications.

4.3.6.2. Limit trail recovery to a maximum of four aircraft.

4.3.6.3. Trail recoveries are authorized when weather at the base of intended landing is at or above the highest pilot weather category in the flight or approach minimums, whichever is higher.

4.3.6.4. The flight lead must brief the flight on spacing, configuration and airspeeds.

4.3.6.5. The flight lead must coordinate the trail recovery with ATC prior to taking spacing.

4.3.6.6. Prior to wingmen taking spacing for the trail recovery, the flight lead will ensure that all wingmen have operative navigational aids and radar.

4.3.6.7. Accomplish flight separation IAW local directives and in VMC if possible.

4.3.6.8. The formation must squawk as directed by ATC.

4.3.6.9. ATC will provide radar flight following for the entire formation.

4.3.6.10. Limit all turns to a maximum of 30 degrees of bank.

4.3.6.11. Once established on a segment of a published approach, each aircraft must comply with all published altitudes and restrictions while maintaining in-trail separation.

4.3.6.12. Unless local procedures establish defined reference points for airspeed and configuration changes, the flight lead must direct changes by radio. At flight lead's call all aircraft must simultaneously comply with the directed change.

4.3.6.13. All aircraft must report the final approach fix.

4.3.6.14. If contact is lost with the preceding aircraft, the pilot will transmit "Callsign (C/S) lost contact." The preceding aircraft will respond with altitude, airspeed and heading. Establish altitude deconfliction and coordinate a separate clearance with ATC. If contact is lost while established on a segment of a published approach, flight members may continue the approach, but must confirm separation via navigation aids. If separation cannot be confirmed, execute missed approach or climb-out as instructed by ATC.

4.3.6.15. Flight leads will coordinate with local ATC prior to penetration if the trail recovery will terminate in a Precision Approach Radar (PAR) or Airport Surveillance Radar (ASR) approach.

4.4. Formation Break-up. Formation break-up from a visual formation will occur in VMC. If IMC is unavoidable, breakup from a visual formation will occur in straight and level flight. This restriction does not apply to trail formation. Prior to an IMC break-up, the flight lead will confirm position and transmit attitude, altitude, airspeed, and altimeter setting. Wingmen will acknowledge and confirm good navigational aids (reception of appropriate TACAN, ILS and/or appropriate GPS/INS waypoint). **(T-1)**.

4.5. Formation Penetration. (T-1).

4.5.1. Restrict formation penetrations in route or close formation to two aircraft when the weather at the base of intended landing is less than overhead traffic pattern minimums.

4.5.2. If a formation landing is intended, position the wingman on the appropriate wing prior to weather penetration.

4.5.3. Formation penetrations using radar trail procedures are authorized when weather at the base of intended landing is at or above the highest pilot weather category in the flight or approach minimums, whichever is higher.

4.6. Formation Approach. During IMC formation flights, do not change lead or wing positions below 1,500 feet AGL unless on radar downwind or if required during a formation approach with an F-16 experiencing an Emergency. **(T-1).**

4.7. Instrument Approach Procedures. (T-1).

4.7.1. Pilots will not fly any published instrument procedure (e.g. DoD, Jeppesen, ICAO) that requires airspeeds less than those specified in T.O. 1F-16x-1.

4.7.2. The F-16 is Approach Category E. If no Category E minimums are published, Category D minimums can be used, provided:

4.7.2.1. A straight-in approach is flown.

4.7.2.2. For the final approach segment, the aircraft is flown at 165 KIAS or less.

4.7.2.3. For the missed approach segment, the aircraft is flown at 260 knots true airspeed (KTAS) or less. At high density altitudes 260 KTAS may require a KIAS below the speed specified in T.O. 1F-16x-1 and Category D approaches shall not be flown.

Chapter 5

AIR-TO-AIR WEAPONS EMPLOYMENT

5.1. General. Reference AFI 11-214 for procedures and restrictions. In addition, F-16 pilots shall comply with the requirements of this chapter. **(T-1).**

5.2. Simulated Gun Employment. (T-1).

5.2.1. Never perform simulated gun employment with a hot gun (one that is not safe IAW T.O. 1F-16x-34-1-1). Never perform a trigger check with a hot gun, regardless of Master Arm switch position.

5.2.2. Prior to flight, confirm the status of the gun system. Prior to simulated gun employment, perform a trigger check with the Master Arm switch in SIMULATE and the aircraft pointed away from other aircraft and populated areas. If HUD symbology reads "ARM" or SMS/MFD symbology reads "RDY," do not squeeze the trigger or continue with simulated weapons employment.

5.3. Maneuvering Limitations. (T-1).

5.3.1. Negative "G" guns jink maneuvers are prohibited.

5.3.2. Minimum airspeed during low altitude offensive or defensive maneuvering is 350 KIAS.

5.3.3. All configurations are authorized for unlimited maneuvering as defined by AFI 11-214. Before conducting unlimited maneuvering in a CAT III configured aircraft, consider gross weight, drag, departure susceptibility and training requirements.

Chapter 6

AIR-TO-SURFACE WEAPONS EMPLOYMENT

Section 6A—General

6.1. General. Reference AFI 11-214 for procedures and restrictions. In addition, F-16 pilots shall comply with the requirements of this chapter. **(T-1).**

6.2. Simulated Gun Employment. (T-1).

6.2.1. Never perform a trigger check with a hot gun, regardless of Master Arm switch position.

6.2.2. Never perform simulated gun employment (squeezing the trigger with the Master Arm switch in SIM) with a hot gun (one that is not safe IAW T.O. 1F-16x-34-1-1). This restriction does not apply on a controlled range against targets approved for gun employment with ammunition loaded.

6.2.3. Prior to flight, confirm the status of the gun system. Prior to simulated gun employment, perform a trigger check with the Master Arm switch in SIMULATE and the aircraft pointed away from other aircraft and populated areas. If HUD symbology reads “ARM” or SMS/MFD symbology reads “RDY,” do not squeeze the trigger or continue with simulated weapons employment.

6.3. Training Missions with a Hot Gun. (T-1).

6.3.1. Pilots will not select strafe submode until immediately prior to roll in and will deselect strafe submode immediately after completing the safe escape maneuver.

6.3.2. When firing the laser, ensure you are not in a mode that will allow the gun to fire.

6.3.3. AGCAS will not be disabled for strafe operations. **(T-3).** During LAS an automated recovery may occur near 2000’ slant range; therefore cease fire prior to 2000’ slant range or rounds may be employed well long of the target during automated pull-up.

6.4. Simulated Attacks against off-Range or Manned Targets. Do not conduct such attacks with hung ordnance. Do not conduct them with live ordnance, except for 20 mm ammunition in a gun safed IAW T.O. 1F-16x-34-1-1. When the aircraft is loaded with expendable stores (e.g. bombs, external fuel tanks, TERs carted at the pylon), load simulated weapons (zero quantity) in the SMS/MFD only on empty or uncartered/unexpendable stations (**Exception:** Captive Maverick and HARM missiles may be selected). Confirm the Master Arm switch is in OFF or SIMULATE prior to the first attack. Flight lead will query and flight members will reply to a “*check zero quantity, uncartered station*” radio call. **(T-1).**

6.5. Weather. In training, do not conduct climbing or diving deliveries with a ceiling below 2,000 feet AGL or level deliveries with a ceiling below 1,500 feet AGL. **(T-1).**

6.6. Pop-Up Attacks. Abort pop-up attacks if airspeed decreases below 350 KIAS (300 KIAS above 10,000 feet AGL). **(T-1).**

6.7. Target Identification. Pilots shall positively identify the target prior to weapons release. For wartime or contingency sorties, comply with ROE. For training sorties, achieve positive

identification by either visually acquiring the target or by confirming target location through valid on-board/off-board cues. Cues may include, but are not limited to, radar, GPS, marking rounds, TGP or IR Maverick lock on, IR pointers or NVG-compatible marking devices. Exercise caution when relying on a single cue to confirm target location. **(T-1)**.

6.8. Safety of Ground Personnel. When ground controllers are present on Class B/C ranges, range personnel will brief pilots on locations of these personnel and each pilot will acknowledge. Pilots must know applicable range weapons delivery procedures, appropriate targets and weapons footprints. Pilots shall not expend ordnance if any doubt exists as to the ground personnel or intended target locations. **(T-1)**.

Section 6B—Night

6.9. Altitude. Compute an MSA for the entire bombing pattern using the guidance in AFI 11-214. The minimum altitude for night High Angle Strafe (HAS) is the Target MSA (as defined in Attachment 1) unless executed by an “NVG-LOWAT” or “NVG High Angle Strafe Low Altitude” qualified pilot (as defined in AFI 11-2F-16 V1) under high-illumination conditions (as defined in AFI 11-214). For HAS, pilots will review and confirm parameters prior to roll-in. **(T-1)**.

6.10. Bank Angle. Do not exceed 135 degrees of bank when returning to the low altitude structure (<5K AGL). **(T-1)**.

Chapter 7

ABNORMAL OPERATING PROCEDURES

7.1. General. Follow the procedures in this chapter when other than normal circumstances occur. These procedures do not supersede procedures contained in the flight manual. **(T-1).**

7.1.1. Do not accept an aircraft for flight with a malfunction which is addressed in the emergency/abnormal procedures section of the flight manual until appropriate corrective actions have been accomplished.

7.1.2. Do not fly an aircraft with a tripped engine monitoring system (EMS) Go-No-Go indicator (Bit Ball) until maintenance has accomplished the appropriate procedures and cleared the fault.

7.1.3. Do not taxi with a known malfunction of the nose-wheel steering system, the brake system, or a generator [**Note:** F-16C/D aircraft may be taxied with a single generator failure (main or standby) if the other generator is operating normally].

7.1.4. Once a malfunctioning aircraft system is isolated, do not use that system again unless its use in a degraded mode is essential for recovery. Do not conduct ground or in-flight trouble-shooting after flight manual emergency procedures are complete.

7.1.5. In the F-16B/D, the pilot in command is primarily responsible for handling in-flight emergencies. The additional pilot will confirm that all critical action procedures have been accomplished and will provide checklist assistance at the request of the pilot in command.

7.1.6. For actual/perceived flight control malfunctions, pilots will terminate maneuvering and take appropriate action. If the problem was due to crew/passenger stick or rudder interference, the pilot will take positive action to ensure no further control interference occurs.

7.1.7. When a fuel imbalance exceeds dash one limits, terminate tactical maneuvering and investigate. If the problem was caused by a slow feeding external or internal fuel tank and can be corrected, the mission may continue IAW TO 1F-16A/C-1. If not, terminate the mission. Instruments, deployment missions, level weapons deliveries and straight-through-non-maneuvering intercepts are authorized to reduce gross weight until a safe landing is possible.

7.2. Critical Action Procedures (CAPs). CAPs are in [Attachment 4](#).

7.3. Ground Aborts. (T-1).

7.3.1. If a flight member aborts prior to takeoff, the flight lead will normally renumber the flight to maintain a numerical call sign sequence. Flight leads will advise the appropriate agencies of such changes.

7.3.2. Pilots who do not takeoff with the flight may join the flight in accordance with the brief or flight lead instructions. If a join-up is to be accomplished on an air-to-ground range, all events will be terminated until the joining aircraft has achieved proper spacing.

7.4. Takeoff Aborts. (T-1).

7.4.1. If an abort occurs during takeoff roll, say call sign and intentions when practical. Following aircraft will alter takeoff roll to ensure clearance or abort takeoff if adequate clearance cannot be maintained. The phrase "Cable, Cable, Cable" will be used to indicate a departure-end cable arrestment. The phrase "Barrier, Barrier, Barrier" will be used to indicate a departure-end net arrestment. Local procedures will address net barrier raising procedures.

7.4.2. When aborting above 120 KIAS, or whenever hot brakes are suspected, declare a ground emergency. Taxi the aircraft to the designated hot brake area and follow hot brake procedures.

7.4.3. If aborting at or above 100 KIAS, lower the hook. If aborting below 100 KIAS, lower the hook if there is any doubt about the ability to stop on the remaining runway.

7.5. Air Aborts. (T-1).

7.5.1. If an abort occurs after takeoff, all aircraft will maintain their original numerical call sign.

7.5.2. Escort aborting aircraft with an emergency condition to the field of intended landing. When other than an emergency condition exists, the flight lead will determine if an escort for the aborting aircraft is required.

7.5.3. Abort the mission, regardless of apparent damage or subsequent normal operation, for any of the following:

7.5.3.1. Bird strike

7.5.3.2. Actual or suspected foreign object damage.

7.5.3.3. Recovery below FRAG altitude with live ordnance.

7.5.3.4. Moderate to severe icing.

7.5.3.5. Over-G (**Note:** Land as soon as practical out of a straight-in approach).

7.5.3.6. Flight control system anomalies, including uncommanded departures from controlled flight (**Exception:** intentional departures from controlled flight conducted IAW a MAJCOM-approved syllabus), but not including flight control system lights that reset IAW flight manual procedures.

7.5.3.7. Engine flameout/stagnation or shutdown.

7.5.3.8. Lightning strike.

7.6. Radio Failure (NORDO). Reference AFI 11-205 and the Flight Information Handbook.**7.6.1. NORDO in Formation. (T-1).**

7.6.1.1. A pilot who experiences total radio failure while in close or route formation will maneuver within close/route parameters to attract the attention of another flight member and give the appropriate visual signals. The mission should be terminated as soon as practical and the NORDO aircraft led to the base of intended landing or a divert base. A formation approach to a drop-off on final should be performed unless safety considerations dictate otherwise.

7.6.1.2. If flying other than close/route formation when radio failure occurs, the NORDO aircraft should attempt to rejoin to a route position at approximately 500 feet on another flight member. The NORDO aircraft is responsible for maintaining clearances from other flight members until his presence is acknowledged by a wingrock, signifying clearance to join. Once joined, the NORDO aircraft will give the appropriate visual signals. If pre-briefed, the NORDO aircraft may proceed to a rendezvous point and hold. If no one has rejoined prior to reaching bingo fuel, the NORDO aircraft should proceed to the base of intended landing or a divert base. Aircraft experiencing any difficulty/emergency in addition to NORDO will proceed as required by the situation.

7.6.2. NORDO on a Class A Range or a Manned Class B Range.

7.6.2.1. Attempt contact with the RCO on the appropriate back-up frequency or back up radio.

7.6.2.2. If contact cannot be reestablished, make a pass by the range control tower on the attack heading while rocking wings and turn in the direction of traffic. The flight lead will direct another flight member to escort the NORDO aircraft to a recovery base or rejoin the flight and RTB.

7.6.2.3. If the NORDO aircraft has an emergency, make a pass by the range control tower, if practical, on the attack heading while rocking wings, turn opposite the direction of traffic, and proceed to a recovery base. The flight lead will direct a flight member to join-up and escort the emergency aircraft.

7.6.3. NORDO on an Unmanned Class B Range or on a Class C Range.

7.6.3.1. Make a pass on the target maintaining normal pattern spacing, if possible, while rocking wings. The flight lead will direct another flight member to escort the NORDO aircraft to a recovery base or rejoin the flight in sequence and recover. If the NORDO aircraft has an emergency, if practical, it will make a pass on the target maintaining normal pattern spacing, rocking wings, turn opposite direction of traffic and proceed to a recovery base. The flight lead will direct a flight member to join-up and escort the emergency aircraft.

7.6.3.2. Unexpended Ordnance. If radio failure occurs and circumstances preclude landing with unexpended ordnance, safe jettison of ordnance may be accomplished provided the following conditions are met:

7.6.3.3. The NORDO aircraft joins on another flight member who has radio contact with the RCO and the remainder of the flight.

7.6.3.4. Stores jettison visual signals specified in AFI 11-205 are relayed to the NORDO aircraft to initiate jettison.

7.6.4. NORDO during Missile or Air-to-Air Gunnery Firing.

7.6.4.1. Aircraft will not fire without two-way radio contact.

7.6.4.2. If radio failure occurs, safe the armament switches, join on another member of the flight or the tow aircraft, IAW paragraph [7.6.1](#)

7.6.4.3. Gunnery target tow aircraft experiencing radio failure will rock wings and continue the turn if an attack is in progress. The flight lead of the attacking aircraft will

join on the tow's wing. Remain clear of the banner in the event it is cut. The tow pilot will use standard hand signals to indicate his difficulty. The flight lead will signal when the banner is cleared for cut with a slicing motion across the throat. After the banner is away and the flight lead determines there is no remaining cable, he will take the lead, RTB with the tow aircraft on the wing, advise the tower of the NORDO and establish the appropriate landing pattern. If cable remains, follow local procedures.

7.6.5. NORDO during Recovery.

7.6.5.1. If a formation straight-in approach is flown and a go-around becomes necessary, the chase will go-around, pass the NORDO aircraft and rock his wings. The NORDO aircraft will go-around, if the situation allows. If the NORDO aircraft is in formation as a wingman, the leader will initiate a gentle turn into the wingman and begin the go-around.

7.6.5.2. To signal the need for an approach-end arrestment, lower the tailhook (visual formation) or fly a straight in approach flashing the landing light (unescorted).

7.7. Severe Weather Penetration. Do not fly through severe weather. If unavoidable, flights will split-up and obtain separate clearances prior to severe weather penetration. **(T-1).**

7.8. Spatial Disorientation (SD). SD has proven to be a leading killer of F-16 pilots. Although SD is most common at night or in IMC, it can and has happened in day VMC. Reference AFMAN 11-217V1 for information on the causes of SD, how to avoid it, and how to mitigate its consequences.

7.8.1. Enabling PARS is an acceptable recovery method from SD induced unusual attitudes, reference AFTTP 3-3.F16 for recommended throttle techniques during PARS recoveries.

7.8.2. Pilots should ensure deconfliction from other aircraft (primarily above or below their position) prior to PARS activation.

7.9. Lost Wingman. (T-1).

7.9.1. Priorities. The first priority is to establish safe separation from other aircraft (e.g., tanker or wingman). Next, obtain a separate clearance to ensure obstacle/terrain clearance and clearance from other traffic.

7.9.2. Prohibitions. Do not practice lost wingman procedures in other than day VMC conditions.

7.9.3. General Procedures. Simultaneously transition to instruments and inform lead while executing lost wingman procedures (ref AFTTP 3-3.F16 for amplifying data). Lead will acknowledge the radio call and transmit attitude, heading, altitude and airspeed. Once lost wingman procedures have been executed, permission to rejoin must be obtained from the flight lead.

7.9.4. Two- or Three-Ship Flights. **(Note:** If in three-ship echelon, refer to four-ship lost wingman procedures.)

7.9.4.1. Wings-Level Flight (climb, descent or straight and level). Simultaneously inform the leader and turn away using 15 degrees of bank for 15 seconds, then resume heading and obtain a separate clearance.

7.9.4.2. Outside the Turn. Reverse the direction of turn using 15 degrees of bank for 15 seconds and inform the leader. Continue straight ahead to ensure separation prior to resuming the turn. Obtain a separate clearance.

7.9.4.3. Inside the Turn. Momentarily reduce power to ensure nose-tail separation and inform the flight lead to roll out of the turn. Maintain angle of bank to ensure lateral separation and obtain a separate clearance. The leader may resume turn only when separation is ensured.

7.9.4.4. Precision/Non-precision Final. The wingman will momentarily turn away to ensure clearance, inform lead, and commence the published missed approach procedure while obtaining a separate clearance.

7.9.4.5. Missed Approach. The wingman will momentarily turn away to ensure clearance, inform lead, and continue the published or assigned missed approach procedure while climbing to 500 feet above missed approach altitude. Obtain a separate clearance.

7.9.5. Four-Ship Flights. If only one aircraft in the flight becomes separated, the previous procedures would provide safe separation, but since it is impossible for number 4 to immediately ascertain that number 3 still has visual contact with the leader, it is imperative that number 4's initial action be based on the assumption that number 3 has also become separated. Numbers 2 and 3 will follow the procedures outlined above. Number 4 will follow the appropriate procedure listed below:

7.9.5.1. Wings-Level Flight. Simultaneously inform the leader and turn away using 30 degrees of bank for 30 seconds, then resume heading and obtain a separate clearance.

7.9.5.2. Outside the Turn. Reverse direction of turn using 30 degrees of bank for 30 seconds to ensure separation from lead and number 3 and obtain a separate clearance.

7.9.5.3. Inside the Turn. Momentarily reduce power to ensure nose-tail separation and increase bank angle by 15 degrees. Inform the leader to roll out. Obtain a separate clearance. Leader will resume turn only when separation is ensured.

7.10. Armament System Malfunctions. (T-1).

7.10.1. General. Do not attempt to expend ordnance using a weapons release system with a known malfunction. If abnormal missile launch or erratic missile flight occurs, have the launching aircraft visually inspected by a chase pilot, if possible, to determine if any damage has occurred.

7.10.2. Inadvertent Release. Record switch positions at the time of inadvertent release and impact point, if known, and provide the information to debrief personnel. Check switches safe and do not attempt further release in any mode. Treat remaining stores as hung and obtain a chase aircraft for RTB, if practical. If remaining stores present a recovery hazard, jettison in a suitable area on a single pass, if practical.

7.10.3. Hung Freefall Ordnance or Missile Hangfire/Misfire. First confirm switches/SMS settings were correct. If they were, record all relevant switch/SMS settings and proceed as follows.

7.10.3.1. Hung Live Freefall Ordnance. Attempt delivery using an alternate delivery mode, if applicable. If unsuccessful, use selective jettison procedures for the store. If unsuccessful and the ordnance is either unsecure or the security of the ordnance cannot be determined, consider selective jettison of the rack.

7.10.3.2. Hung Practice/Inert Freefall Ordnance. Make an additional attempt to expend. If unsuccessful, select an alternate delivery mode and try again. If unsuccessful, ordnance from other stations/dispensers may be released provided this does not violate load symmetry limits. If remaining stores present a recovery hazard, jettison in a suitable area on a single pass, if practical.

7.10.3.3. Maverick Missile Hangfire. A missile that fires but fails to depart the aircraft is a hangfire. If able, have a chase pilot inspect such a missile.

7.10.3.4. Maverick Missile Misfire. A missile that fails to fire when all appropriate switches were selected is a misfire. If this occurs, safe the Master Arm switch. If able, have a chase pilot inspect the missile for smoke or fire. If either exists, jettison the missile on the range. If not, pilots may attempt another pass. If the second attempt fails and conditions permit, remain dry in the pattern for 15 minutes, then proceed to the recovery base following hung ordnance/weapons malfunction recovery procedures.

7.10.3.5. Hung Ordnance/Weapons Malfunction Recovery Procedures. Visually inspect the aircraft for damage, if practical. Declare an emergency (not required for hung practice/inert ordnance or hung rockets). Obtain a chase aircraft, if available. Avoid populated areas and trail formations. Land from a straight-in approach.

7.11. In-flight Practice of Emergency Procedures. Reference AFI 11-202V3. A simulated emergency procedure is any procedure that produces an effect closely paralleling the actual emergency. One example would be retarding the throttle sufficiently to emulate the performance of an aircraft with a flamed out or idle engine.

7.11.1. Prohibitions. Do not practice aborted takeoffs in the aircraft. Instead, use the flight simulator, Cockpit Familiarization Trainer or a static aircraft, in that order of preference. Do not practice in-flight engine shutdown. Do not practice SFO patterns unless crash rescue is available and either an active tower or a ROM (or equivalent, e.g. SOF) is in operation. Do not practice SFO patterns in conditions other than day VMC. **(T-1)**.

7.11.2. Simulated Flameout (SFO)/Emergency Landing Patterns. OG/CCs will establish specific procedures for SFO training and establish letters of agreement with appropriate agencies. They will publish those procedures in their supplement to this volume. General SFO procedures follow: **(T-1)**.

7.11.2.1. The SFO pattern may be entered from any direction or altitude that will ensure the aircraft is properly configured above 2,000 feet AGL and in a position to safely complete the approach.

7.11.2.2. Do not initiate or continue an SFO if a potential traffic pattern conflict exists that would require division of the pilot's attention between the SFO and sequencing with traffic. Discontinue an SFO whenever excessive maneuvering is required, whether as a result of a traffic conflict or when making corrections. Discontinue an SFO if unable to obtain wings level on final by 200 feet AGL. Discontinue an SFO if airspeed drops

below Dash One minimum airspeed any time between base key and the initiation of the flare. Once the decision to discontinue an SFO has been made, initiate a go-around and do not attempt to resume the SFO.

7.11.2.3. Except when operating IAW a MAJCOM-approved syllabus (e.g., AFMC high angle of attack training), do not touch down from an SFO.

7.11.2.4. Make radio calls IAW local procedures, but as a minimum call.

7.11.2.4.1. "High Key"

7.11.2.4.2. "Low Key"

7.11.2.4.3. "Base Key, Gear Down, (Intentions)"

7.12. Search and Rescue (SAR) Procedures. General directive procedures are listed below. OG/CCs will establish specific procedures in the unit supplement to this volume. **(T-1).**

7.12.1. Squawk. Immediately cease tactical maneuvering by executing Knock-It-Off procedures. Place IFF to EMER to alert ATC/GCI/AWACS of the emergency situation.

7.12.2. Talk. Establish an On Scene Commander (OSC). Communicate the emergency situation and intentions immediately to applicable control agencies. Use GUARD frequency if necessary.

7.12.3. Mark. Mark the last known position of survivors/crash site using any means available, e.g. visual ground references, TACAN, INS, EGI, ATC/GCI/AWACS, HMCS, or TGP. Pass this information to follow-on SAR forces.

7.12.4. Separate. Remain above the last observed parachute altitudes until the position of all possible survivors is determined. If visual contact with parachute is not maintained, allow approximately 1 minute per thousand feet (16 feet per second) for parachute descent. The OSC will establish deconfliction between all aircraft involved in the SAR.

7.12.5. Update Bingo/Recovery Base. Revise bingo fuels or recovery bases as required to maintain maximum SAR coverage over survivor(s). Do not overfly bingo. Relinquish OSC duties to more qualified rescue forces (e.g., SANDY 1, US Coast Guard) upon their arrival.

7.12.6. For overwater SAR/CSAR, OSC will utilize every means available (visual, TGP, Radar Ground Map, or Ground Moving Target Modes) to locate vessels that may aid in recovery.

7.13. Post Arresting Gear Engagement Procedures. Do not shut down the engine unless fire/other conditions dictate or directed to do so by the arresting gear crew. Raise the tailhook on the signal from the arresting crew. Do not taxi until directed to do so by the arresting gear crew. **(T-1).**

Chapter 8

LOCAL OPERATING PROCEDURES

8.1. General. This chapter provides a consolidated framework for wings to supplement (IAW AFI 33-360) local operating procedures. Units composed of multiple aircraft types may publish guidance in a single, stand-alone local operating instruction instead of supplementing this AFI. Added or stand-alone procedures will not be less restrictive than those contained elsewhere in this volume. This chapter is not intended to be a single source document for procedures contained in other directives or regulations. Avoid unnecessary repetition of guidance provided in other established directives; however, reference to those directives is acceptable when it serves to facilitate the location of information. This chapter is authorized to be issued to each pilot. Units may supplement the following paragraphs for local operating guidance: **(T-1)**.

8.1. (8FW)General. This Chapter supplements AFI 11-2F-16V3 with guidance specific to commanders, supervisors and aircrew under the operational control of the 8th Fighter Wing. Knowledge of the parent AFI is essential when using this supplement. If conflicting guidance exists between this Chapter and other applicable regulations, the most restrictive guidance applies.

8.1.1. Section A. Introduction.

8.1.1. **(8FW)** Section A. Introduction.

8.1.1.1. **(Added-8FW) Deviations.** Unless otherwise noted, the 8th Operations Group Commander (8 OG/CC) must approve deviations to this supplement except for urgent requirements for safety or in-flight emergencies.

8.1.1.2. **(Added-8FW) Revisions and Recommendations for Change.** Periodic review of this supplement will occur every two years. All changes will be coordinated through the 8th Operations Group, Standardization and Evaluation Office (8 OG/OGV) for review prior to being submitted to the 8 OG/CC. Change proposals to this supplement are encouraged. To change this supplement, submit an AF Form 847, *Recommendation for Change of Publication*, to 8 OG/OGV through your squadron standardization/evaluation office. Immediate changes to pilot procedures will be made through the FCIF.

8.1.1.3. **(Added-8FW) References.** References, terms and abbreviations for this supplement are found in AFI 11-2F-16V3, Attachment 1. In addition, this supplement references the documents listed in Attachment 1 below.

8.1.2. Section B. General Policy.

8.1.2. **(8FW)** Section B. General Policy.

8.1.2.1. **(Added-8FW)** Preflight Planning.

8.1.2.1.1. **(Added-8FW)** All 8FW pilots will ensure they are familiar with all documents that support flight operations listed in Attachment 1 below.

8.1.2.1.2. **(Added-8FW)** Prior to each flight, flight leads will ensure the following items are accomplished:

- 8.1.2.1.3. **(Added-8FW)** File DD Form 1801, *DOD International Flight Plan*, if required.
- 8.1.2.1.4. **(Added-8FW)** Obtain a comprehensive weather brief in the mass brief or by reviewing the current weather MEF/NTFS and getting a verbal update prior to step.
- 8.1.2.1.5. **(Added-8FW)** Review all NOTAM/AIRADS to ensure route of flight is de-conflicted from restricted and prohibited areas. AIRADS can be retrieved via the DINS NOTAM website by typing in “RKRR” (Incheon Center) as the identifier. NOTAMS and AIRADS will be briefed during the mass brief.
- 8.1.2.1.6. **(Added-8FW)** Review and brief active “Big Top Movement” and prohibited zones.
- 8.1.2.1.7. **(Added-8FW)** P-518 Flights. Comply with instructions contained in ACCR 60-8, and ACCR 55-22 (or appropriate Standard Operating Procedure (SOP)).
- 8.1.2.2. **(Added-8FW)** Minimum Equipment for Flight.
 - 8.1.2.2.1. **(Added-8FW)** Mission data cards, appropriate T.O. checklists and the inflight sections of the 8FW IFG.
 - 8.1.2.2.2. **(Added-8FW)** Low-level maps prepared IAW AFI 11-2F-16V3 and this supplement.
 - 8.1.2.2.3. **(Added-8FW)** Pilots flying missions to P-518 shall carry the “KTO Smart Pack”, COMSEC and items required by ACCR 60-8 and ACCR 55-22 (or appropriate SOP).
 - 8.1.2.2.4. **(Added-8FW)** Divert fuel charts and alternate airfield information when flying at deployed locations.
 - 8.1.2.2.5. **(Added-8FW)** Current flight information handbook, IFR enroute supplement, enroute chart 3/4, High/Low Volume 2 approach book and TCN when applicable. As a minimum, the rear cockpit of the D-models will contain the High/Low Volume 2 approach book and applicable TCN.
- 8.1.2.3. **(Added-8FW)** Cockpit Media Restriction Policy.
 - 8.1.2.3.1. **(Added-8FW)** Pilots need to closely control all classified media. Non assigned/attached pilots at Kunsan wishing to review mission recording media will be approved only on a case by case basis. All other visiting aircrew require a waiver from the 8FW/CC.
- 8.1.3. Section C. Ground Operations.
- 8.1.3. **(8FW)** Section C. Ground Operations.
 - 8.1.3.1. **(Added-8FW)** Airfield Description.
 - 8.1.3.1.1. **(Added-8FW)** Refer to Attachment 5 of this supplement for a description of the airfield and associated equipment.
 - 8.1.3.2. **(Added-8FW)** Preflight and Engine Start/Shut down Procedures.

- 8.1.3.2.1. **(Added-8FW)** Pilots will make every effort to establish two-way voice communications with the crew chief for all sorties (except scramble launches). If two-way communications cannot be established, the pilot will have the crew chief in sight for the SEC, EPU, flight control, speedbrakes, trim and brake checks. Pilots will confirm flight control movements match flight control inputs. No flight control inputs will be made without the crew chief in sight or verbal clearance from the crew chief.
- 8.1.3.2.2. **(Added-8FW)** Monitor ground control frequency (local UHF CH 2) for engine start, SEC check and EPU check. Monitor squadron operations frequency (local UHF CH 1) at all other times before taxiing.
- 8.1.3.2.3. **(Added-8FW)** Accomplish SEC and EPU checks after start in the chocks. Any time the EPU safety pin is reinstalled and removed accomplish another EPU check prior to takeoff. This check may be accomplished in the HOTPIT flows or while holding at EOR. Pilots will ensure the area behind their aircraft is clear if conducting the EPU check while holding. Give the EOR crew a “thumbs-up” if the EPU check has been accomplished or a “thumbs-down” if not yet accomplished. Prior to proceeding, ensure the EOR crew is aware you are going to accomplish the EPU check.
- 8.1.3.2.4. **(Added-8FW)** Pilots may taxi with the canopy open if the situation dictates, ensure loose items are stowed. If taxiing with the canopy open, pilots must ensure that it is in the full open position while the aircraft is moving.
- 8.1.3.2.5. **(Added-8FW)** Pilots shall not increase the power above idle unless the canopy is fully closed (i.e., SEC/EPU checks).
- 8.1.3.2.6. **(Added-8FW)** If a ground abort is necessary, time permitting, document aircraft problems in the AFTO Form 781, *ARMS Aircrew/Mission Flight Data Document*, prior to proceeding to a spare aircraft.
- 8.1.3.2.7. **(Added-8FW)** Prior to taxi, the flight lead calls clearance delivery for clearance. Advise clearance delivery of any change to the route and number in flight.
- 8.1.3.3. **(Added-8FW)** Taxi/Arming Procedures.
- 8.1.3.3.1. **(Added-8FW)** Taxiing.
- 8.1.3.3.1.1. **(Added-8FW)** Pilots will ensure HAS doors are completely opened before taxiing. With the exception of munitions that are placed within the red painted lines on the left side of the HAS (looking out), ensure all moveable equipment, regardless of height, is placed behind aircraft wingtips clear of all flight control surfaces. The crew chief will be outside of the HAS on the left side to marshal the aircraft, while the B-man will be positioned on the right, outside of the HAS, with thumb extended indicating appropriate wingtip clearance. The pilot will follow the crew chief signals when exiting the HAS to ensure proper wingtip clearance of all obstacles. The B-man will move forward as the aircraft taxis, maintaining line of sight with both the right wingtip and the crew chief. If at any time the pilot is concerned about wingtip clearance, safety, or if the crew chief/B-man are not operating in accordance with this paragraph, then he/she will

stop the aircraft.

8.1.3.3.1.2. **(Added-8FW)** Maximum taxi speed is 25 knots, 15 knots in the loop areas.

8.1.3.3.1.3. **(Added-8FW)** Taxi via prescribed flows in Attachment 8. Notify ground control of deviations.

8.1.3.3.1.4. **(Added-8FW)** Coordination with tower is required prior to exiting the active runway at Taxiway "B", "C" or "D."

8.1.3.3.1.5. **(Added-8FW)** Taxi back via Taxiway "F." Call ground prior to back-taxi on Taxiway "C."

8.1.3.3.1.6. **(Added-8FW)** Yield to all alert scrambles. Do not block the ROKAF alert entrance to Runway 36.

8.1.3.3.1.7. **(Added-8FW)** White stripes painted along the taxiway edges designate vehicle lanes for maintenance and support traffic. They indicate adequate F-16 wingtip clearance from a vehicle outside the white stripes as long as the aircraft is on the taxiway centerline. A wing walker is not required for vehicles outside the white stripe if the F-16 is taxied on the taxiway centerline. Aircraft larger than F-16's require wing walkers.

8.1.3.3.1.8. **(Added-8FW)** When parking the aircraft at the HAS, the pilot will follow all crew chief signals in order to ensure appropriate wingtip clearance, as well as clearance for the engine inlet. If at any time the pilot is concerned about safety, or if the crew chief is not marshalling the aircraft at a safe distance from obstacles, the aircraft will be stopped.

8.1.3.3.2. **(Added-8FW)** RWR Checks.

8.1.3.3.2.1. **(Added-8FW)** RWR checks are accomplished prior to EOR. During exercises or contingencies operations, a "last look" check is accomplished simultaneously while aircraft are stopped. IFF mode IV checks may also be accomplished during this time. Mode IVs will be re-keyed if required. Aircraft should spend minimum time stopped at RWR/"last look"/IFF check points.

8.1.3.3.3. **(Added-8FW)** Arm/De-arm.

8.1.3.3.3.1. **(Added-8FW)** Aircraft are normally armed at EOR.

8.1.3.3.3.2. **(Added-8FW)** During exercises or combat operations, aircraft may be armed/de-armed in the HAS. LFEs require 8 OG/CC approval to arm/de-arm in the HAS.

8.1.3.3.3.3. **(Added-8FW)** Missile covers will be removed in the chocks prior to start.

8.1.3.3.3.4. **(Added-8FW)** Aircraft enter EOR and fill slots from east to west. Do not taxi in front of aircraft being armed with forward firing ordinance. Hold short as depicted on Attachment 14.

8.1.3.3.3.5. **(Added-8FW)** With tower approval, the TA ramp, high-speed taxiway, and hot cargo pad at the south end of the runway can be used for

marshalling.

8.1.3.3.3.6. **(Added-8FW)** If a flight needs to hold after arming for an extended period of time and the south EOR slots are required for subsequent aircraft to arm, flights may reposition to hold on the hot cargo pad facing south (primary) fill in from west to east (4 maximum), then high-speed taxiway (secondary) as depicted in Attachment 14 (4 maximum). Call ground control on the high-speed taxiway. If ROKAF needs the taxiway for alert operations, ensure the taxiway is clear and comply with ground/tower instructions.

8.1.3.3.3.7. **(Added-8FW)** If the high-speed taxiway is occupied, subsequent flights that need to hold on the ground post-arming will back-taxi on the parallel to the TA ramp as depicted in Attachment 14. Call ground control to coordinate taxi flow to the transient alert ramp.

8.1.3.4. **(Added-8FW)** Hot-Pit Refueling/Pit-and-Go Procedures (8FW Aircraft Only).

8.1.3.4.1. **(Added-8FW)** 8FW Fire Department will be informed prior to all Hot Pit refueling operations, and the Fire Chief/Senior Fire Officer will determine the most appropriate standby location for Aircraft Rescue and Fire Fighting vehicles. Additionally, aircraft shall not hot-pit with:

8.1.3.4.1.1. **(Added-8FW)** Hot brakes.

8.1.3.4.1.2. **(Added-8FW)** Fuel quantity below 600 pounds.

8.1.3.4.1.3. **(Added-8FW)** Suspected failure or problems with WOW switch, landing gear, brakes, NWS, fuel system or engine problems.

8.1.3.4.2. **(Added-8FW)** Pit-and-Go Procedures. Reference the 8FW IFG for Hot-Pit holding areas and taxi flow.

8.1.3.4.2.1. **(Added-8FW)** Taxi flow and cursory checks are conducted IAW 8FW IFG.

8.1.3.4.2.2. **(Added-8FW)** Accomplish EPU checks prior to exiting the hot-pits or in EOR.

8.1.3.4.2.3. **(Added-8FW)** When refueling is complete, flights may hold in the PANTON flows West to East or DV North/South.

8.1.4. Section D. Flying Operations.

8.1.4. **(8FW)** Section D. Flying Operations.

8.1.4.1. **(Added-8FW)** General.

8.1.4.1.1. **(Added-8FW)** Arriving VFR aircraft will be directed to points “Alpha” or “Delta” when Runway 18 is in use and points “Charlie” or “Bravo” when Runway 36 is in use for VFR sequencing into Kunsan AB (Reference Attachment 9). Arriving IFR aircraft will use approach IAF’s, or vectors (when able), for IFR sequencing into Kunsan AB.

8.1.4.1.2. **(Added-8FW)** Kunsan Class “C” Airspace: Consists of a 5-mile radius from the center of the airfield; surface up to 5,000 ft AGL and a 10-mile radius shelf area extending from 1,000 ft – 5,000 ft above airfield elevation.

8.1.4.1.3. **(Added-8FW)** During periods when Kunsan’s surveillance radar is out of service, Class “C” airspace services will not be available. Pilots should expect to report an IAF for an Instrument Approach Procedure.

8.1.4.2. **(Added-8FW)** Airspace Restrictions.

8.1.4.2.1. **(Added-8FW)** Local flying maps will be annotated with all restricted and prohibited areas found in the most current FLIP AP/3A.

8.1.4.2.2. **(Added-8FW)** P-73 is a prohibited area defined in FLIP AP/3A.

8.1.4.2.2.1. **(Added-8FW)** 8FW pilots will annotate this area on local flying maps.

8.1.4.2.2.2. **(Added-8FW)** Aircraft flying into this area may be fired upon or intercepted.

8.1.4.2.3. **(Added-8FW)** Goch’ang Airport. Pilots should be aware that the Goch’ang Airport, located three miles south of JULOP (KUZ 173/20), is an uncontrolled airfield. The airport traffic area is a 5nm radius, surface to 3,000’ AGL.

8.1.4.2.4. **(Added-8FW)** Aircraft are prohibited from flying below 3,000’ AGL over any of the small islands, which form the Gogunsan-Gundo Island Group. The center of this island group is located at N35-50.000/E126-24.000, approximately 12 miles southwest of Kunsan AB.

8.1.4.3. **(Added-8FW)** Departures.

8.1.4.3.1. **(Added-8FW)** Takeoff.

8.1.4.3.1.1. **(Added-8FW)** Rolling takeoffs are at flight lead discretion.

8.1.4.3.2. **(Added-8FW)** Normal Departure.

8.1.4.3.2.1. **(Added-8FW)** Flights departing in a non-standard trail formation will have the last aircraft in trail squawk mode 3 of XX00 (Mode C off) where XX is the first two-digits of the flight lead’s assigned mode 3. **Example:** If the flight lead is squawking mode 3 of 2617, the last wingman in trail will squawk mode 3 of 2600.

8.1.4.3.3. **(Added-8FW)** IFR Departures.

8.1.4.3.3.1. **(Added-8FW)** The Kunsan Transitions (Attachment 12) are the primary departure procedures. Reference FLIP if requiring a different departure.

8.1.4.3.3.2. **(Added-8FW)** Pack Flight Plans (defined by LOA between Incheon ACC and 8 OSS). Pack flight plans are locally established round robin stereo routes to Special Use Airspace (SUA). Reference the 8FW IFG for a complete listing of these flight plans. Squadrons should file Pack flight plans a minimum of two hours before takeoff.

8.1.4.3.3.3. **(Added-8FW)** Pilots filing a Pack flight plan will automatically be

cleared for the transition that corresponds to the first point of the flight plan. On departure, maintain at or below 1,000' MSL until past the departure end of the runway and then continue climbing to the clearance altitude. Passing 3 DME, start a turn in the shortest direction to the first point on the Pack flight plan and remain outside 3nm of Kunsan AB. **Note 1:** When MOA 17 is active, the Semi transition is unavailable. **Note 2:** Approach control radar is required to use the Kunsan Transitions.

8.1.4.3.4. (Added-8FW) VFR Departures (Attachment 12).

8.1.4.3.4.1. (Added-8FW) Make VFR departure requests on initial ground check-in.

8.1.4.3.4.2. (Added-8FW) During VFR departures, maintain at or below 1,000' MSL until past the departure end of the runway and then continue climbing to requested altitude and fix. Advise Kunsan Approach when clear of Kunsan's Class "C" airspace (Greater than 5,000' MSL or 10nm).

8.1.4.3.4.3. (Added-8FW) VFR departures normally follow approved VFR transitions, which are described in the 8FW IFG.

8.1.4.3.4.4. (Added-8FW) When airborne, coordinate IFR clearance with Kunsan Approach.

8.1.4.3.4.5. (Added-8FW) Clearance from Cobra is required prior to entering any SUA. On VFR departures, obtain squawk and clearance from Cobra. Formations will de-conflict at MOA entry points with VFR hemispheric altitudes and entering traffic will offset North or East and exiting aircraft will offset South or West. If unsure of offset direction, offset right.

8.1.4.3.5. (Added-8FW) Combat Departures

8.1.4.3.5.1. (Added-8FW) Combat departures must be conducted in VMC.

8.1.4.3.5.2. (Added-8FW) Combat departures are a conflict with the SFO pattern. SFOs and combat departures will not be conducted simultaneously. Expect SFO aircraft to be held at High-Key and an additional altitude restriction placed on the combat departure.

8.1.4.3.5.3. (Added-8FW) Combat departures are composite flight plan (VFR/IFR). VFR flight is conducted for the first portion of the flight and IFR automatically commences at 10,000' MSL or ATC assigned altitude if lower.

8.1.4.3.5.4. (Added-8FW) Combat Departure Profile. Reference the 8 FW IFG for procedures.

8.1.4.4. (Added-8FW) Functional Check Flight (FCF). FCF will be performed according to AFI 21-101/COMBATAIRFORCESUP/8FWSUP. Pilots will make maximum use of basic radar service from the RAPCON and radar advisories from GCI. The areas designated for FCFs are outside restricted airspace and MOAs. FCF aircraft will normally use the call sign "HI TEST" and request a maximum climb to FL200 on departure. FCF aircraft will depart to the west, unless otherwise coordinated with ATC.

8.1.4.5. (Added-8FW) In-Flight Procedures.

8.1.4.5.1. **(Added-8FW)** Transition Level.

8.1.4.5.1.1. **(Added-8FW)** The transition level is FL140 in South Korea. Use altimeter settings 29.92 at or above this altitude except when performing operations in a MOA or restricted area. When in a MOA or restricted area, use the local altimeter setting obtained from the controlling agency.

8.1.4.5.2. **(Added-8FW)** VFR Operations.

8.1.4.5.2.1. **(Added-8FW)** Flights will transit to and from training airspace under IFR to the maximum extent possible. If requesting radar monitoring, contact the appropriate ATC facility. Maintain proper VFR hemispheric altitudes outside of MOAs and restricted areas. VFR flight at or above FL200 is not authorized unless prior coordinated with ATC for entry to or exit from MOAs or restricted areas.

8.1.4.5.3. **(Added-8FW)** Emergency safe altitude. The emergency safe altitude in South Korea is 8,400' MSL.

8.1.4.5.4. **(Added-8FW)** Low-Level Flight.

8.1.4.5.4.1. **(Added-8FW)** 8FW pilots will comply with procedures and altitude restrictions described in ACCR 55-1.

8.1.4.5.5. **(Added-8FW)** Night Flying Guidance.

8.1.4.5.5.1. **(Added-8FW)** Apply night procedures between the end of civil twilight and the beginning of morning civil twilight. Night lighting for ground ops applies from sunset until sunrise.

8.1.4.5.5.2. **(Added-8FW)** Pilots will land using the most precise approach available (ILS is primary, LOC/TACAN/PAR are secondary).

8.1.4.5.5.3. **(Added-8FW)** 8FW aircraft will not fly night overhead patterns.

8.1.4.5.5.4. **(Added-8FW)** Reference the ROKAF/7AF LOA and AFI11-202V3 8FW waiver permitting lights-out operation for current guidance on lights-out operating requirements.

8.1.4.5.5.5. **(Added-8FW)** Reduced lighting will only be used within the bounds of the MOA, restricted area, or P-518.

8.1.4.5.5.6. **(Added-8FW)** Cobra/Watchman will call "Christmas tree" to direct flights that are approaching the border to return to normal lighting.

8.1.4.5.5.7. **(Added-8FW)** Flight leads will notify Cobra of reduced lighting ops on initial check in. Cobra will notify flights if an airspace intrusion occurs, and flight leads will direct normal lighting.

8.1.4.5.5.8. **(Added-8FW)** Overt sequenced anti-collision lights are authorized enroute to/from SUA.

8.1.4.5.5.9. **(Added-8FW)** During flight to/from SUA, only one overt anti-collision light is required for standard formations.

8.1.4.5.6. **(Added-8FW)** IFR Recoveries/Approaches.

8.1.4.5.6.1. **(Added-8FW)** Aircraft not working in MOAs will contact Kunsan Approach no later than 40nm from Kunsan AB. Aircraft recovering from MOAs or restricted airspace within Kunsan's airspace will call Kunsan Approach no later than 20nm from the airport. Upon initial contact, the flight lead will advise Kunsan Approach of the number of aircraft in the flight, position from Kunsan, ATIS identifier, and requested approach or intentions.

8.1.4.5.6.2. **(Added-8FW)** Instrument Approaches.

8.1.4.5.6.2.1. **(Added-8FW)** Pilots must use caution when flying approaches to Runway 18 for a parallel road west and short of the runway. This road looks similar to the runway environment and draws pilot right of the actual inbound course. The northern end of the road is at 4 DME.

8.1.4.5.6.2.2. **(Added-8FW)** Circling Maneuvers (8FW aircraft only).

8.1.4.5.6.2.2.1. **(Added-8FW)** Multiple circles are not authorized.

8.1.4.5.6.2.2.2. **(Added-8FW)** Aircraft may request circling approaches using the following options:

8.1.4.5.6.2.2.3. **(Added-8FW)** An opposite direction TACAN/ASR/LOC approach and circle to land or low approach to the active runway.

8.1.4.5.6.2.2.4. **(Added-8FW)** A TACAN/LOC approach to the active runway and circle to land or low approach opposite direction (8FW aircraft require 8FW SOF approval).

8.1.4.5.6.3. **(Added-8FW)** IFR Breakouts/Go-Arounds.

8.1.4.5.6.3.1. **(Added-8FW)** Breakouts will be issued when landing clearance is not available or proceeding within three miles of the airfield is not feasible. Expect standard climbout on the breakout.

8.1.4.5.6.3.2. **(Added-8FW)** Go-Arounds will be issued when a landing clearance cannot be issued but overflight of the airfield is possible. Expect to cross the departure end of the runway at or below 1,000' MSL, fly runway heading and then climb to 3,000' MSL.

8.1.4.5.7. **(Added-8FW)** Radar Trail Recovery Procedures (8FW Aircraft Only).

8.1.4.5.7.1. **(Added-8FW)** Normal Procedures.

8.1.4.5.7.1.1. **(Added-8FW)** Trail recoveries may only be initiated by the pilot.

8.1.4.5.7.1.2. **(Added-8FW)** Pilots within the flight are responsible for maintaining aircraft separation within the flight and will comply with all altitude and heading instructions given to the flight lead.

8.1.4.5.7.1.3. **(Added-8FW)** Flights will maintain standard formation until coordination with ATC for a non-standard, trail recovery formation.

8.1.4.5.7.1.4. **(Added-8FW)** Once in-trail formation is established, the last aircraft in trail will squawk mode 3 of XX00 (Mode C off); where XX is the

first two-digits of the flight lead's assigned mode 3. **Example:** If the flight lead is squawking mode 3 of 2617, the last wingman in trail will squawk mode 3 of 2600.

8.1.4.5.7.1.5. **(Added-8FW)** Reference RADAR/IN-TRAIL LOA and 8FW standards for trail recovery.

8.1.4.5.7.1.6. **(Added-8FW)** Spacing shall increase to 3nm if the $RCR \leq 18$, braking action is reported as "fair" or "poor" or ATIS reports "ice on runway." Flight leads will ensure all flight members and ATC acknowledge this additional spacing.

8.1.4.5.7.1.7. **(Added-8FW)** Request "radar trail recovery" from Kunsan Approach

8.1.4.5.7.1.8. **(Added-8FW)** The flight lead will call all airspeed and configuration changes to the flight members over the radio. All flight members will accomplish airspeed and configuration changes at the same time.

8.1.4.5.7.1.9. **(Added-8FW)** All aircraft will fly the same type of final approach (TACAN, ILS or VFR straight-in) and report the FAF.

8.1.4.5.7.1.10. **(Added-8FW)** Once aircraft execute missed approach or climbout procedures, the radar trail is terminated.

8.1.4.5.7.1.11. **(Added-8FW)** If trail recovery spacing is not equal to or greater than 1.5nm at the FAF the wingman should execute missed approach procedures and coordinate with ATC for a separate clearance. Do not use S-turns to fix spacing inside the FAF or slow below 15 AOA on final.

8.1.4.5.7.1.12. **(Added-8FW)** If VFR and spacing is in question, use "see and avoid" to maintain aircraft separation. When minimum landing separation does not exist, wingman will break out of the pattern IAW local procedures to notify ATC.

8.1.4.5.7.2. **(Added-8FW)** Radar Trail Recovery Abnormal Procedures.

8.1.4.5.7.2.1. **(Added-8FW)** Loss of Radar Contact. If radar contact is lost follow AFI 11-2 MDS series procedures.

8.1.4.5.7.2.2. **(Added-8FW)** Breakout/Go-Around/Missed Approach.

8.1.4.5.7.2.2.1. **(Added-8FW)** In the event of a breakout/go-around, each element will comply with specific instructions issued by ATC.

8.1.4.5.7.2.2.2. **(Added-8FW)** Aircraft executing missed approach will assume the preceding aircraft has also gone missed approach and will comply with ATC instructions.

8.1.4.5.8. **(Added-8FW)** Local Climbout Procedure (Attachment 13).

8.1.4.5.8.1. **(Added-8FW)** Fly runway heading, climb and maintain at or below 1,000' MSL until the departure end of the runway, then climb and maintain 4,000' MSL.

8.1.4.5.8.2. **(Added-8FW)** At 3 DME, turn in the shortest direction to a 090° heading.

8.1.4.5.8.3. **(Added-8FW)** Maintain 250 KCAS in the instrument pattern unless directed otherwise.

8.1.4.5.8.4. **(Added-8FW)** Tower or approach will state, “Execute local climbout Runway 18/36” to abbreviate the above clearance.

8.1.4.5.9. **(Added-8FW)** Opposite Direction Operations.

8.1.4.5.9.1. **(Added-8FW)** Opposite direction operations are allowed if pattern conditions allow and ATC approves.

8.1.4.5.10. **(Added-8FW)** VFR Pattern.

8.1.4.5.10.1. **(Added-8FW)** Pattern Weather Minimums.

8.1.4.5.10.1.1. **(Added-8FW)** VFR pattern: 3000’ ceiling/3nm visibility.

8.1.4.5.10.1.1.1. **(Added-8FW)** This includes entry from VFR entry points.

8.1.4.5.10.1.2. **(Added-8FW)** Restricted Overhead: 2500’ ceiling/3nm visibility.

8.1.4.5.10.1.2.1. **(Added-8FW)** This includes re-entry from north/south point, breakouts from the perch, VFR straight-ins, and closed patterns.

8.1.4.5.10.1.3. **(Added-8FW)** Restricted Overhead minima **do not** include entry from the VFR entry points at 2500’ MSL. Entry will normally be through an IFR approach or a straight-in.

8.1.4.5.10.1.4. **(Added-8FW)** Straight-In only: 2000’ ceiling/3nm visibility.

8.1.4.5.10.1.4.1. **(Added-8FW)** This requires radar vectors to an IFR approach or straight-in re-entry from a low approach.

Table 8.1. (Added-8FW) VFR Entry Points

ALPHA – KUZ 040/15 (Runway 18) N36 06.8310 W126 47.0100 85°	BRAVO – KUZ 145/12 (Runway 36) N35 45.3020 W126 46.8390 0°
CHARLIE – KUZ 225/13 (Runway 36) N35 43.9450 W126 27.1460 407°	DELTA – KUZ 324/14 (Runway 18) Note: Not usable when R-97 is active. N36 04.453 W126 25.154 0°
NORTH POINT – KUZ 040/4.5 (Runway 18) (white roof factory)	SOUTH POINT – KUZ 142/5.3 (Runway 36) (The western land tip)

8.1.4.5.10.2. **(Added-8FW)** VFR Entry Procedures.

8.1.4.5.10.2.1. **(Added-8FW)** Upon initial contact, the flight lead will advise Kunsan Approach of the number of aircraft in the flight, position from Kunsan, ATIS identifier, and type of pattern requested (i.e., initial, tactical initial, (formation) straight-in,).

8.1.4.5.10.2.2. **(Added-8FW)** After radar contact, Kunsan Approach will

sequence the flight to the appropriate VFR entry point.

8.1.4.5.10.2.3. **(Added-8FW)** If the pattern is “overhead only” or “straight-in only” entry will be from radar vectors or instrument approach.

8.1.4.5.10.3. **(Added-8FW)** Tactical Recovery Procedure (TRP).

8.1.4.5.10.3.1. **(Added-8FW)** Ceiling must be at least 1,000’ above TRP altitude and the visibility must be at least 5nm.

8.1.4.5.10.3.2. **(Added-8FW)** Advise Kunsan Approach during initial contact of the number of aircraft in the flight and the altitude entering the TRP recovery. Maximum of four aircraft allowed on the recovery.

8.1.4.5.10.3.3. **(Added-8FW)** Flights maintain standard formation until coordination with ATC for a non-standard trail formation.

8.1.4.5.10.3.4. **(Added-8FW)** TRP and SFO patterns will not be accomplished simultaneously.

8.1.4.5.10.3.5. **(Added-8FW)** The TRP will be flown IAW the 8FW IFG. Pilots will report “C/S commencing TRP” prior to beginning their descent. Pilots will also report, “C/S TRP Initial” when they arrive 1.5 nm from the field.

8.1.4.5.10.4. **(Added-8FW)** Initial.

8.1.4.5.10.4.1. **(Added-8FW)** Maximum of four aircraft.

8.1.4.5.10.4.2. **(Added-8FW)** The flight lead will fly the depicted ground track in the 8FW IFG and report “five-mile initial” with intentions. **Note:** Use 6 DME for Runway 36 and 5 DME for Runway 18 when reporting “five-mile initial”.

8.1.4.5.10.4.3. **(Added-8FW)** Cross the VFR entry point at 2,500’ MSL and maintain 2,500’ until initial, then descend to 1,500’ MSL.

8.1.4.5.10.4.4. **(Added-8FW)** Maintain 300 KCAS from the VFR entry point to the break point.

8.1.4.5.10.5. **(Added-8FW)** Tactical Initial.

8.1.4.5.10.5.1. **(Added-8FW)** Maximum of four aircraft in the flight.

8.1.4.5.10.5.2. **(Added-8FW)** Formations will coordinate with approach control and tower on initial contact.

8.1.4.5.10.5.3. **(Added-8FW)** The flight lead will fly the depicted ground track and altitude as stated above, and report “five-mile tactical initial” with intentions when established on runway heading.

8.1.4.5.10.5.4. **(Added-8FW)** Maximum airspeed is 400 KIAS.

8.1.4.5.10.6. **(Added-8FW)** Overhead Pattern (Attachment 11).

8.1.4.5.10.6.1. **(Added-8FW)** The overhead traffic pattern is flown at 1,500’ MSL and is flown to the west of the airfield (left traffic for Runway 36 or

right traffic for Runway 18).

8.1.4.5.10.6.2. **(Added-8FW)** Pilots executing closed traffic will maintain at or below 1,000' MSL until ½ nm past departure end of the runway unless cleared earlier by Tower. Request closed with intentions.

8.1.4.5.11. **(Added-8FW)** SFO Patterns (Attachment 11)

8.1.4.5.11.1. **(Added-8FW)** General.

8.1.4.5.11.1.1. **(Added-8FW)** Weather minimums are 1,000' ceiling above high key and five miles visibility.

8.1.4.5.11.1.2. **(Added-8FW)** SFO patterns are VFR maneuvers and shall only be performed with tower/approach approval.

8.1.4.5.11.1.3. **(Added-8FW)** SFO patterns are only approved between sunrise and sunset.

8.1.4.5.11.1.4. **(Added-8FW)** Maximum number of aircraft in the SFO pattern is four. Pilots must maintain visual separation during simultaneous SFO patterns.

8.1.4.5.11.2. **(Added-8FW)** Overhead SFO pattern.

8.1.4.5.11.2.1. **(Added-8FW)** Maximum pattern altitude shall not exceed 10,000' MSL.

8.1.4.5.11.2.2. **(Added-8FW)** Aircraft shall remain within 3 nm of the airfield at all times.

8.1.4.5.11.2.3. **(Added-8FW)** Request "SFO" from tower.

8.1.4.5.11.2.4. **(Added-8FW)** Pilots entering the overhead SFO pattern from a low approach or takeoff will maintain at or below 1,000' MSL until ½ nm past the end of runway, then start a climbing 360° turn to the west, direct to high key, unless approved present "position direct high key".

8.1.4.5.11.2.5. **(Added-8FW)** If entering from initial, execute a climbing 360° turn to the west direct to high key from the departure end of the runway.

8.1.4.5.11.2.6. **(Added-8FW)** Pilots shall report "high key" and wait for further instructions from the tower.

8.1.4.5.11.2.7. **(Added-8FW)** If told to report "low key," pilots will continue the SFO overhead pattern to the landing runway and report "low key."

8.1.4.5.11.2.8. **(Added-8FW)** If told to "hold high key," pilots will state orbit altitude and fly a 360° overhead pattern to the west of the runway (counter-clockwise turns for Runway 36 and clockwise turns for Runway 18) and report "high key" with altitude over the center of the airfield aligned with the runway.

8.1.4.5.11.2.9. **(Added-8FW)** Aircraft on initial shall report visual with the SFO aircraft and shall maintain visual contact and de-confliction.

8.1.4.5.11.2.10. **(Added-8FW)** SFO aircraft at low key without 5nm initial

traffic in sight can continue SFO ground track but will maintain a minimum of 3,000' MSL and west of the runway. Normal procedures can be continued once attaining visual on conflicting traffic.

8.1.4.5.11.3. **(Added-8FW)** Straight-In SFO Pattern.

8.1.4.5.11.3.1. **(Added-8FW)** Request straight-in SFO from the tower or Kunsan approach.

8.1.4.5.11.3.2. **(Added-8FW)** The straight-in SFO is a 10° window either side of the extended runway centerline and 10nm from the end of the runway (11 DME for Runway 36 or 10 DME for Runway 18).

8.1.4.5.11.3.3. **(Added-8FW)** Report ten mile straight-in SFO and wait for further instructions from tower.

8.1.4.5.11.3.4. **(Added-8FW)** If told to “orbit ten mile straight-in SFO,” pilots will state orbit altitude and fly a 360° holding pattern to the west of the runway centerline (counter-clockwise turns for Runway 36 and clockwise turns for Runway 18) between 10-15nm from the runway and report Ten mile straight-in SFO.

8.1.4.5.11.3.5. **(Added-8FW)** Clearance for a straight-in SFO to Runway 18 will not be allowed if R-97 or R-111 are active.

8.1.4.5.11.4. **(Added-8FW)** Potential SFO pattern conflicts and procedures.

8.1.4.5.11.4.1. **(Added-8FW)** High key and 7-10nm initial/straight-in, aircraft re-entering at south/north point.

8.1.4.5.11.4.2. **(Added-8FW)** Low key and 5nm initial/straight-in.

8.1.4.5.11.4.3. **(Added-8FW)** Base key and aircraft on short initial/short final.

8.1.4.5.11.4.4. **(Added-8FW)** SFO patterns may be discontinued at any point by the pilot or when directed by the tower.

8.1.4.5.11.5. **(Added-8FW)** Re-Entry (Attachment 10).

8.1.4.5.11.5.1. **(Added-8FW)** Pilots carrying straight through initial will maintain 1,500' MSL and turn crosswind ½ nm past departure end of the runway. Once established on crosswind, pilots will climb to 2,000' MSL.

8.1.4.5.11.5.2. **(Added-8FW)** Pilots re-entering after a low approach or takeoff will maintain at or below 1,000' MSL until ½ nm past the end of the runway and then turn crosswind and climb to 2,000' MSL.

8.1.4.5.11.5.3. **(Added-8FW)** Turn to downwind in order to over fly south point for Runway 36 or north point for Runway 18.

8.1.4.5.11.5.4. **(Added-8FW)** Report “south point” or “north point” as appropriate and turn 90-to-intial.

8.1.4.5.11.5.5. **(Added-8FW)** Turn to initial as appropriate and report “initial”. Pilots re-entering, descend to 1,500' MSL after intercepting initial.

- 8.1.4.5.11.6. **(Added-8FW)** Perch Breakout (Attachment 10).
 - 8.1.4.5.11.6.1. **(Added-8FW)** Execute the breakout by climbing to 2,000' MSL. Turn SW for Runway 36 or NW for Runway 18. Expect further instructions from tower or re-enter via VFR entry points.
- 8.1.4.5.12. **(Added-8FW)** Unexpended Ordnance Procedures.
 - 8.1.4.5.12.1. **(Added-8FW)** Follow procedures outlined in the 8FW IFG.
 - 8.1.4.5.12.2. **(Added-8FW)** Aircraft with unexpended live or heavyweight inert ordnance will not fly overhead patterns.
- 8.1.4.5.13. **(Added-8FW)** Rectangular Pattern.
 - 8.1.4.5.13.1. **(Added-8FW)** Weather minimums are 500' above pattern altitude and 3 nm visibility.
 - 8.1.4.5.13.2. **(Added-8FW)** The rectangular pattern will normally be flown to the west of the airfield.
 - 8.1.4.5.13.3. **(Added-8FW)** Pilots will fly a rectangular pattern with reference to the runway at 1,000' MSL.
 - 8.1.4.5.13.4. **(Added-8FW)** If directed by tower, an east rectangular pattern may be utilized.
- 8.1.4.5.14. **(Added-8FW)** Helicopter Pattern.
 - 8.1.4.5.14.1. **(Added-8FW)** Helicopters normally approach from the east and report to the tower over the reservoir.
 - 8.1.4.5.14.2. **(Added-8FW)** Helicopter Pattern altitude is 500' MSL.
 - 8.1.4.5.14.3. **(Added-8FW)** Normal landings are at the intersection of the parallel taxiway and Taxiway "C."
 - 8.1.4.5.14.4. **(Added-8FW)** Helicopters will normally make a straight-in approach to the landing area via Taxiway C.
- 8.1.4.5.15. **(Added-8FW)** Landing.
 - 8.1.4.5.15.1. **(Added-8FW)** Wake Turbulence/Wind Shear.
 - 8.1.4.5.15.1.1. **(Added-8FW)** Pilots must be vigilant for wake turbulence from previous aircraft and possible wind shear due to the shielding effect of the hills on either side of short final to Runway 36.
 - 8.1.4.5.15.2. **(Added-8FW)** Heavy Aircraft Arrivals.
 - 8.1.4.5.15.2.1. **(Added-8FW)** Heavy aircraft are defined in FAAO 7110.65.
 - 8.1.4.5.15.2.2. **(Added-8FW)** The tower suspends runway operations only after C-5 or Boeing 747 heavy aircraft landings and departures, or when any heavy aircraft makes a 180-degree or greater turn on the runway. Runway operations will resume after 8 OSS/OSAM has conducted a complete runway check for FOD and has advised the tower the runway is clear of FOD.

8.1.4.5.16. **(Added-8FW)** Fuel Requirements and Bingo Fuel.

8.1.4.5.16.1. **(Added-8FW)** Bingo Fuel.

8.1.4.5.16.1.1. **(Added-8FW)** Kunsan ATIS will announce the current Kunsan Recovery status along with the 8FW alternate/divert. E.g., *“Kunsan is IFR, Gwangju”*.

8.1.4.5.16.1.2. **(Added-8FW)** The 8FW IFG lists recommended VFR and IFR bingos for local training areas.

8.1.4.5.16.2. **(Added-8FW)** Divert Fuel.

8.1.4.5.16.2.1. **(Added-8FW)** Arrive at Kunsan initial with a minimum of 1700 pounds during VFR conditions unless recovery fuel is increased by the SOF. The SOF may increase recovery fuel depending on divert base conditions or if divert base is greater than 75nm away. E.g., *“Kunsan is VFR Daegu 8FW aircraft be on initial with 2K”*

8.1.4.5.16.3. **(Added-8FW)** Pattern Status Change from VFR to IFR.

8.1.4.5.16.3.1. **(Added-8FW)** If ceiling and visibility go below the weather category required to execute an approach, the SOF will coordinate for a call on UHF and VHF Guard. Holding flights will pass divert time to the SOF. E.g., *“Viper 11, divert fuel at 12:15 Zulu”*

8.1.4.5.17. **(Added-8FW)** Divert Airfields.

8.1.4.5.17.1. **(Added-8FW)** General.

8.1.4.5.17.1.1. **(Added-8FW)** The 8FW SOF will designate a daily divert airfield.

8.1.4.5.17.1.2. **(Added-8FW)** Anytime airfield, runway, alternates or divert fuel status changes, the 8FW SOF will ensure the appropriate information is passed to 8FW aircraft and airborne aircraft will acknowledge change in status.

8.1.4.5.17.2. **(Added-8FW)** Divert With Unexpended Ordnance Procedures.

8.1.4.5.17.2.1. **(Added-8FW)** When recovering at an alternate field, contact the local SOF (if present) for instructions.

8.1.4.5.17.2.2. **(Added-8FW)** Aircraft with unexpended live or heavyweight inert ordnance will not fly overhead patterns.

8.1.4.5.18. **(Added-8FW)** Runway Closure Divert Fuel Considerations.

8.1.4.5.18.1. **(Added-8FW)** If the runway is closed or other factors prevent immediate recovery, flights will hold as required (VFR) or coordinate holding with Kunsan Approach (IFR).

8.1.4.5.18.2. **(Added-8FW)** Contact the SOF and pass divert fuel with time stamp.

8.1.4.5.18.3. **(Added-8FW)** If an extended runway closure is expected, the SOF will direct flights to proceed to the divert airfield upon reaching divert fuel or

sooner if conditions warrant. When the decision to divert has been made, if time and fuel remaining allow, Osan AB is the preferred divert due to F-16 support capability.

8.1.4.5.18.4. **(Added-8FW)** Flights below divert fuel retain several recovery options if the runway does not reopen. The options include divert to a closer alternate airfield (Gwangju AB and Seosan AB are 48nm from Kunsan AB; 30nm closer than Osan AB), or if time and fuel permits landing at Kunsan AB on the ALS. Expect approximately 30 minutes to set up the ALS.

8.1.4.5.19. **(Added-8FW)** Recall Procedures/Weather Divert.

8.1.4.5.19.1. **(Added-8FW)** Recall Procedures.

8.1.4.5.19.1.1. **(Added-8FW)** The tower will broadcast a recall on Guard. The SOF will pass the recall via landline to Cobra. Cobra will also broadcast the recall on Guard.

8.1.4.5.19.1.2. **(Added-8FW)** Pilots shall acknowledge the recall with the SOF.

8.1.4.5.19.1.3. **(Added-8FW)** The SOF shall advise approach and tower watch supervisors as soon as possible for planning purposes.

8.1.4.5.19.2. **(Added-8FW)** Weather Divert Procedures.

8.1.4.5.19.2.1. **(Added-8FW)** Time and conditions permitting, the decision to divert should be coordinated by the SOF.

8.1.4.5.19.2.2. **(Added-8FW)** Any time a divert is initiated without 8FW SOF coordination, contact the 8FW SOF after initial divert actions are complete.

8.1.4.5.19.2.3. **(Added-8FW)** 8 OG/CC or designated representative approval is required prior to aircraft launching for RTB from divert airfields.

8.1.4.5.19.2.4. **(Added-8FW)** 8FW Aircraft will divert as two ships if practical.

8.1.4.5.19.3. **(Added-8FW)** The primary divert airfields are: Gwangju, Haemi (Seosan AB), Osan, and Daegu.

8.1.4.5.19.4. **(Added-8FW)** If weather, airfield status or other circumstances preclude using the primary divert airfield, a secondary divert airfield will be used. Secondary diverts in order of preference are: Yech'on, Che'ongju, Suwon, Sache'on, Gangneung, Jungwon, Wonju, Iwakuni (Japan), Fukuoka (Japan), Tsuiki (Japan), Yokota (Japan), Atsugi (Japan).

8.1.4.5.19.5. **(Added-8FW)** In addition, Muan International, Inche'on International, Gimpo International, Seoul AB, Pohang, Pusan, Camp Humphreys (A-551), and Jeju International are suitable as emergency use airfields.

8.1.4.5.19.6. **(Added-8FW)** Gimhae International may be considered as a divert airfield when the USAF detachment (Defense Contract Management Agency, DSN 787-4415) is conducting flight operations. At all other times, arresting

cables will not be available and Gimhae should be considered as an emergency-only airfield.

8.1.4.6. **(Added-8FW)** Approved Alternate missions/Fallout.

8.1.4.6.1. **(Added-8FW)** Alternate Mission procedures.

8.1.4.6.1.1. **(Added-8FW)** Any mission may use intercepts, formation, or instruments as an alternate mission profile. AHC may be flown in an approved configuration.

8.1.4.6.1.2. **(Added-8FW)** ACT missions may use ACT, (D)ACM or (D)BFM as alternate missions.

8.1.4.6.1.3. **(Added-8FW)** 8FW alternate missions of BFM, TI, BSA, AHC and basic instruments can be briefed as “standard” IAW procedures published in the 8FW IFG and the 8FW Wolfpack Standards.

8.1.4.6.2. **(Added-8FW)** Fallout Procedures.

8.1.4.6.2.1. **(Added-8FW)** Single Ship

8.1.4.6.2.1.1. **(Added-8FW)** Unscheduled single-ship sorties (due to fall out, late takeoffs, etc.) may be approved by the Top-3. AHC (non-dual maneuvers and configuration permitting), BSA on a controlled range, briefed fall-out missions or instrument training profiles will be used.

8.1.4.6.2.1.2. **(Added-8FW)** Single-ship P-518 missions shall only be flown by P-518 qualified flight leads.

8.1.4.6.2.1.3. **(Added-8FW)** Squadron Top-3 will direct which profile the pilot will fly based on experience level, mission and weather conditions.

8.1.4.6.2.2. **(Added-8FW)** Line-up changes.

8.1.4.6.2.2.1. **(Added-8FW)** Pilots or flight leads will notify their squadron operations desk of any flight line-up change (i.e., re-numbering, new tail number, new callsign, new departure time, etc.) and request another flight plan be filed if any element of the flight will take off after the first element is airborne.

8.1.4.7. **(Added-8FW)** Large Force Employment (LFE).

8.1.4.7.1. **(Added-8FW)** General Procedures.

8.1.4.7.1.1. **(Added-8FW)** Local LFEs of 12 or more aircraft or with aircraft from other than the 8FW require coordination IAW ACCR 55-9 and 7AFI 10-1301. Brief the 8 OG/CC seven days prior with an update 48 hours prior to execution. Coordinate all LFE's through 8 OSS/OSOS.

8.1.4.7.1.2. **(Added-8FW)** These restrictions are not applicable to local OREs or HHQ tasking such as FOAL EAGLE, MAX THUNDER or PEN ORE/ORIs.

8.1.4.7.1.3. **(Added-8FW)** 8 OSS/OSA representatives will be invited to attend the mass brief by the mission commander.

8.1.4.7.1.4. **(Added-8FW)** Either the squadron commander, operations officer or

designated Top-3 must also attend the mass brief for the LFE.

8.1.4.7.1.5. **(Added-8FW)** The 8FW SOF will coordinate with RAPCON and ground control to ensure an on-time takeoff of all LFEs.

8.1.4.7.1.6. **(Added-8FW)** During exercises the 8FW SOF will determine takeoff and landing priorities after coordination with the 8FW Mission Director or ICC, if necessary.

8.1.4.7.1.7. **(Added-8FW)** Mission commanders will advise ground control at least 15 minutes prior to the scheduled departure time if requiring a controlled takeoff time.

8.1.4.7.2. **(Added-8FW)** Communications out Procedures.

8.1.4.7.2.1. **(Added-8FW)** General.

8.1.4.7.2.1.1. **(Added-8FW)** Comm-out procedures may be conducted as approved by the 8 OG/CC. Comm-out operations do not restrict pilots from using the radios when required.

8.1.4.7.2.1.2. **(Added-8FW)** The mission commander will provide 8 OSS/OSA and the SOF strike package information consisting of call signs, flight size, radio silence time, start/taxi/takeoff times, squawks and direction of turnout by phone or at the mass briefing.

8.1.4.7.2.1.3. **(Added-8FW)** The flying squadrons will provide Top-3 coordination information and any special requirements with maintenance (i.e., parking order, configurations, arming procedures and EOR requirements).

8.1.4.7.2.1.4. **(Added-8FW)** Pilots will adhere to all mass brief procedures for start, taxi and takeoff.

8.1.4.7.2.1.5. **(Added-8FW)** Pilots unable to make briefed takeoff time will wait until all aircraft are airborne and use normal comm-in procedures.

8.1.4.7.2.1.6. **(Added-8FW)** Tower will signal takeoff clearance with a steady green light.

8.1.4.7.2.1.7. **(Added-8FW)** To cancel takeoff clearance, the tower will signal the aircraft with a steady red light or will break radio silence and use tower or Guard frequency.

8.1.4.7.2.1.8. **(Added-8FW)** If the field is VFR, depart as briefed. Push to Cobra frequency when clear of the Class "C" Airspace.

8.1.4.7.2.1.9. **(Added-8FW)** If the field is IFR, use the wing standard radar assisted trail departure and comm-in procedures.

8.1.4.7.2.2. **(Added-8FW)** Abnormal Procedures.

8.1.4.7.2.2.1. **(Added-8FW)** Flights may terminate their comm-out launch at anytime by stating "C/S, terminating comm-out." If the reason for terminating the comm-out launch was temporary, the flight lead may resume the comm-out launch by stating "C/S, resuming comm-out."

8.1.4.7.2.2.2. **(Added-8FW)** Termination of the comm-out portion of the launch may be done at any level of command and control to ensure flight safety.

8.1.4.7.2.2.3. **(Added-8FW)** In the event of an emergency, comm-out procedures will be terminated and the tower and RAPCON will establish radio contact with all aircraft and assume positive control of the airspace and separation and deconfliction of aircraft.

8.1.4.7.3. **(Added-8FW)** LFE Recovery Procedures.

8.1.4.7.3.1. **(Added-8FW)** Recovery procedures will be comm-in.

8.1.4.7.3.2. **(Added-8FW)** Flight leads will plan to arrive at the IAF with a minimum of ten minutes fuel reserve to allow for sequencing.

8.1.4.7.3.3. **(Added-8FW)** Flight leads will advise approach control, on initial contact, of playtime in minutes remaining.

8.1.4.8. **(Added-8FW)** Local Weather Procedures.

8.1.4.8.1. **(Added-8FW)** Wear of the Anti-Exposure Suit.

8.1.4.8.1.1. **(Added-8FW)** All sorties when the water temperature is 60°F or less.

8.1.4.8.1.2. **(Added-8FW)** If water temperature is 51oF- 60oF and local air temperature is 70o F or greater, the 8 OG/CC may waive anti-exposure suit wear.

8.1.4.8.1.3. **(Added-8FW)** For flights that will be conducted completely over land, anti-exposure suit wear is optional. If the anti-exposure suit is not worn, flights will **NOT** be able to flex to over water airspace.

8.1.4.8.1.4. **(Added-8FW)** Weather will notify the SOF when the temperature is forecasted or observed at or below -20 o F. The SOF will coordinate with the OG to cancel flying if required

8.1.4.8.2. **(Added-8FW)** Ice FOD Procedures.

8.1.4.8.2.1. **(Added-8FW)** The 8FW SOF will declare Ice FOD procedures are in effect.

8.1.4.8.2.2. **(Added-8FW)** Prior to start in Ice FOD conditions, ensure maintenance has cleared an area 3' (minimum) radius directly below the intake of all standing water, slush, snow and ice.

8.1.4.8.2.3. **(Added-8FW)** When Ice FOD procedures are in effect, the SOF and Top 3s will coordinate for the first aircraft of the go to perform an Ice FOD check. The first aircraft will run outside the HAS or flow for five minutes. The pilot will report status of icing to the SOF and to squadron operations. If icing is observed, the pilot will shut down. If no icing is observed then the SOF will direct continued operations, however this does not terminate Ice FOD procedures.

8.1.4.8.2.4. **(Added-8FW)** After engine start, the fireguard will proceed to the front of the aircraft to assume the additional duty of Ice FOD observer and watch

for ice accumulation on the intake lip as well as for fire. The Ice FOD observer/fireguard will remain in position until relieved by the crew chief. Ensure the ice FOD observer uses a flashlight to monitor the inlet lip during nighttime operations.

8.1.4.8.2.5. **(Added-8FW)** During Ice FOD conditions, pilots will start after the first aircraft has reported back “Negative Ice FOD”, but will remain in the HAS or flow until cleared to proceed with operations via SOF or TOP-3.

8.1.4.8.2.6. **(Added-8FW)** During Ice FOD conditions, while arming, de-arming, and hot pit refueling; EOR or refueling personnel will ensure the appropriate locations are cleaned and have at least one observer per two aircraft monitor the intake lip for ice accumulation.

8.1.4.8.2.7. **(Added-8FW)** During Ice FOD procedures, the 8FW SOF is responsible for orchestrating the flow of aircraft into EOR. Objectives are to ensure timely arming of all outbound aircraft, and to prevent extended delays outside of EOR where an intake observer is not available. The ground controller in the tower will direct aircraft movement from parking to EOR as determined by the SOF. A total of six aircraft will be allowed to hold in EOR.

8.1.4.8.2.8. **(Added-8FW)** If visible ice accumulation occurs, the pilot will be notified and engine shut down procedures will be accomplished. The pilot will inform the 8FW SOF and squadron operations that Ice FOD accumulation was observed. The SOF will be responsible for ensuring that all aircraft on the airdrome with visible ice buildup shut down immediately. Those without ice accumulation will taxi to park and shut down or launch if in EOR, ready for takeoff, and the lack of visible inlet icing is confirmed. If required to shut down for inlet icing, write up the icing incident in the AFTO Form 781, *ARMS Aircrew/Mission Flight Data Document*.

8.1.4.8.3. **(Added-8FW)** Lightning within 5nm

8.1.4.8.3.1. **(Added-8FW)** Lightning Watch: It is advisory in nature and has no impact on local operations.

8.1.4.8.3.2. **(Added-8FW)** Lightning Warning: Lightning is observed within 5 miles of the base. The following steps shall be taken:

8.1.4.8.3.2.1. **(Added-8FW)** Pilots will not step to the aircraft.

8.1.4.8.3.2.2. **(Added-8FW)** Aircraft in the midst of start or shut down may continue. All personnel will take appropriate shelter and/or clear the flightline expeditiously as the mission allows.

8.1.4.8.3.2.3. **(Added-8FW)** Arm/de-arm procedures will continue at the SOF’s discretion. The emphasis should be on arming/de-arming quickly to allow aircraft to launch/taxi back.

8.1.4.8.3.2.4. **(Added-8FW)** SOF will determine whether aircraft may taxi to/from the RWY depending on current and forecasted weather conditions.

8.1.4.8.3.2.5. **(Added-8FW)** SOF will determine whether or not aircraft may

takeoff or land.

8.1.4.8.3.2.6. **(Added-8FW)** All outdoor activities will cease as quickly as safety and mission allow.

8.1.4.9. **(Added-8FW)** Cross-Country Procedures.

8.1.4.9.1. **(Added-8FW)** General Policies.

8.1.4.9.1.1. **(Added-8FW)** Cross-country planning procedures. Pilots desiring to fly cross-country will request approval by their squadron commander or designated representative. Once approved by the squadron commander, submit a request to the 8 OG/CC thirty-five days prior to the proposed departure date. If requesting a Cross-Country off of the Korean peninsula, pilots will route a 8FW Form 20 to 7AF for approval.

8.1.4.9.1.2. **(Added-8FW)** Cross-country flights will be flown IFR to the maximum extent possible. Proposed VFR flight legs must be annotated on the 8FW Form 20.

8.1.4.9.1.3. **(Added-8FW)** All off-station sorties will plan to land no later than sunset, unless approved by the 8 OG/CC.

8.1.4.9.1.4. **(Added-8FW)** Pilots will comply with the preplanned itinerary unless the 8 OG/CC or designated representative approves a deviation or a deviation results from an emergency/weather condition. Pilots will make deviation requests through the 8FW/CP via telephone patch to the 8 OG/CC or designated representative.

8.1.4.9.1.5. **(Added-8FW)** JP-4/5/8 single point refueling, liquid oxygen, nitrogen and oil servicing must be available at all planned destinations. Reference the 8 FW IFG for servicing and JOAP procedures and for required aircraft equipment (covers, pins, forms, etc.).

8.1.4.9.1.6. **(Added-8FW)** The following is a list of approved cross-country bases (8 OG/CC approval is required to land at other bases):

8.1.4.9.1.6.1. **(Added-8FW)** Japan: Atsugi NAS, Iwakuni MCAS, Kadena AB, Yokota AB and Misawa AB.

8.1.4.9.1.6.2. **(Added-8FW)** Korea: Osan AB, Gimhea

8.1.4.9.1.7. **(Added-8FW)** The pilot in command is responsible for aircraft security IAW AFI 31-101, *The Air Force Installation Security Program*, and the 8FW Supplement 1. Pilots will pre-coordinate aircraft security arrangements at the destination to ensure Air Force requirements are met. If parked at a non-DOD airfield or an airfield without Priority "C" parking facilities, pilots will remain with the aircraft until proper security is established.

8.1.4.9.1.8. **(Added-8FW)** Request the installation 8FW/CP and 8 SFS supervisor establish an EAL for the aircraft. If anyone not on the EAL from the installation needs access to the aircraft, (e.g., maintenance, fuels, etc.) a pilot must authorize entry.

8.1.4.9.1.9. **(Added-8FW)** Pilots will comply with all cross-country/divert checklists located in the 8FW IFG for all cross-country flights and static displays.

8.1.4.9.1.10. **(Added-8FW)** Flights will consist of a two-ship minimum, with the exception of depot jet drop offs at Gimhea. Exceptions require 8 OG/CC approval.

8.1.4.9.2. **(Added-8FW)** Tactical Training.

8.1.4.9.2.1. **(Added-8FW)** Low-Levels. Plan low-level missions at off-station bases to ensure compliance with local noise sensitive and obstruction clearance restrictions. All low-level maps will be chummed.

8.1.4.9.2.2. **(Added-8FW)** ACT. All (D)ACT missions must be pre-briefed IAW AFI 11-2F-16V3. Conduct face-to-face briefings and de-briefings if possible. **Note:** The travel POD must be removed by qualified personnel prior to any ACBT missions.

8.1.4.9.3. **(Added-8FW)** Cross-Country Go/No-Go Procedures.

8.1.4.9.3.1. **(Added-8FW)** Prior to departure all Go/No-Go items must be accomplished and current for the duration of the cross-country.

8.1.4.9.3.2. **(Added-8FW)** CAPS are considered “current” until RTB from cross-country flights. Other go/no-go updates will be checked and passed by the Squadron Top-3 to include FCIF information.

8.1.4.9.3.3. **(Added-8FW)** Obtain flight orders before departure.

8.1.4.9.3.4. **(Added-8FW)** Required Aircraft Equipment.

8.1.4.9.3.4.1. **(Added-8FW)** An oil sample kit (JOAP) if required (every ten hours), JFS pump handle (one per flight), Four probe covers, Intake cover, Tank(s) and weapons safety pins (A/R), F-16 APEX tool to remove panels, FLIP, AFTO Form 781, Aircraft guns will be mechanically and electrically safed (and emptied if going to a static display).

8.1.4.9.4. **(Added-8FW)** Off-Station Procedures.

8.1.4.9.4.1. **(Added-8FW)** Pilots are responsible for adherence to cross-country procedures and completion of aircraft maintenance requirements outlined in the 8FW IFG.

8.1.4.10. **(Added-8FW)** Additional Guidance.

8.1.4.10.1. **(Added-8FW)** Big Top Movement Procedures.

8.1.4.10.1.1. **(Added-8FW)** When the ROK President travels in Korea, the airspace surrounding him is referred to as “Temporary Prohibited Airspace” and the flight/ground vehicles are referred to as a “Big Top Movement.”

8.1.4.10.1.2. **(Added-8FW)** Squadron Top-3 will brief “Big Top Movement” information and flight restrictions to pilots.

8.1.4.10.1.3. **(Added-8FW)** Contact the 8FW SOF if problems arise while airborne and expect positive control from Cobra to cross or avoid the corridor. If

the movement area is within Kunsan's airspace, ATC will hold aircraft and recover only after approval by the BWDO thru the 8FW SOF (if on duty) or coordination with 8 OSS/OSAM (i.e., emergency, fuel status, etc.).

8.1.4.10.1.4. **(Added-8FW)** Pilots will not fly directly above, below, behind or in front of the "Big Top Movement." Pilots will remain at least 10nm either side of the ground track.

8.1.4.10.2. **(Added-8FW)** Noise Abatement/Quiet Hour Procedures.

8.1.4.10.2.1. **(Added-8FW)** Full Quiet Hours. Arrivals, departures, any aircraft movement or engine runs are prohibited.

8.1.4.10.2.2. **(Added-8FW)** Partial Quiet Hours. Only straight-in full stop landings and taxiing of aircraft are permitted.

8.1.4.10.3. **(Added-8FW)** Cameras.

8.1.4.10.3.1. **(Added-8FW)** Cameras will not be carried on 8FW aircraft except by certified Combat Camera personnel.

8.1.4.10.4. **(Added-8FW)** Environmental Restrictions.

8.1.4.10.4.1. **(Added-8FW)** Supersonic restrictions IAW ACCR 55-9.

8.1.4.10.5. **(Added-8FW)** Bird Watch Conditions.

8.1.4.10.5.1. **(Added-8FW)** During 8 FW flying, the 8 FW SOF has the authority to declare bird watch condition. At other times, 8 OSS/OSAM shall declare bird watch conditions. All pilots are responsible for immediately reporting hazardous bird activity to all appropriate agencies/flight members.

8.1.4.10.5.2. **(Added-8FW)** Definitions of bird conditions are as follows:

8.1.4.10.5.2.1. **(Added-8FW)** Low - No significant bird activity observed.

8.1.4.10.5.2.2. **(Added-8FW)** Moderate - Concentration of birds observed or predicted to be a possible hazard to safe flying operations.

8.1.4.10.5.2.3. **(Added-8FW)** Severe - Heavy concentrations of birds present an immediate hazard to safe flying operations.

8.1.4.10.5.3. **(Added-8FW)** The following procedures are used for the bird condition at each specific location:

8.1.4.10.5.3.1. **(Added-8FW)** Traffic pattern.

8.1.4.10.5.3.1.1. **(Added-8FW)** Low: No restrictions

8.1.4.10.5.3.1.2. **(Added-8FW)** Moderate: Formation takeoffs or landings are prohibited and low approaches (single-ship or formation) are restricted to 500' AGL.

8.1.4.10.5.3.1.3. **(Added-8FW)** Severe: Takeoffs and landings by 8FW are limited to mission-critical operations and must be approved by the 8 OG/CC or designated representative.

8.1.4.10.5.3.2. **(Added-8FW)** Low-level zones (declared by airborne pilots

to the 8FW SOF).

8.1.4.10.5.3.2.1. **(Added-8FW)** Low: No restrictions

8.1.4.10.5.3.2.2. **(Added-8FW)** Moderate: Minimum altitude is 1,000' AGL.

8.1.4.10.5.3.2.3. **(Added-8FW)** Severe - Low-level flying is prohibited for 8FW aircraft in the specified zones.

8.1.4.10.5.3.3. **(Added-8FW)** Weapons/tactical ranges (declared by the ranger/airborne pilots to the 8FW SOF).

8.1.4.10.5.3.3.1. **(Added-8FW)** Low - No restrictions.

8.1.4.10.5.3.3.2. **(Added-8FW)** Moderate - No run-ins below 1,000' AGL. No weapons deliveries with recoveries below 1,000' AGL.

8.1.4.10.5.3.3.3. **(Added-8FW)** Severe - Operations below 2,000' AGL are prohibited, including diving delivery recoveries.

8.1.5. Section E. Weapons Employment.

8.1.5. **(8FW)** Section E. Weapons Employment.

8.1.5.1. **(Added-8FW)** General Guidance.

8.1.5.1.1. **(Added-8FW)** Reference ACCR 55-6, ACCR 55-22, ACCR 55-5, AFI 11-214, AFI 11-2F-16V3, 8FW Messages and 8 OG FCIFs for specific range procedures.

8.1.5.2. **(Added-8FW)** Air-to-Surface Procedures.

8.1.5.2.1. **(Added-8FW)** Off-Range Attacks.

8.1.5.2.1.1. **(Added-8FW)** Minimum recovery altitude for simulated off-range attacks is 500' AGL or IAW AFI 11-2F-16V1, whichever is higher. **Note:** Stay within the limits of assigned airspace.

8.1.5.2.2. **(Added-8FW)** Live Ordnance.

8.1.5.2.2.1. **(Added-8FW)** Live ordnance routes will be planned and flown to avoid populated areas IAW ACCR 55-22, ACCR 55-6 and ACCR 55-5.

8.1.5.2.2.2. **(Added-8FW)** Live Maverick missile rocket motor leads will not be connected until at EOR except in combat.

8.1.5.2.2.3. **(Added-8FW)** Live ordnance weather minimums IAW AFI 11-2F-16V3 and Low Altitude Operating Procedures IAW ACCR 51-1.

8.1.5.3. **(Added-8FW)** Pil Sung Range Complex (Restricted Area R-110).

8.1.5.3.1. **(Added-8FW)** Weather minimums. Conventional weapons delivery weather minimums are detailed in ACCR 55-5.

8.1.5.3.2. **(Added-8FW)** Reference ACCR 55-5 for target locations, authorized ordnance, range entry, no-fly areas, strafe restrictions, live ordnance procedures, LGB

operations, electronic warfare procedures, emitter sites and operations, night restrictions, night target ordnance restrictions and fire code procedures.

8.1.5.3.3. **(Added-8FW)** All pilots shall receive Pil Sung strafe academics from an IP prior to strafing. Each pilot will fly one “DRY” LAS pattern at Pil Sung prior to “HOT” strafing. This is a one-time only requirement – “DRY” passes are not required on every sortie.

8.1.5.3.4. **(Added-8FW)** For low angle strafe, Pil Sung will operate under Class “B” procedures. A bomb scoring technician will pass total hits after each strafe pass, but will not be in position to foul individual pilots.

8.1.5.4. **(Added-8FW)** Jik-Do Range Complex (Restricted Area R-105)

8.1.5.4.1. **(Added-8FW)** Reference 7AF SOP, for target locations, authorized ordnance, range entry/exit, no fly areas, ordnance/strafe restrictions, and all other range guidelines.

8.1.5.5. **(Added-8FW)** Air Combat Training (ACBT).

8.1.5.5.1. **(Added-8FW)** Aircraft configured as CAT 1 with 370-gallon external fuel tanks will not fly (D)BFM but may fly (D)ACM or (D)ACT.

8.1.5.5.2. **(Added-8FW)** Use of training areas, specific geographic boundaries, GCI procedures and pilot responsibilities are outlined in ACCR 55-9.

8.1.5.6. **(Added-8FW)** Intercept Training.

8.1.5.6.1. **(Added-8FW)** Pilots will follow procedures during intercept missions described in ACCR 55-9.

8.1.5.6.2. **(Added-8FW)** Intercepts with heavy weight ordnance. Do not conduct dedicated intercept training with live ordnance loaded on the aircraft. This does not include opposed SAT training.

8.1.5.7. **(Added-8FW)** Electronic Counter Measure/On Board Counter Measure Procedures.

8.1.5.7.1. **(Added-8FW)** Do not transmit if combat settings are loaded. ECM Pods with training settings can transmit under following conditions:

8.1.5.7.1.1. **(Added-8FW)** In training areas over the Yellow Sea, south of N37-16.000.

8.1.5.7.1.2. **(Added-8FW)** In overland training areas, south of a line between Suwon AB and Gangneung AB.

8.1.5.7.1.3. **(Added-8FW)** In training areas over the east sea, south of N37-45.000.

8.1.5.7.1.4. **(Added-8FW)** IAWAFI 11-214/8FW Supplement and applicable range/area instructions.

8.1.5.7.2. **(Added-8FW)** Chaff is not authorized in P-518.

8.1.5.7.3. **(Added-8FW)** Flare usage (Self defense flares; MJU-7, MJU-10, etc.)

8.1.5.7.3.1. **(Added-8FW)** 700' AGL minimum on any range or over water.

8.1.5.7.3.2. **(Added-8FW)** 2,000' AGL minimum in Pilsung Range (R-110) with fire condition one or when over land inside SUA (i.e., MOAs, Prohibited and Restricted areas).

8.1.5.7.3.3. **(Added-8FW)** Do not employ over densely populated areas.

8.1.5.8. **(Added-8FW)** Kunsan Airfield Attacks Inside the Class "C" Airspace.

8.1.5.8.1. **(Added-8FW)** "Airfield attacks" are attacks that disrupt normal airfield operations. This does not include JDAM/LGB level attacks from medium altitude while under RAPCON control.

8.1.5.8.2. **(Added-8FW)** Restrictions on airfield attacks include: Tower approval, airspeed <500 KCAS, altitude >1,000' AGL, WX > 3,000' ceiling and 5sm visibility, afterburner approved only if required for safety of flight.

8.1.5.8.3. **(Added-8FW)** If the airfield attack must be terminated by ATC, ATC will use the phraseology "KNOCK IT OFF".

8.1.6. Section F. Abnormal Procedures.

8.1.6. **(8FW)** Section F. Abnormal Procedures.

8.1.6.1. **(Added-8FW)** Aircraft Emergencies.

8.1.6.1.1. **(Added-8FW)** General Guidance.

8.1.6.1.1.1. **(Added-8FW)** The senior fire official is the only person who can terminate an emergency.

8.1.6.1.1.2. **(Added-8FW)** The normal barrier configuration during 8FW flying is three raised departure end cables (up/up/up) for departures and two raised departure end cables (up/down/up) for recoveries. For wet runway operations or reduced RCR/braking action, recoveries will mirror the launch cable configuration (up/up/up).

8.1.6.1.1.3. **(Added-8FW)** The 8FW SOF will determine the necessity of a runway check for IFEs involving 8FW aircraft. For all other IFEs, 8 OSS/OSAM will conduct a runway check.

8.1.6.1.2. **(Added-8FW)** Declaring an Aircraft Emergency

8.1.6.1.2.1. **(Added-8FW)** Pilots will declare an emergency any time the checklist directs "land as soon as possible" or any time special handling of the aircraft is needed per T.O.1F-16C/CG-1, Chapter 3.

8.1.6.1.2.2. **(Added-8FW)** Pilots declaring an IFE or ground emergency shall relay the following information (time permitting) to the tower, Kunsan AB Approach or 8FW SOF:

8.1.6.1.2.2.1. **(Added-8FW)** Aircraft call sign, type and tail number (if available).

8.1.6.1.2.2.2. **(Added-8FW)** Nature of emergency.

8.1.6.1.2.2.3. **(Added-8FW)** Fuel remaining in time.

8.1.6.1.2.2.4. **(Added-8FW)** Number of personnel on board.

8.1.6.1.2.2.5. **(Added-8FW)** Aircraft position and intentions.

8.1.6.1.2.2.6. **(Added-8FW)** Landing runway, estimated landing time, and cable engagement expected.

8.1.6.1.2.2.7. **(Added-8FW)** Type of ordnance on board.

8.1.6.1.2.2.8. **(Added-8FW)** Status of EPU.

8.1.6.1.2.3. **(Added-8FW)** When declaring an IFE or requiring special assistance, time and situation allowing, contact the 8FW SOF. All IFEs landing at Kunsan AB will contact the SOF when able.

8.1.6.1.3. **(Added-8FW)** Single Frequency Approach (SFA).

8.1.6.1.3.1. **(Added-8FW)** A SFA is available from Kunsan Approach on local UHF CH 12. The SFA will be used during all IFE recoveries requiring coordination between the pilot, SOF, ATC and emergency response personnel.

8.1.6.1.3.2. **(Added-8FW)** All IFEs should contact ATC on local UHF CH 12 for radar service and SOF communication.

8.1.6.1.3.3. **(Added-8FW)** Once clear of the active runway, ground control will direct the aircraft to the EOR spot closest to the runway or to the appropriate area on the airfield (i.e., hot brakes, hydrazine, etc.). Once parked, the pilot will contact the Incident Commander (IC) on local UHF CH 12. Advise the IC of the nature of the problem, intentions and coordinate termination of the IFE.

8.1.6.1.4. **(Added-8FW)** Ground Emergencies.

8.1.6.1.4.1. **(Added-8FW)** Upon declaration of a ground emergency by the pilot, Kunsan ground control will direct the emergency aircraft to local UHF CH 12 to contact the IC.

8.1.6.1.4.2. **(Added-8FW)** When local UHF CH 12 is already in use by another emergency aircraft, ATC will coordinate with the SOF and assign another discrete frequency if available.

8.1.6.2. **(Added-8FW)** NORDO Recovery.

8.1.6.2.1. **(Added-8FW)** Monitor Guard and either Kunsan Approach Control frequency or Kunsan Tower frequency and transmit in the blind.

8.1.6.2.2. **(Added-8FW)** While in VMC, maintain VMC and fly VFR hemispheric altitudes to the appropriate VFR entry point "Alpha," "Bravo," "Charlie" or "Delta" for the last known runway in use.

8.1.6.2.3. **(Added-8FW)** Upon recovery to the pattern, or on an instrument approach, expect light gun signals on final from tower.

8.1.6.3. **(Added-8FW)** Hung Ordnance Procedures.

8.1.6.3.1. **(Added-8FW)** General.

8.1.6.3.1.1. **(Added-8FW)** When recovering at an alternate field, contact the local SOF for instructions.

8.1.6.3.2. **(Added-8FW)** Live Ordnance (Secure or Unsecure).

8.1.6.3.2.1. **(Added-8FW)** Aircraft landing with hung live ordnance will proceed to the hot cargo pad and park. Aircraft landing on Runway 36 can expect to back taxi down the runway.

8.1.6.3.2.2. **(Added-8FW)** On all hung live ordnance recoveries, the senior fire official will be the initial IC.

8.1.6.3.2.3. **(Added-8FW)** Initial marshalling for response personnel will be on DV South. The IC will determine procedures for securing ordnance by fire personnel, EOD and de-arm crews.

8.1.6.3.2.4. **(Added-8FW)** The IC will inform the pilot when the incident is terminated and the ordnance is secure. If the hung ordnance is declared safe by the IC, pilots can continue with normal taxi-back procedures.

8.1.6.3.2.5. **(Added-8FW)** For hung unsecure, aircraft will shut down on the hot cargo pad.

8.1.6.3.3. **(Added-8FW)** Hot Guns/Forward Firing Ordnance (FFO).

8.1.6.3.3.1. **(Added-8FW)** Proceed to the hot cargo pad and park pointed west (toward the water). Aircraft landing on Runway 36 can expect to make a left 180° turn and back taxi down the Runway to the hot cargo pad.

8.1.6.3.3.1.1. **(Added-8FW)** An emergency does not need to be declared unless the rocket is unsecure (If motor fires without tube ejection (unsecure safe) or with tube ejection (unsecure unsafe)).

8.1.6.3.3.2. **(Added-8FW)** Allow EOR crew to check the condition of the ordnance.

8.1.6.3.3.3. **(Added-8FW)** If forward-firing ordnance is determined as unsafe or unknown condition, shut down the aircraft immediately and declare a ground emergency.

8.1.6.3.3.4. **(Added-8FW)** Follow the directions of the IC. If maintenance determines that the gun did not rotate and can be electrically and mechanically safed, the pilot may taxi back. Aircraft with hung forward-firing ordnance that can be safed may also be taxied back.

8.1.6.3.3.5. **(Added-8FW)** Anytime IC, EOR or EOD team determines an unsafe condition, all aircraft, vehicles and personnel will be evacuated to a safe distance as determined by the IC/EOD.

8.1.6.4. **(Added-8FW)** Jettison Areas/Procedures/Parameters (IFR/VFR).

8.1.6.4.1. **(Added-8FW)** General.

8.1.6.4.1.1. **(Added-8FW)** Attempt to jettison on the scheduled range first.

8.1.6.4.1.2. **(Added-8FW)** Jettison ordnance in the SAFE mode.

8.1.6.4.1.3. **(Added-8FW)** Pilots should contact Kunsan AB Approach for traffic advisories during jettison procedures.

8.1.6.4.1.4. **(Added-8FW)** Selective jettison area is between the Kunsan AB TACAN (CH 75) a 270° and 290° radial between 7 and 15 DME (Attachment 11).

8.1.6.4.2. **(Added-8FW)** Live Ordnance Jettison (Attachment 11).

8.1.6.4.2.1. **(Added-8FW)** Live ordnance jettison area is “CATFISH” (VMC Only) a 4nm radius circle around a point N36-21.500/E125-40.500 (TACAN CH 94, 243°/79 or TACAN CH 75, 307°/53). Jettison above 3,000’ AGL, if able.

8.1.6.5. **(Added-8FW)** Controlled Bailout (Attachment 11).

8.1.6.5.1. **(Added-8FW)** Fly outbound between the Kunsan AB TACAN (CH 75) a 270° and 290° radial between 7 and 15DME, eject between 4,000’ and 5,000’ MSL.

8.1.6.6. **(Added-8FW)** SARCAP and On-Scene Commander Guidance.

8.1.6.6.1. **(Added-8FW)** The 8FW IFG provides the OSC the procedures for combat and peacetime search and rescue operations (C) SARCAP.

8.1.6.6.2. **(Added-8FW)** ROKAF SAR Forces are on alert during flying operations.

8.1.6.7. **(Added-8FW)** Night Restrictions.

8.1.6.7.1. **(Added-8FW)** If ROKAF CSAR helicopters cannot support during nighttime operations, there is no planned replacement and flights may not use over-water airspace and must remain over land.

8.1.6.7.1.1. **(Added-8FW)** MOAs that have a combination of land and water (MOAs 8, 9, 12, 13, 19, 20, 21, 25, 26 and R-79) are still usable provided 8FW aircraft maintain over the land portion for the entire sortie.

8.1.6.7.1.2. **(Added-8FW)** The approval authority for exception to this guidance is the 7th AF Commander.

8.1.6.8. **(Added-8FW)** Over-G.

8.1.6.8.1. **(Added-8FW)** Terminate the mission, perform a battle damage check, and fly a straight-in.

8.1.6.8.2. **(Added-8FW)** When able, record all flight parameters (airspeed, altitude, maneuver description, loaded stores, fuel weight and distribution) regarding the Over-G.

8.1.6.9. **(Added-8FW)** Departure from Controlled Flight.

8.1.6.9.1. **(Added-8FW)** When a known or suspected departure from controlled flight occurs, terminate the mission, cease tactical maneuvering and RTB, accomplish a battle damage and controllability check, and impound the aircraft IAW 8FW IFG.

8.1.6.10. **(Added-8FW)** Dropped Objects (8FW Aircraft Only).

8.1.6.10.1. **(Added-8FW)** Notify the 8FW SOF with the call sign, location, time of occurrence and description of object. Check switches safe and RTB via hung

ordnance procedures (if applicable), and follow the impoundment procedures IAW 8FW IFG.

8.1.6.11. **(Added-8FW)** Landing Emergencies.

8.1.6.11.1. **(Added-8FW)** All emergency aircraft that are able to clear the runway will taxi to de-arm and park in the spot nearest to the runway or designated emergency parking area (i.e., hot brakes, hydrazine, hung-live).

8.1.6.11.2. **(Added-8FW)** Landing gear.

8.1.6.11.2.1. **(Added-8FW)** If landing with suspected or actual unsafe gear, stop straight ahead on the runway and have the main gear pins installed prior to engine shut down. Nose landing gear will be pinned after engine shut down. Aircraft with landing gear malfunctions will be shut down on the runway and towed.

8.1.6.11.3. **(Added-8FW)** Brake Malfunctions.

8.1.6.11.3.1. **(Added-8FW)** Do not taxi an aircraft with brake or anti-skid malfunctions. Coordinate with the SOF for approval to taxi clear of the runway.

8.1.6.11.3.2. **(Added-8FW)** Hot Brakes.

8.1.6.11.3.2.1. **(Added-8FW)** Aircraft with known or suspected hot brakes will clear the runway at the end and park in the hot brake area and declare a ground emergency.

8.1.6.11.3.2.2. **(Added-8FW)** EOR crews will determine if the aircraft brakes are hot and will advise the pilot and Incident Commander (IC).

8.1.6.11.3.2.3. **(Added-8FW)** Do not shut down the engine until cleared to by the IC or the EOR crew.

8.1.6.11.3.2.4. **(Added-8FW)** Ensure the three and nine o'clock areas are clear of personnel and equipment.

8.1.6.11.3.2.5. **(Added-8FW)** The IC will terminate the hot brake emergencies when appropriate.

8.1.6.11.4. **(Added-8FW)** No Taxi conditions.

8.1.6.11.4.1. **(Added-8FW)** Reference 8FW IFG for "no-taxi" conditions. Contact 8FW SOF for further guidance.

8.1.6.11.5. **(Added-8FW)** Aircraft Arresting System (Cable) Engagement.

8.1.6.11.5.1. **(Added-8FW)** Cable Arrestment.

8.1.6.11.5.1.1. **(Added-8FW)** When an approach end arrestment is anticipated, the pilot will advise the 8FW SOF or ATC as early as possible.

8.1.6.11.5.1.2. **(Added-8FW)** The approach end BAK-14 can be immediately "raised" into position from the tower.

8.1.6.11.5.1.3. **(Added-8FW)** The SOF may consider an alternate BAK-14 configuration (up/up/up) to meet operational requirements at night, when the runway is wet, or during periods of reduced RCR/braking action or available

runway. Anytime tower personnel determine an aircraft is aborting, they will raise the BAK-14 with or without a “cable, cable, cable” call.

8.1.6.11.5.2. **(Added-8FW)** For all engagements (including practice engagements), pilots should relay their landing gross weight, configuration and engagement ground speed. Pass this information to Barrier Maintenance via the IC at the earliest opportunity.

8.1.6.11.5.3. **(Added-8FW)** Disengaging from the Cable.

8.1.6.11.5.3.1. **(Added-8FW)** Establish voice communication with the IC on local UHF CH 12.

8.1.6.11.5.3.2. **(Added-8FW)** The normal procedure at Kunsan AB for extracting aircraft from an arrestment cable is to have the aircraft shut down and towed off the runway. For Sling Shot procedures reference 8FW IFG.

8.1.6.11.5.4. **(Added-8FW)** Practice Cable Engagement.

8.1.6.11.5.4.1. **(Added-8FW)** Procedures are in the 8FW IFG.

8.1.6.11.5.4.2. **(Added-8FW)** Practice cable engagement must be approved by the 8 OG/CC and is normally performed after landing and de-arm with SOF coordination.

8.1.6.12. **(Added-8FW)** Hydrazine Procedures.

8.1.6.12.1. **(Added-8FW)** Hydrazine parking areas are at the north and south EOR (Attachment 8 and the 8FW IFG).

8.1.6.12.2. **(Added-8FW)** Local Hydrazine Recovery.

8.1.6.12.2.1. **(Added-8FW)** When recovering at Kunsan AB, taxi the aircraft to the hydrazine response area and park with the left wing into the wind.

8.1.6.12.2.2. **(Added-8FW)** The hydrazine response team will meet the aircraft and the Fire Department (8 CES/CEF) will clear the team to check the aircraft.

8.1.6.12.2.3. **(Added-8FW)** The aircraft may be shut down after the hydrazine team completes their checks.

8.1.6.12.2.4. **(Added-8FW)** Prior to shut down ensure the EPU ground safety pin is installed and the aircraft is pinned, de-armed and chocked. Wait until assisted out of the aircraft by the fire/rescue crew.

8.1.6.12.3. **(Added-8FW)** Divert Airfield Hydrazine Recovery.

8.1.6.12.3.1. **(Added-8FW)** When recovering at an alternate airfield, the pilot should notify the tower and local SOF of the situation and requirements.

8.1.6.12.3.2. **(Added-8FW)** Request an isolated location and a hydrazine response team.

8.1.6.12.3.3. **(Added-8FW)** Ensure the recovery base understands the potential hydrazine problems, without overstating the hazard.

8.1.6.12.3.4. **(Added-8FW)** After landing, check for leaks and follow interim

containment procedures IAW the 8FW IFG.

8.1.6.13. **(Added-8FW)** Use of Alternate Landing Surface (ALS).

8.1.6.13.1. **(Added-8FW)** If the primary runway is not available, Taxiway “C” may be used as an ALS to recover 8FW aircraft without divert fuel or aircraft without a suitable divert option.

8.1.6.13.2. **(Added-8FW)** The threshold, if landing to the east on Taxiway “C,” is just to the east of the parallel taxiway.

8.1.6.13.3. **(Added-8FW)** Do not touch down short of threshold (i.e., on the parallel taxiway).

8.1.6.13.4. **(Added-8FW)** Taxiway “C” has a BAK-12 installed midfield.

8.1.6.13.5. **(Added-8FW)** Taxiway “C” has no suitable lighting for night landings.

8.1.6.13.6. **(Added-8FW)** Securing the ALS will take approximately 30 minutes from notification.

8.1.6.13.7. **(Added-8FW)** Aircraft landing on the ALS should not expect to receive a landing clearance.

8.1.6.13.8. **(Added-8FW)** Tower will use the following phraseology: “(A/C call sign), Taxiway “C” secure, landing will be at your own risk.”

8.1.6.13.9. **(Added-8FW)** The 8FW SOF will direct when the ALS will be deactivated.

8.1.6.13.10. **(Added-8FW)** Reduced runway separation will not be applied when ALS procedures are in effect.

8.1.6.13.11. **(Added-8FW)** When tower has evacuated and relocated to one of the alternate sites, Taxiway “C” and parts of the parallel taxiway are not visible.

8.1.7. Attachments (Illustrations).

8.2. If applicable, include procedures for the following in the appropriate : (T-1).

8.2.1. Command and Control.

8.2.2. Fuel Requirements and Bingo Fuels.

8.2.3. Diversion Instructions.

8.2.4. Jettison Areas, Procedures and Parameters (IFR/VFR).

8.2.5. Controlled Bailout Areas.

8.2.6. Local Weather Procedures.

8.2.7. Unit Standards.

8.2.8. Approved Alternate Missions.

8.2.9. Cross-Country Procedures.

8.2.10. Search and Rescue and On-Scene Commander Procedures.

8.2.11. Bird/Wildlife Aircraft Strike Hazard (BASH) program guidance IAW AFI 91-202, *The US Air Force Mishap Prevention Program* and AFPAM 91-212, *Bird Aircraft Strike Hazard (BASH) Management Techniques*.

8.2.12. Environmental Restrictions to Flight Operations (winds, sea state, temperature, etc.) applicable to unit operating locations.

8.3. Instructions. Prior to publishing, units will forward copies of the local supplement of this document to MAJCOM and appropriate subordinate agencies, which will review and return comments back to the unit(s). **(T-1)**.

BURTON M. FIELD, Lt Gen, USAF
DCS, Operations, Plans and Requirements

(8FW)

S. CLINTON HINOTE, Colonel, USAF
Commander

Attachment 1**GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION*****References***

- AFI 11-202, Volume 3, *General Flight Rules*, 22 Oct 2010
- AFI 11-205, *Aircraft Cockpit and Formation Flight Signals*, 19 May 1994
- AFI 11-207, *Combat Aircraft Delivery*, 24 Oct 2007
- AFI 11-209, *Aerial Event Policy & Procedures*, 4 May 2006
- AFI 11-214, *Air Operations Rules and Procedures*, 14 Aug 2012
- AFI 11-218, *Aircraft Operations and Movement on the Ground*, 28 Oct 2011
- AFI 11-246, Volume 1, *Air Force Aircraft Demonstrations (A-10, F-15, F-16, F-22)*, 29 September 2008
- AFI 11-301 Volume 1, *Aircrew Flight Equipment (AFE) Program*, 25 Feb 2009
- AFI 11-301 Volume 4, *Aircrew Laser Eye Protection (ALEP)*, 21 Feb 2009
- AFI 11-404, *Centrifuge Training for High-G Aircrew*, 28 Oct 2005
- AFI 90-201, *The Air Force Inspection System*, 2 Aug 2013
- AFI 33-360 *Publications and Forms Management*, 7 Feb 2013
- AFMAN 11-217 Volume 1, *Instrument Flight Procedures*, 22 Oct 2010
- AFMAN 11-217 Volume 3, *Supplemental Flight Information*, 23 Feb 2009
- AFMAN 33-363, *Management of Records*, 1 March 2008
- AFPAM 11-216, *Air Navigation*, 1 Mar 2001
- AFPAM 11-419. *G-Awareness for Aircrew*, 1 Dec 1999
- AFPD 11-2, *Aircraft Rules and Procedures*, 19 Jan 2012
- AFPD 11-4, *Aviation Service*, 1 Sep 2004
- AFTTP 3-1 Volume 1, *General Planning and Employment Considerations*, 15 Sep 2008
- AFI 11-2F-16V1, *F-16--Aircrew Training*, 19 Jan 2007
- AFTTP 3-1.F-16, *Tactical Employment--F-16*, 29 Jun 2012
- AFTTP 3-3.F-16, *Combat Aircraft Fundamentals--F-16*, 29 Jun 2012
- AFI 91-202, *The US Air Force Mishap Prevention Program*, 5 Aug 2011
- AFPAM 91-212, *Bird Aircraft Strike Hazard (BASH) Management Techniques*, 1 Feb 2004

Adopted Forms

- AF Form 847, *Recommendation for Change of Publication*
- AFTO Form 781, *ARMS Aircrew/Mission Flight Data Document*

AFTO FORM 781A, *Maintenance Discrepancy and Work Document*.

Abbreviations and Acronyms

ACBT—Air Combat Training

ACM—Air Combat Maneuver

ACMI—Air Combat Maneuvering Instrumentation

AFTTP—Air Force Tactics, Techniques, and Procedures

AGCAS—Automatic Ground Collision Avoidance System

AGL—Above Ground Level

AGSM—Anti-G Straining Maneuver

ALOW—Automatic Low Altitude Warning

AMD—Acceleration Monitoring Device

AOA—Angle of Attack

ARTS—Automated Recovery Training Series

ASR—Airport Surveillance Radar

ATC—Air Traffic Control

AWACS—Airborne Warning and Control System

BFM—Basic Fighter Maneuver

BMC—Basic Mission Capable

CAP—Critical Action Procedure

CARA—Combined Altitude Radar Altimeter

CG—Center of Gravity

CMR—Combat Mission Ready

CE—Combat Edge

ECM—Electronic Counter Measure

EMCON—Emission Control

EMR—Emergency Release

EMS—Engine Monitoring System

EOR—End of Runway

EP—Emergency Procedure

FAC—Forward Air Controller

FAF—Final Approach Fix

FCIF—Flight Crew Information File

FE—Flight Examiner
FLCS—Flight Control System
FLIP—Flight Information Publications
FOD—Foreign Object Damage
GCAS—Ground Collision Avoidance System
GCI—Ground Control Intercept
GLOC—G—induced Loss of Consciousness
HARTS—Horn Awareness and Recovery Training Series
HUD—Heads-Up Display
IFF—Identification, Friend or Foe
IFR—Instrument Flight Rules
ILS—Instrument Landing System
IMC—Instrument Meteorological Conditions
INS—Inertial Navigation System
IP—Instructor Pilot or Initial Point
IQT—Initial Qualification Training
IR—Instrument Route
JOAP—Joint Oil Analysis Program
LANTIRN—Low Altitude Navigation and Targeting Infrared for Night
LEP—Laser Eye Protection
LIS—Line in the Sky
MOA—Military Operating Area
MPO—Manual Pitch Override
MQT—Mission Qualification Training
MSA—Minimum Safe Altitude
MSL—Mean Sea Level
NVG—Night Vision Goggles
OAP—Offset Aim Point
OFP—Operational Flight Program
PAR—Precision Approach Radar
PARS—Pilot Activated Recovery System
PDM—Programmed Depot Maintenance

RAA—Route Abort Altitude
RBS—Radar Bomb Scoring
RCO—Range Control Officer
RCR—Runway Conditions Reading
RMSA—Recovery Minimum Safe Altitude
RNAV—Area Navigation
ROE—Rules of Engagement
ROM—Runway Operations Monitor
SAR—Search and Rescue
SCP—Set Clearance Plane
SD—Spatial Disorientation
SFO—Simulated Flame Out
SOF—Supervisor of Flying
TDA—Tactical Decision Aid
TOLD—Takeoff and Landing Data
VFR—Visual Flight Rules
VMC—Visual Meteorological Conditions
VR—Visual Route
VRD—Vision Restriction Device
VTR—Video Tape Recorder
WSEP—Weapon System Evaluation Program

Terms

Air Combat Training (ACBT)—A general term which includes (D)BFM, (D)ACM, and (D)ACT (AFI 11-214).

Air Combat Tactics (ACT)—Training in the application of BFM, ACM, and tactical intercept skills to achieve a tactical air-to-air objective.

Basic Mission Capable (BMC)—See AFI 11-2F-16V1.

Combat Edge (CE)—A positive-pressure breathing-for-G (PPG) system which provides pilots additional protection against high positive G accelerations experienced during flight. The system consists of aircrew equipment (high-pressure mask, counter-pressure suit, G-suit), and aircraft equipment (oxygen regulator, G-valve, and interfacing sense line). At 4-G and above, regulated air and oxygen are supplied to provide automatic mask tensioning, vest inflation, and positive pressure breathing to the mask.

Combat Mission Ready (CMR)—See AFI 11-2F-16V1.

Continuation Training (CT)—See AFI 11-2F-16V1.

Flight Lead (FL)—As designated on flight orders, the individual responsible for overall conduct of mission from preflight preparation/briefing to postflight debriefing, regardless of actual position within the formation. A certified 4-ship FL may lead formations and missions in excess of four aircraft, unless restricted by the unit CC. A 2-ship FL is authorized to lead an element in a larger formation.

Initial Qualification Training (IQT)—See AFI 11-2F-16V1.

Low Altitude Navigation and Targeting Infrared for Night (LANTIRN)—A navigation and targeting system that provides tactical aircraft with a low-altitude, under-the-weather, day and night operational capability.

Low Altitude Training (LOWAT)—See AFI 11-2F-16V1.

Mission Qualification Training (MQT)—See AFI 11-2F-16V1

Target MSA—An altitude that provides at least 1,000 feet of clearance above all obstacles within 5 nautical miles of the target.

Squadron Supervisor—Squadron Commander, Asst/Operations Officers, and Flight CCs. ANG and AFRC only: as designated by the OG/CC.

Attachment 1 (8FW)**GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION*****References***

Note: The following list of references is designed to facilitate the orientation of newly assigned pilots in the PACAF/Korean Theater. These dates are current as of publication date; however, pilots need to ensure they are referencing the most up to date publications.

T.O. 1F-16CM -1, F-16C/D, *Flight Manual*, 1 Jul 11
 T.O. 1F-16CM -1CL-1, F-16C/D, *Flight Crew Checklist*, 1 Jul 13 Chg 8
 T.O. 1F-16CM -34-1-1CL-1, *Avionics and Nonnuclear Weapons Delivery Flight Crew Checklist*, 1 Jul 13
 AFI 21-101, 26 Jul 10, COMBATAIRFORCESUP, 21 Feb 12 and 8 FW Supplement 1, 20 Jun 10, *Aerospace Equipment Maintenance Management*
 AFMAN 33-363, *Management of Records*, 1 March 2008
 8 FW In-Flight Guide, 2 Apr 12
 AFI 11-2F-16V1, *F-16--Pilot Training*, 11 Aug 11
 AFI 11-2F-16V3, *F-16--Operations Procedures*, 18 Dec 13
 8 FW Weapons Attack Guide, 1 Feb 2005
 ACCR 51-1, *Flying Training Low-Level Navigation*, 1 Jun 11
 ACCR 55-5, *Pil Sung Range Joint Operations*, 1 Jan 2002
 ACCR 55-9, *Procedures for Use of Training Areas*, 9 Jun 13
 Jik-Do SOP 14 Jun 10
 ACCR 60-8, *Prevention of Inadvertent Overflight of Unfriendly Borders*, 1 Nov 11
 7th AF Operations and Training Plan, 1 Oct 10 through Ch 2, 1 Jun 11
 AFI 11-2F-16V2, *F-16--Aircrew Evaluation Criteria*, 10 Dec 09 IC 27 Aug 10
 AFI 11-202V2, *Aircrew Standardization/Evaluation Program*, 13 Sep 10 RFI 13-03
 8 FW Master Question File (MQF), 1 May 2011
 ACCR 55-2, *Scramble/Airborne and Divert Order Procedures*, 1 Jul 01

Prescribed Forms

8 FW Form 20, *Request for Cross Country Flight*.

Adopted Forms

DD Form 1801, *DOD International Flight Plan*

Abbreviations and Acronyms

AAR —Air-to-Air Refueling
ACC —Air Combat Command
ACT —Air Combat Tactics
AHC —Advanced Handling Characteristics
AIRADS —Airfield Advisories
ALTRAV —Altitude Reservation
ASOC —Air Support Operations Center
ATIS —Automated Terminal Information Service
BRAA —Bearing Range Altitude Aspect

BSA —Basic Surface Attack
CAPS —Critical Action Procedures
CAS —Close Air Support
CBU —Cluster Bomb Unit
CSAR —Combat Search and Rescue
DME —Distance Measuring Equipment
EAL —Entry Authorization List
ECS —Environmental Control System
ELS —Emergency Landing Surface
EMSC —Engine Monitoring Status Code
ENG —Engine
EOD —Explosive Ordnance Disposal
EPU —Emergency Power Unit
ETA —Estimated Time of Arrival
ETD —Estimated Time of Departure
FCF —Functional Check Flight
FLCS —Flight Control System
HAS —Hardened Aircraft Shelter
HHQ —Higher Headquarters
IAF —Initial Approach Fix
IAW —In Accordance With
IC —Incident Commander
IFG —In Flight Guide
IRRE —Initial Response Readiness Exercise
JDAM —Joint Direct Attack Munition
JFS —Jet Fuel Starter
JTAC —Joint Terminal Attack Controller
KCAS —Knots Calibrated Air Speed
KBZ —Korean Buffer Zone
KIA —Killed in Action
LFE —Large Force Employment
LOA —Letter of Agreement
MCRC —Military Command and Reporting Center
MDL —Military Demarcation Line
MDS —Mission Design Series
MEF —Mission Execution Forecast
MTR —Military Training Routes
NORDO —No Radio
NOTAM —Notice to Airmen
NTFS —New Tactical Forecast System
NWS —Nose Wheel Steering
OP —Observation Point
ORE —Operational Readiness Exercise
OSC —On-Scene Commander
PENORE —Peninsula Operational Readiness Exercise
RAP —Ready Aircrew Program

RAPCON —Radar Approach Control
ROKAF —Republic of Korea Air Force
RON —Remain Over Night
RPM —Revolutions Per Minute
RTB —Return To Base
RWR —Radar Warning Receiver
RWY —Runway
SAM —Surface-To-Air Missile
SARCAP —Search And Rescue Combat Air Patrol
SEC —Secondary Engine Control
SFA —Single Frequency Approach
SIM —Simulate
SLD —System Level Delivery
SMS —Stores Management Set
SODO —Senior Operations Duty Officer
SUA —Special Use Airspace
TA — Transient Alert
TACAN —Tactical Airborne Navigation
TACP —Tactical Air Control Party
TCN —Terminal Change Notice
TI —Tactical Intercepts
TRP —Tactical Recovery Procedure
TSA —Terminal Surveillance Area
WOW —Weight On Wheels
XINT —Immediate Interdiction

Attachment 2

CHEMICAL, BIOLOGICAL, RADIOLOGICAL, NUCLEAR, AND HIGH YIELD EXPLOSIVE (CBRNE) OPERATIONS (T-1)

A2.1. General Information. Potential adversary use of CBRNE weapons against a friendly airfield presents a serious threat to flying operations. Although the most effective way for aircrews to avoid this threat is to be airborne before those weapons are detonated/dispersed and then land at a field that has not been contaminated, all personnel must be prepared to operate from a field that has come under CBRNE attack.

A2.2. Mission Preparation. Be aware of the status of the CBRNE environment at the planned launch and recovery airfields, potential divert bases, and throughout the area in which the sortie may fly. Know the current and forecast surface wind direction and the MOPP level in effect for relevant sectors of the airfield. Don appropriate aircrew chemical defense equipment (ACDE) or Ground Crew Ensemble (GCE) to match the appropriate MOPP level (reference AFMAN 10-100) and carry individual protective equipment (IPE) as required.

A2.3. Stepping to Fly and Aircraft Preflight. This may entail donning ACDE or transitioning from GCE to ACDE. Take precautions to protect aircrew from injury and or contamination while in transit from the squadron facility to the aircraft. If possible, transport aircrew in a vehicle that provides overhead cover (enclosed vehicle). If aircrew travel on foot is unavoidable, choose a route that takes maximum advantage of available overhead cover (sun shades, buildings, etc.) to avoid agents that may be settling from the air. If extra aircrew members are available for preflight duties, consider assigning them to do so wearing GCE. This will allow the aircrew actually flying to minimize exposure.

A2.3.1. Alarm Red (or Theater Equivalent) Prior to Engine Start. If Alarm Red occurs during the step or preflight process, take cover and don appropriate MOPP. This may require use of the ground crew mask. A hardened aircraft shelter (HAS) provides optimum protection, if available. Use caution if entering a HAS that contains aircraft and/or equipment. Close doors after entry. If a HAS or other overhead cover is not immediately available, accept the best rapidly reachable cover.

A2.4. Engine Start to Takeoff. If a HAS is available, use it to minimize exposure time by accomplishing aircraft arming and End of Runway (EOR) procedures inside it (if local procedures permit) and by delaying taxi time as long as possible prior to takeoff.

A2.4.1. Aircraft Launch to Survive (LTS). Units will develop local procedures to provide this option to the commander. In general, aircraft may LTS any time after engine start if they have sufficient fuel and safe, expeditious access to a runway. This option may only be practical for aircraft that are near EOR prior to takeoff or that have just landed.

A2.4.2. Alarm Red Prior to Taxi. If in a HAS, the normal procedure is to shut down. Engine noise may preclude effectiveness of normal alert notification procedures, so ensure ground personnel are aware of the alarm warning, assume proper MOPP, and close HAS doors. Use hand signals if necessary.

A2.4.3. Alarm Red (or Theater Equivalent) After Taxi. Units typically establish procedures for this contingency depending on whether additional protection is available along the taxi route (empty HAS, for instance). Ideally, ground crew sheltering in such a HAS would be

available to assist in normal engine shutdown procedures and to close HAS doors. If protection is not available, the best option may be LTS. Maintain contact with Command and Control (C2) entities (Wing Operations Center, Maintenance Operations Center, Supervisor of Flying, etc.) to ensure unity of effort in the overall plan.

A2.5. Takeoff to Landing.

A2.5.1. Contamination. If Chemical Warfare (CW) agent contamination occurred prior to takeoff, flying the aircraft will dissipate the agent to some degree. The total amount of dissipation will be greater with lower flight altitudes and longer flight times. Because the agent may have entered wheel wells, flaps, etc., consider flying in landing configuration to increase airflow to these areas. In any circumstances, merely flying the aircraft is unlikely to achieve complete decontamination.

A2.5.2. Preparing to Land. Aircrew should remain aware of the status of primary and alternate landing locations. Do not attempt to land during Alarm Red situations unless there is no other option. Follow C2 directions and either hold or divert. If mission needs preclude divert, hold until the Alarm Red (or theater equivalent) has cleared or become an Alarm Black. Prior to landing, gain awareness of contaminated sectors of the airfield and of current/forecast surface winds. Use this information in conjunction with C2 direction to plan a route from landing to engine shutdown. The liquid deposition phase following a CW airburst attack can extend up to 1 hour. If landing during Alarm Black, expect a contaminated environment and MOPP 4.

A2.6. Landing to Engine Shutdown. Take advantage of any protection available, minimizing taxi time and distance. Maintain contact with C2 in order to remain aware of unexploded ordnance and/or damage to airfield movement surfaces. If a HAS is available and local procedures permit, accomplish aircraft de-arm and EOR procedures there. If Alarm Red (or Theater Equivalent) occurs between landing and engine shutdown, considerations are similar to those discussed in the engine-start-to-takeoff section.

A2.7. After Engine Shutdown. Don appropriate MOPP if not already worn. If circumstances permit, accomplish normal post-flight inspection procedures. If the aircraft is not contaminated, close the canopy. If there is any suspicion of personnel contamination, aircrew will process through an aircrew contamination control area (ACCA). Accomplish maintenance debriefings under cover to the maximum extent possible.

Attachment 3
FLIGHT BRIEFING GUIDES

Table A3.1. General Briefing Guide.

<p>Mission Data.</p> <ul style="list-style-type: none"> Time Hack EP / Threat of the Day Mission Objective(s) Mission Overview Mission Data Card <ul style="list-style-type: none"> Mission Commander / Deputy Lead Joker / Bingo Fuel Takeoff and Landing Data Weather / Sunrise / Sunset / Moon Illumination Tactical Decision Aid / Transmissivity / Absolute Humidity NOTAMs / Bird Strike Potential Personal Equipment FCIF / Pubs / Maps <p>Ground Procedures.</p> <ul style="list-style-type: none"> Step <ul style="list-style-type: none"> Pre-Flight <ul style="list-style-type: none"> Aircraft Armament Boresight Check-In Taxi / Marshalling / Arming Spare Procedures <p>Takeoff.</p> <ul style="list-style-type: none"> Runway Lineup Formation Takeoff Takeoff Interval Abort Jettison Procedures Low Altitude Ejection Landing Immediately After Takeoff <p>Departure/En Route.</p> <ul style="list-style-type: none"> Routing Trail Departure Join-Up / Formation Systems / Ops Checks <p>Airspace.</p> <ul style="list-style-type: none"> Area Times Restrictions (Chaff/Flare/Supersonic) Bailout (Controlled/Uncontrolled) 	<p>Recovery.</p> <ul style="list-style-type: none"> Rejoin Battle Damage / Bomb Check Type Recovery Flight Break-Up Pattern and Landing After Landing / De-Arm Emergency / Alternate Airfields <p>Special Subjects (As Applicable).</p> <ul style="list-style-type: none"> General Roles and Responsibilities (IP, Flight Lead, Wingman) Formation Specific Responsibilities and Priorities Flight Member Mission Priorities Task / Sensor Prioritization Deconfliction Contracts Chase Procedures IFF Procedures Collision Avoidance <ul style="list-style-type: none"> Radar / Visual Search Responsibilities <ul style="list-style-type: none"> Departure/Enroute/Recovery High Density Traffic Areas Mid-Air Collision Avoidance <ul style="list-style-type: none"> From Other Military Aircraft From Civilian Aircraft Dissimilar Formations Terrain Avoidance <ul style="list-style-type: none"> Departure / En Route / Recovery Use of Controlled Flight Into Terrain Prevention Systems <ul style="list-style-type: none"> CARA ALLOW MSL Line-In-The-Sky Ground Collision Avoidance System <ul style="list-style-type: none"> (GCAS)/Minimum Terrain Clearance (MTC) (AGCAS)/MODE/Chevrons Targeting Pod Attitude Advisory Function Bird Strike Procedures / Use of Visor(s) Human Factors Considerations (i.e., Channelized Attention, Task Saturation / Prioritization and Complacency) G-Awareness Turn / G-Suit connection / G-tolerance <ul style="list-style-type: none"> Use of L-1 Anti-G Straining Maneuver Visual Illusions / Perceptions Spatial Disorientation / Unusual Attitudes / G-excess illusion PARS Considerations
---	--

MSA	Lost Wingman Radio Inoperative SAR / CSAR Recall Procedures SIIs Pilot currencies for events to be flown Training Rules / Special Operating Instructions / Rules of Engagement Tactical Portion of Mission
-----	---

Table A3.2. Additional Briefing Items, NVG.

<p>Weather / Illumination: Civil / Nautical Twilight Moon Rise/Set Times / Phase / Elevation / Azimuth Ceiling / Visibility LUX / EO TDA Obscurants to Visibility</p> <p>NVG Preflight: Check Adjustments / Helmet Fit and Security Batteries Resolution / Focus (Hoffman ANV-20/20 Tester, Eye Lane) NVG Compatible Flashlight</p> <p>Cockpit Preflight: Cockpit Setup Cockpit Lighting (Leaks) Cockpit FAM Check Focus and Stow for Taxi</p> <p>Before Takeoff: Don NVGs / Check and Adjust Stow for Takeoff</p> <p>Airborne: Exterior Lights NVG Donning Scan Pattern Forward Scan Narrow Field of View vs. Field of Regard Peripheral Vision Scan Techniques Join-up and Enroute Considerations Rejoin / Closure Air-to-Air TACAN G-Awareness Considerations Lighting Visible Horizon/30 Up & Down Maneuver Deconfliction / Separation Route Study / Scene Interpretation NVG Predictions Terrain/Shadowing/Visual Illusions/Visible Horizon Terrain Avoidance Radar Altimeter City / Cultural Lighting Direction / Orientation of Lighting Formation Maneuvering Map Reading</p>	<p>F-16D NVG Procedures / Crew Coordination</p> <p>NVG Abnormal Situations / Emergencies Lost Sight-NVGs Lost Wingman-NVGs Transition to Instruments Visual Illusions / Depth Perception Disorientation / Misorientation / Vertigo / PARS Fatigue NVG Failure Battery Failure / Swap Out Overconfidence in NVG Capabilities Correct Lighting of Primary / Secondary Flight Instruments Lost Comm (with Wingman / Target) Aircraft Emergency Ejection-Goggles-OFF Target Fixation Lack of Dive Information Target / Fighter Enters IMC No Tally by 1,500' Slant Range 700 feet in VID mode [except tanker rejoins] Radar Break Lock Inside 1,500' Excessive Overtake / Target Maneuvers Laser Eye Protection (LEP) Use Laser / IR Pointer Safety NVG FOD Considerations (Batteries, Equipment, etc)</p> <p>NVG ROE/Training Rules</p>
--	--

Table A3.3. Additional Briefing Items, Air Refueling.

<p>General</p> <ul style="list-style-type: none"> Tanker Call Sign(s) / Receiver Assignments Refueling Track(s) <ul style="list-style-type: none"> Altitude Airspeed Airspace Restrictions ARIPs, ARCPs, ARCTs Radio Frequencies <p>Buddy Procedures:</p> <ul style="list-style-type: none"> Departure Join-Up <p>En Route:</p> <ul style="list-style-type: none"> Route of Flight Formation Ops Checks <p>Rendezvous:</p> <ul style="list-style-type: none"> Type Rendezvous Holding Procedures / Formation Ground Radar Assistance Tanker Identification - TACAN / Radar / Visual Radar Procedures / Techniques Wingman / Deputy Lead Responsibilities Receiver Formation / Join-Up Procedures Rendezvous Overrun 	<p>Refueling:</p> <ul style="list-style-type: none"> Checklist Procedures Radio Calls Refueling Order Techniques <ul style="list-style-type: none"> EMCON Level Visual Signals Fuel Off-Load Bingo Fuel (Abort Points / Abort Bases) Drop-Off Procedures Wake Turbulence <p>Reform and Exit:</p> <ul style="list-style-type: none"> Formation Clearance <p>Emergency Procedures:</p> <ul style="list-style-type: none"> Breakaway Procedures Systems Malfunctions Damaged Receptacle <p>IMC/Night Considerations:</p> <ul style="list-style-type: none"> Loss of Visual Contact Aircraft Lighting <p>Special Subjects:</p> <ul style="list-style-type: none"> Fuel Awareness / AB Use / Consumption Rates Flight Path Deconfliction / Other Receiver Considerations Human Factors Considerations (i.e., Channelized Attention, Task Saturation / Prioritization and Complacency)
--	--

Table A3.4. Additional Briefing Items, Low-Level Navigation.

<p>General</p> <ul style="list-style-type: none"> Route / Clearance / Restrictions Flight Responsibilities <ul style="list-style-type: none"> Navigation Radar / Visual Search Entry / Spacing / Holding / Initial Altitude / MSA <p>Route Procedures:</p> <ul style="list-style-type: none"> Fence Checks Tactical Formation / Turns <p>Low-Level Navigation</p> <ul style="list-style-type: none"> Dead Reckoning/Use of Nav Aids/Equipment (EGI) Radar Procedures / Techniques / Predictions Visual Procedures / Techniques / IR Predictions Updates / Calibrations Time / Fuel Control Terrain Following / Wingman Considerations / Pilot Comfort Level Leg Altitudes/Set Clearance Plane/Obstacles (MSL/AGL) Turnpoint Acquisition Obstacle / Ground Avoidance Use of Altitude Warning Features (GCAS, ALOW and Line-In-The-Sky MSL Floor Settings, AGCAS MODE/Chevrons Enabled/Disabled) <p>Threat Reactions</p> <ul style="list-style-type: none"> RWR / ECM / Chaff / Flares Engagement Criteria Flight Path Deconfliction Termination 	<p>Contingencies</p> <ul style="list-style-type: none"> Aircraft Fallout Plan Rejoin After Late Takeoff <p>Emergencies:</p> <ul style="list-style-type: none"> Aircraft Malfunctions Route Abort Procedures (RAA / MSA) / ATC Frequencies <p>Alternate Mission</p> <ul style="list-style-type: none"> Type Mission (refer to appropriate mission briefing guide) Mission Objectives <p>Special Subjects</p> <ul style="list-style-type: none"> Airspace Restrictions G-Awareness / Ops Checks Fuel Awareness / AB Use / Consumption Rates Flight Path Deconfliction Maneuvering Limitations <ul style="list-style-type: none"> Airspeed and G Recognition/Prevention/Recovery from Out of Control Time to Ground Impact <ul style="list-style-type: none"> Wings Level Overbank / Under G Night Considerations Human Factors Considerations (i.e., Channelized Attention, Task Saturation / Prioritization and Complacency)
--	---

Table A3.5. Additional Briefing Items, Air-to-Surface Range Operations.

<p>Range Information</p> <ul style="list-style-type: none"> Target / Range Description Restrictions Range Entry / Holding Radio Procedures Formation Sequence of Events Pattern Procedures Aircraft Fallout Plan Rejoin on Range for Late Takeoffs <p>Employment Procedures/Techniques:</p> <ul style="list-style-type: none"> Avionics / Switch Positions <ul style="list-style-type: none"> Weapons Switchology / Delivery Mode Radar Switchology Special Weapons Switchology Laydown / Loft Events <ul style="list-style-type: none"> Ground track / Altitude / Airspeed Radar / Optical Depiction (OAP / TGT) Radar / Optical Tuning / Techniques Pickle / Release Point Breakaway / Recovery Technique Backup Deliveries / EMR Delivery Spacing Pop-Up Delivery <ul style="list-style-type: none"> Entry Airspeed / Altitude Pop Point / Pull-Up Angle / Power Setting Target Acquisition Pull Down / Apex Altitudes Pattern Corrections Roll-In <ul style="list-style-type: none"> Position Techniques (Pitch / Bank / Power) Roll-Out / Wind Effect Final <ul style="list-style-type: none"> Aim-Off Distance Dive Angle Airspeed HUD Depiction Sight Picture / Corrections / Aim-Point Release Parameters Release Indications Recovery Procedures 	<p>Night Procedures:</p> <ul style="list-style-type: none"> Aircraft Lighting Radio Calls Target ID / Range Lighting Night Spacing Techniques Instrument Cross-check / Disorientation Flare Pattern <ul style="list-style-type: none"> Flare Release Points and Interval Wind Effect / Offset Dud Flare Procedures Switching Aircraft Patterns <p>Over Water Range Operations:</p> <ul style="list-style-type: none"> Employment Techniques <ul style="list-style-type: none"> Depth Perception / Reduced Visual Cues Distance / Altitude Estimation Pop-Up Positioning <ul style="list-style-type: none"> Timing Visual/Aircraft References to Establish Pull-Up Pt Special Considerations <ul style="list-style-type: none"> Adjusted Minimum Altitudes <p>Range Departure Procedures:</p> <ul style="list-style-type: none"> Armament Safety Checks Rejoin Battle Damage / Bomb Check Jettison Procedures / Parameters Hung / Unexpended Ordnance Inadvertent Release Gun Unsafe / Jam <p>Alternate Mission</p> <ul style="list-style-type: none"> Type Mission (refer to appropriate mission briefing guide) Mission Objectives <p>Special Subjects</p> <ul style="list-style-type: none"> Error Analysis Fouls Minimum Altitudes Target Fixation G-Awareness Fuel Awareness / Ops Checks / AB Use / Consumption Rates Maneuvering Limitations <ul style="list-style-type: none"> Airspeed / G / Stress (Carriage / Release) Recognition/Prevention/Recovery from Out of Control Time to Ground Impact
--	---

<p>Special Procedures:</p> <ul style="list-style-type: none">Live Ordnance Considerations<ul style="list-style-type: none">Safe Escape / Safe SeparationFuse Arming / Frag AvoidanceRBS OperationsLaser Operations	<ul style="list-style-type: none">Wings LevelOverbank / Under GChevron Cues Enabled/DisabledHuman Factors Considerations (i.e., Channelized Attention, Task Saturation / Prioritization, and Complacency)
--	--

Table A3.6. Crew Coordination / Passenger / Ground Crew Briefing Guide.

<p>Crew Coordination / Passengers:</p> <ul style="list-style-type: none"> Pre-Flight Prohibited Items Cockpit Layout Flight Maneuvering Parameters Change of Aircraft Control Rear Seat Landing Procedures Emergencies <ul style="list-style-type: none"> Runway Departure Canopy Loss Ejection / Egress (With and Without Intercom) / Ejection Mode Selector Handle Position Loss of Intercom Bird Strike Procedures / Use of Visor(s) Flight Control Interference <ul style="list-style-type: none"> Rudder Interference - Rudder Pedal Adjustment Stick Interference - Lapbelt, Utility Light, Personal Equipment, Leg Position, Paddle Switch Override 	<p>Ground Crew:</p> <ul style="list-style-type: none"> Act Only On Pilot's Instructions Ground Emergency Procedures Hand Signals Aircraft Danger Areas
--	---

Table A3.7. Mission Debriefing Guide.

<p>Ground Procedures</p> <p>Takeoff/Join-Up/Departure</p> <p>En Route Procedures</p> <p>Recovery/Landing/After Landing</p> <p>General:</p> <ul style="list-style-type: none"> SIIs Radio Procedures Flight Member Responsibilities <ul style="list-style-type: none"> Formation and Deconfliction Contracts Sensor Management/Prioritization <p>Training Rules/Special Operating Instructions</p>	<p>Mission Accomplishment/Analysis:</p> <ul style="list-style-type: none"> Mission Reconstruction Mission Support VTR / Film Assessment Anti-G Straining Maneuver Effectiveness Tactical Employment Priorities Learning Objectives Achieved Lessons Learned Recommendations for Improvement <p>Comments/Questions</p>
---	---

Attachment 4

CRITICAL ACTION PROCEDURES (CAPS)

A4.1. General. The following procedures will be evaluated IAW MAJCOM guidelines. Pilots shall be able to immediately accomplish these procedures in the published sequence without reference to the checklist. Certain steps (e.g., Stores - Jettison) may be performed out of sequence, if conditions warrant. CAPs may be abbreviated when written, but procedural intent must be clear. **(T-1).**


Table A4.1. Critical Action Procedures (CAPs).

<p>FIRE/OVERHEAT/FUEL LEAK (GROUND)</p> <ol style="list-style-type: none"> Throttle - Off JFS - Off Fuel Master Switch - Off <p>GROUND EGRESS</p> <ol style="list-style-type: none"> Throttle - Off Seat - Safe Belt / Kit / Harness / G-Suit - Release <p>ABORT</p> <ol style="list-style-type: none"> Throttle - Idle Hook - Down (Above 100 Knots or If Required) <p>AB MALFUNCTION ON TAKEOFF (TAKEOFF CONTINUED)</p> <ol style="list-style-type: none"> Throttle - MIL Stores - Jettison (If Required) <p>ENGINE FAILURE ON TAKEOFF (TAKEOFF CONTINUED)</p> <ol style="list-style-type: none"> Zoom Stores-Jettison (If Possible) Eject <p>ENGINE FIRE ON TAKEOFF (TAKEOFF CONTINUED)</p> <ol style="list-style-type: none"> Climb Stores - Jettison (If Required) 	<p>[PW 220/229] LOW THRUST ON TAKEOFF/AT LOW ALTITUDE (NON-AB)</p> <ol style="list-style-type: none"> Throttle - AB Stores - Jettison (If Required) <p>If PRI thrust is insufficient to maintain level flight at a safe altitude:</p> <ol style="list-style-type: none"> Engine Control Switch - SEC <p>[PW200] ENGINE FAILURE/AIRSTART</p> <ol style="list-style-type: none"> Zoom (If at Low Altitude) Stores - Jettison (If Required) Throttle - OFF Airspeed - As Required EEC/BUC Switch - As Required. <p>When RPM Is Between 40-25 Percent And FTIT Is Below 700 Degrees:</p> <ol style="list-style-type: none"> Throttle - IDLE JFS - Start 2 When Below 20,000 Feet and 400 KIAS <p>[PW220] ENGINE FAILURE/AIRSTART</p> <ol style="list-style-type: none"> Zoom (If At Low Altitude) Stores - Jettison (If Required) Throttle - OFF Airspeed - As Required. <p>When RPM Is Between 50-25 Percent And FTIT Is Below 700 Degrees:</p> <ol style="list-style-type: none"> Throttle - IDLE JFS - Start 2 When Below 20,000 Feet and 400 KIAS <p>[PW229] ENGINE FAILURE/AIRSTART</p> <ol style="list-style-type: none"> Zoom (If at Low Altitude) Stores - Jettison (If Required) Throttle - OFF, then Midrange Airspeed - As Required JFS - Start 2 When Below 20,000 Feet and 400 KIAS
<p>[PW 200] LOW THRUST ON TAKEOFF/AT LOW ALTITUDE (NON-AB)</p> <ol style="list-style-type: none"> EEC/BUC Switch - Off. <p>If Thrust Is Still Insufficient:</p> <ol style="list-style-type: none"> Throttle - MAX AB. 	<p>[GE100/I29] ENGINE FAILURE/AIRSTART</p> <ol style="list-style-type: none"> Zoom (If at Low Altitude) Stores - Jettison (If Required) Engine Control Switch - SEC, Then PRI

<p>If Thrust Is Still Insufficient:</p> <ol style="list-style-type: none"> 3. Throttle - MIL 4. EEC/BUC Switch - BUC <p>If Nozzle Fails To Close After Transferring To BUC Or If Thrust Is Still Insufficient:</p> <ol style="list-style-type: none"> 5. EEC/BUC Switch - OFF 6. Throttle - MAX AB 7. Stores - Jettison (If or When Required) <p>[GE100/129] LOW THRUST ON TAKEOFF / AT LOW ALTITUDE (NON-AB)</p> <ol style="list-style-type: none"> 1. Throttle - AB. 2. Stores-Jettison (If Required). <p>If thrust is insufficient to maintain level flight at a safe altitude:</p> <ol style="list-style-type: none"> 3. Engine Control Switch – SEC, then PRI 	<ol style="list-style-type: none"> 4. Airspeed – As Required 5. JFS – Start 2 When Below 20,000 Feet and 400 KIAS <p>OUT-OF-CONTROL RECOVERY</p> <ol style="list-style-type: none"> 1. Controls - Release 2. Throttle - Idle 3. FLCS Switch – RESET (Digital FLCS Only) <p>If In An Inverted Deep Stall:</p> <ol style="list-style-type: none"> 4. Rudder - Opposite Yaw Direction (Analog FLCS Only). <p>If Still Out-Of-Control:</p> <ol style="list-style-type: none"> 5. MPO Switch - OVRD and Hold <p>After Yaw Rotation Stops or is Minimized:</p> <ol style="list-style-type: none"> 6. Stick - Cycle in Phase
--	---

Attachment 5 (Added-8FW)
KUNSAN AIRFIELD DIAGRAM


Figure A5.1. (Added) Kunsan Airfield Diagram

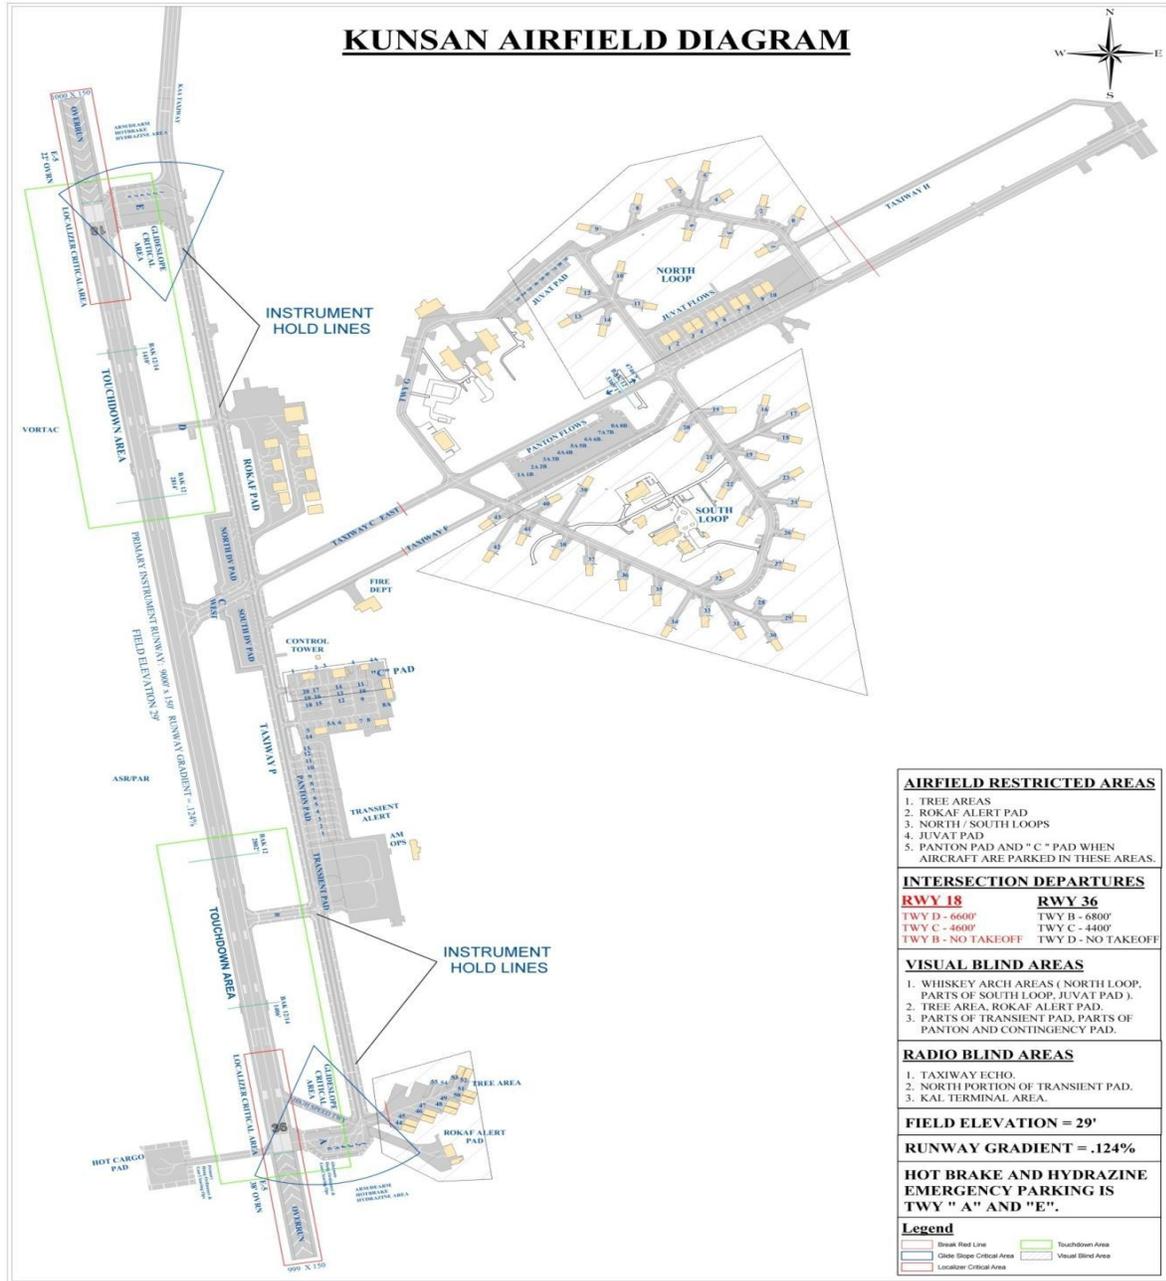

Attachment 6 (Added-8FW)

KOREAN MILITARY OPERATING AREAS (MOA)


Figure A6.1. (Added) Korean Military Operating Areas (MOA)

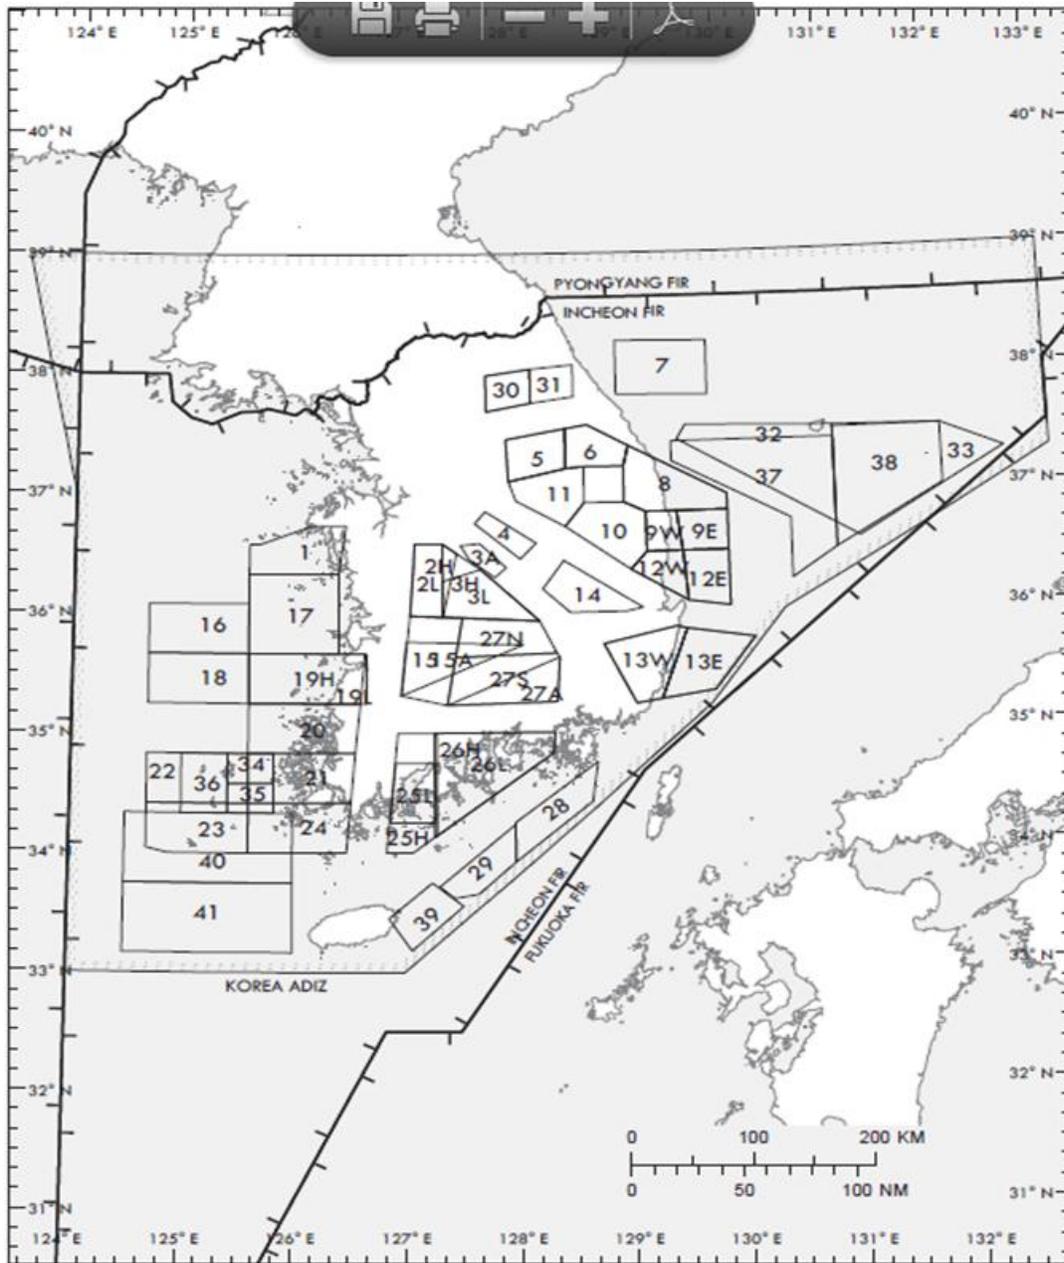

REFERENCE: KOREA AIP ENR 6-4 (16 May 2013)

Attachment 7 (Added-8FW)
KOREAN RESTRICTED AREAS

Figure A7.1. (Added) Korean Restricted Areas

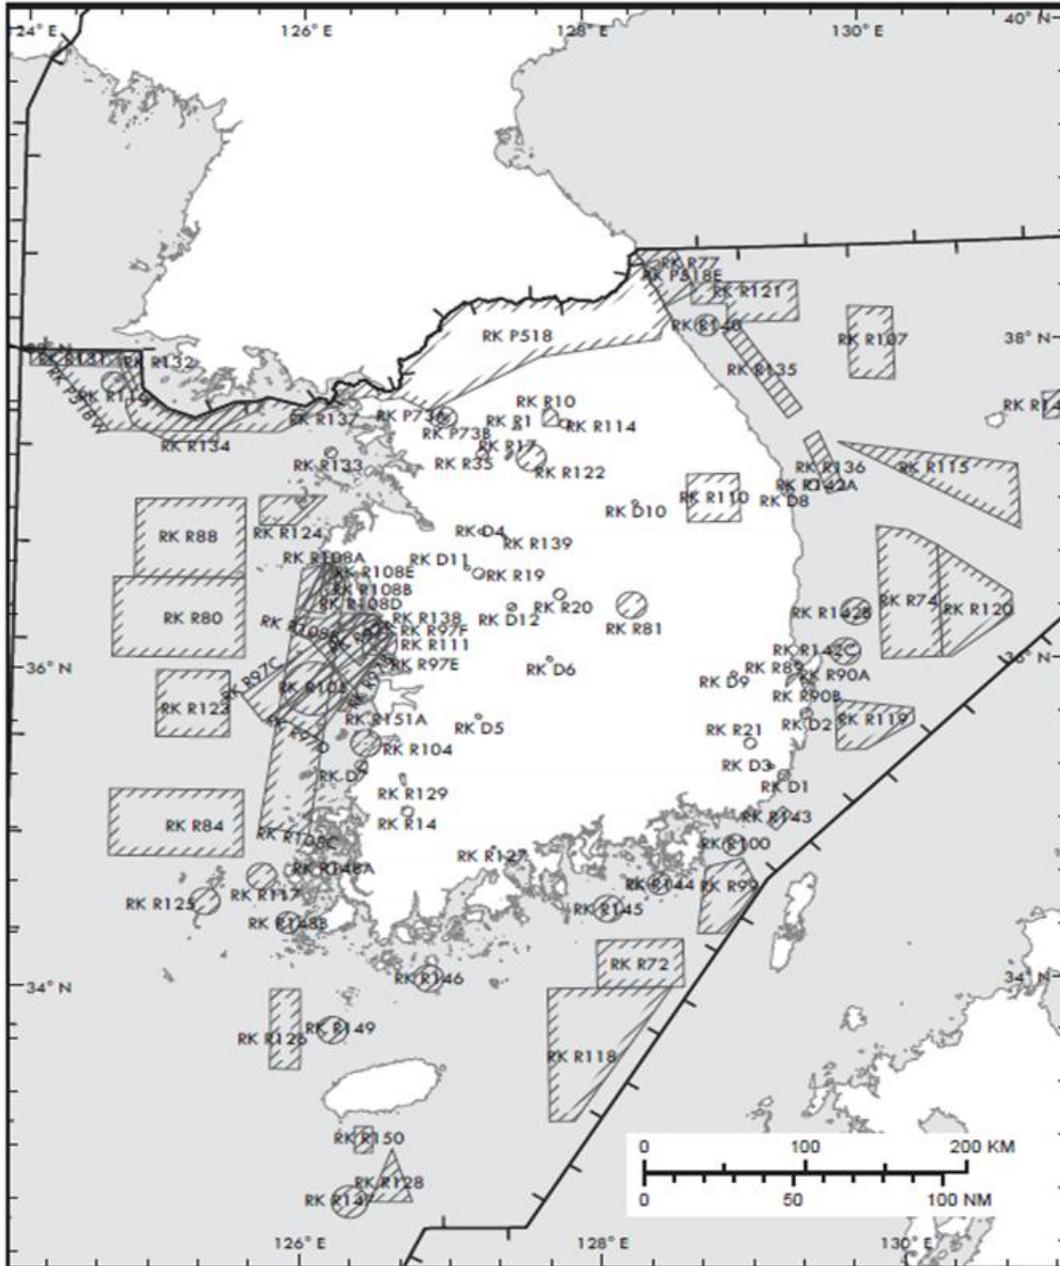


REFERENCE: KOREA AIP ENR 6-3 (31 Oct 2013)

Attachment 8 (Added-8FW)

KUNSAN TAXI FLOW


Figure A8.1. (Added) Kunsan Taxi Flow

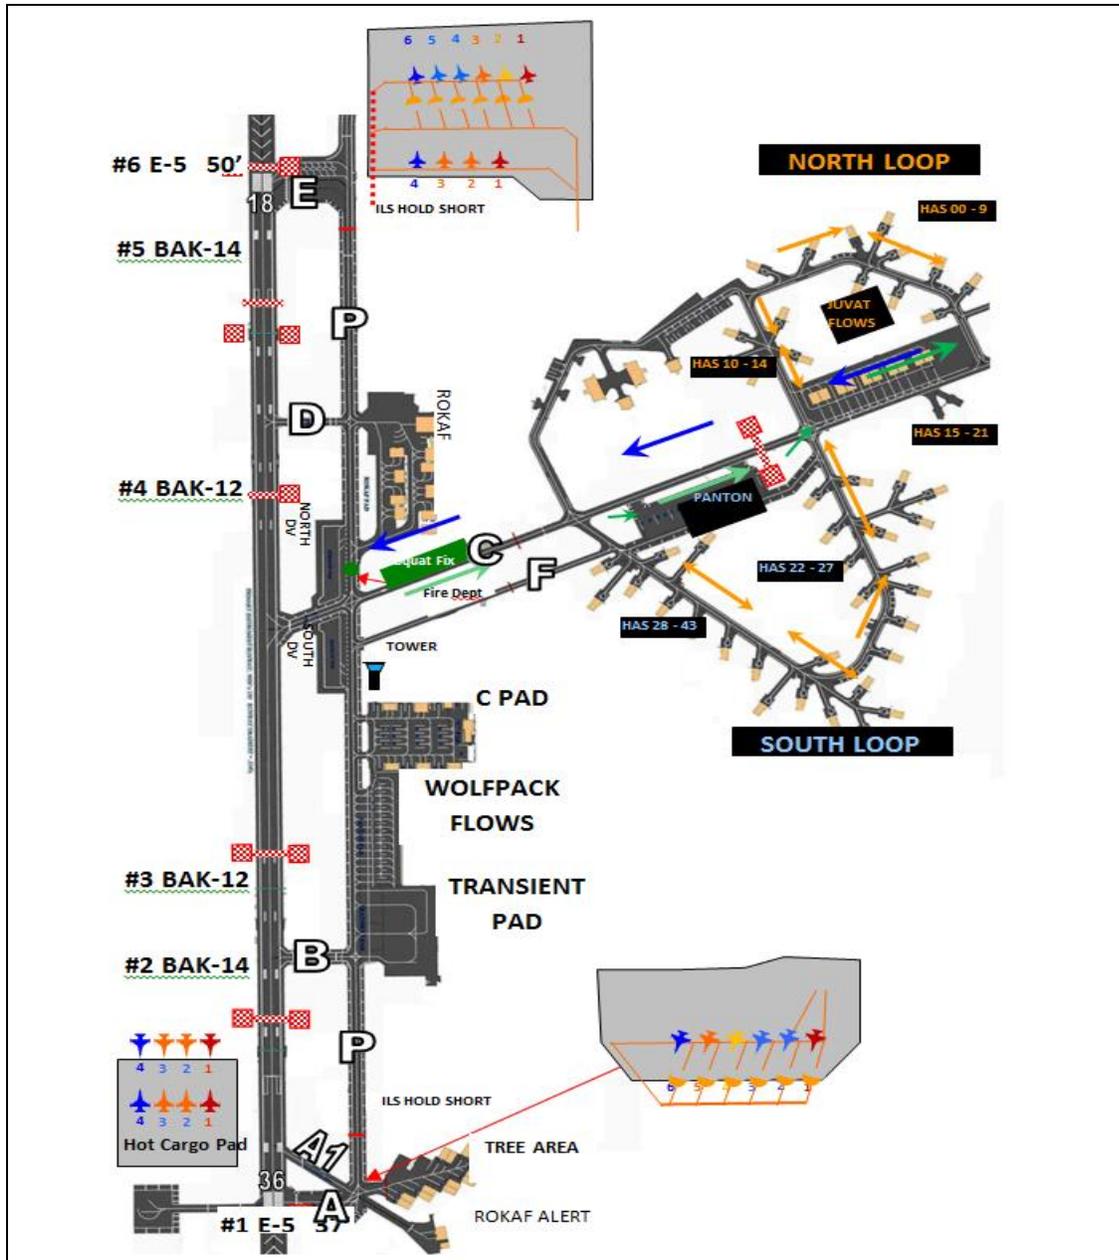

Attachment 9 (Added-8FW)

VFR ENTRY POINTS


Figure A9.1. VFR Entry Points

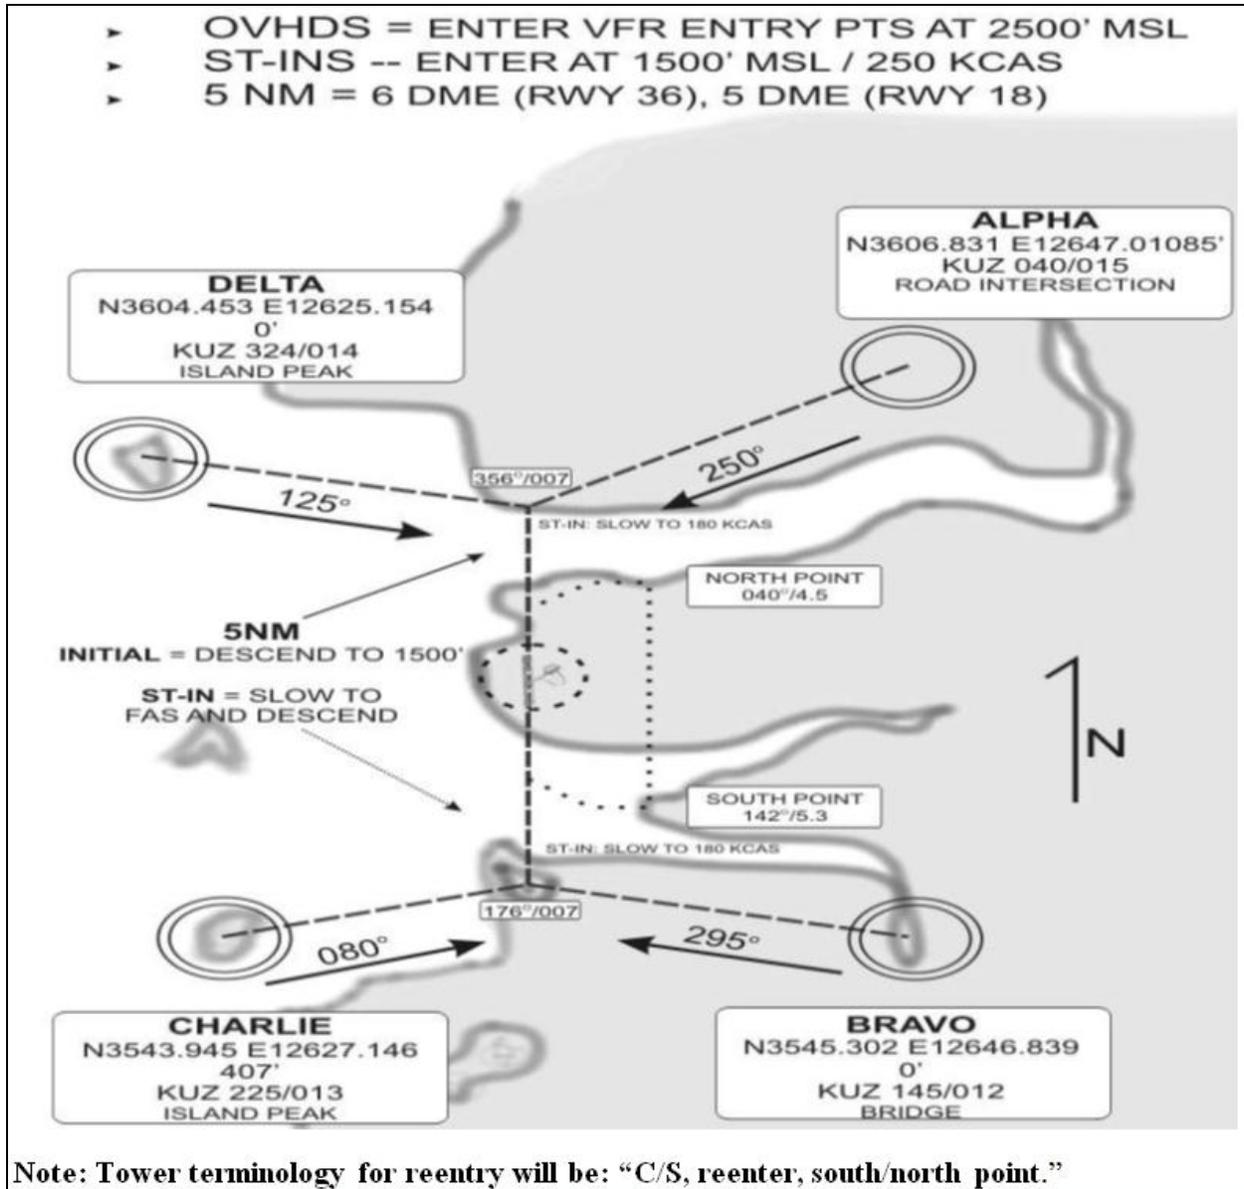

Attachment 10 (Added-8FW)

PATTERN REENTRY/BREAKOUT PROCEDURES


Figure A10.1. Pattern Reentry/Breakout Procedures

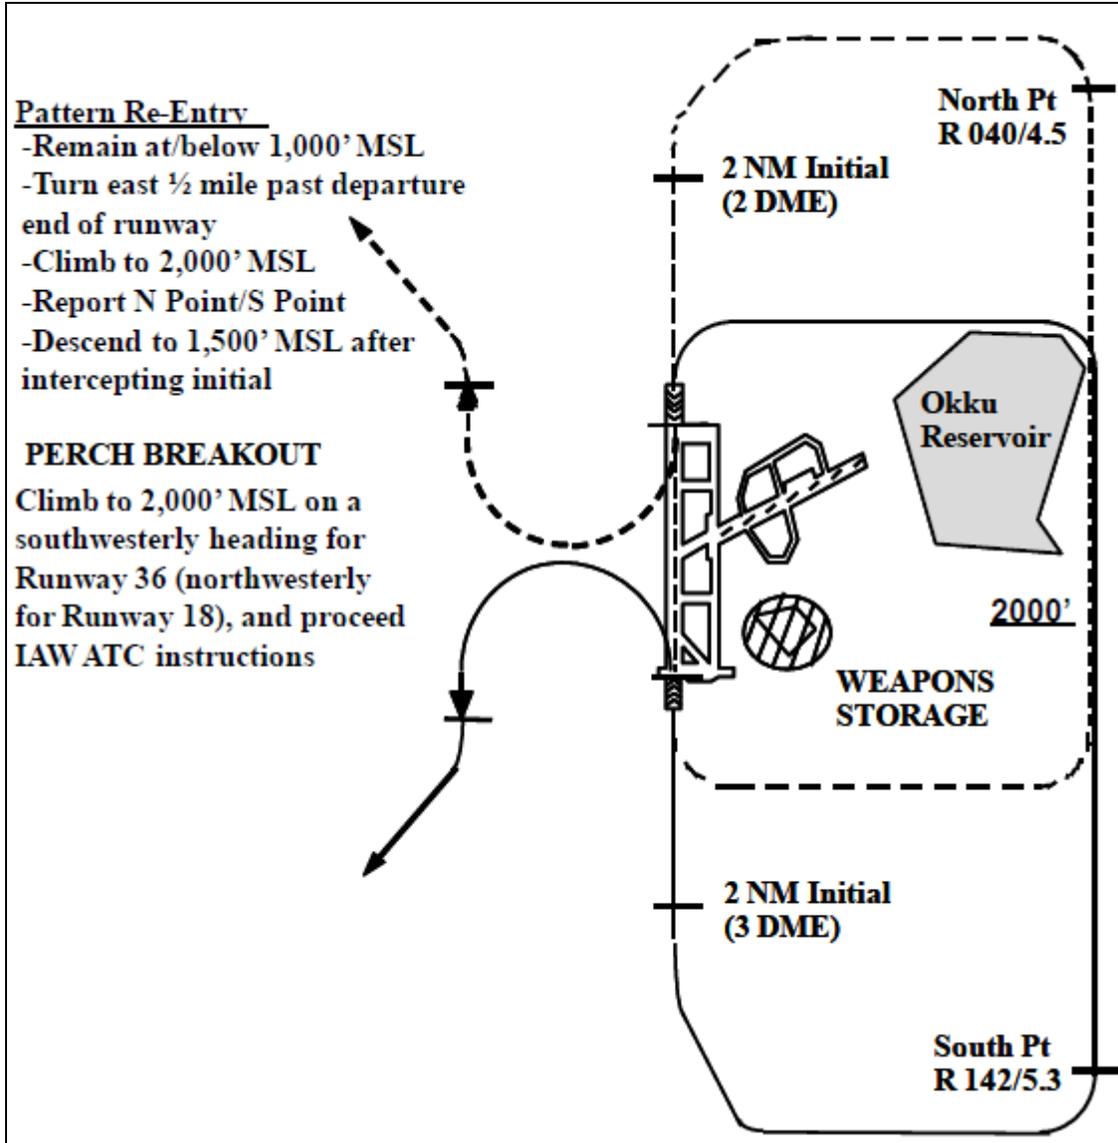

Attachment 11 (Added-8FW)

KUNSAN OVERHEAD AND SFO PATTERNS

Figure A11.1. Kunsan Overhead and SFO Patterns

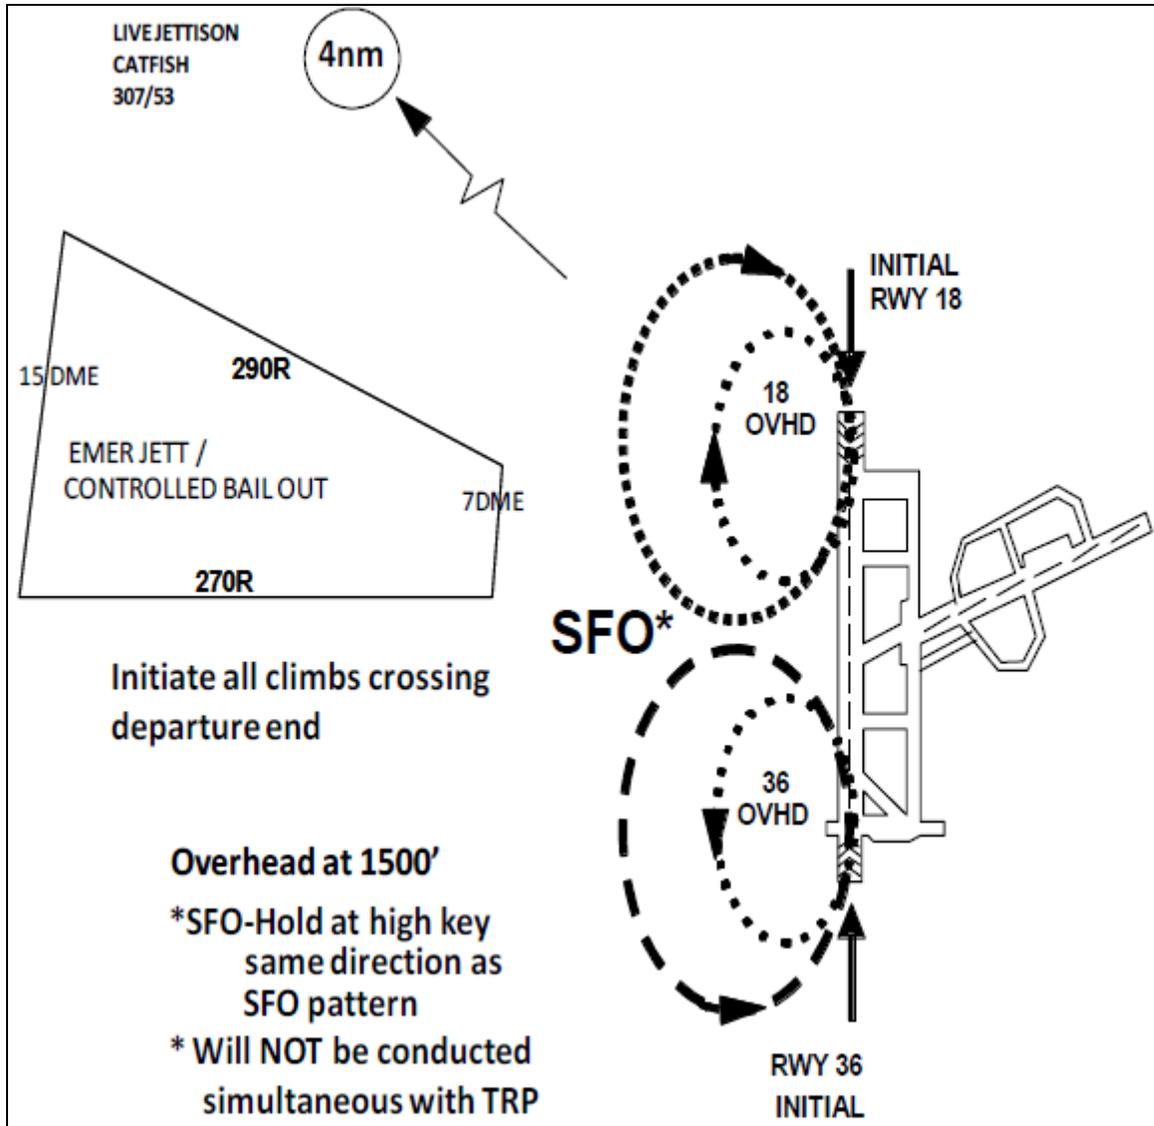

Attachment 12 (Added-8FW)

KUNSAN LOCAL DEPARTURE TRANSITIONS

A12.1. (Added-8FW) Takeoff.

A12.1.1. (Added-8FW) Fly runway heading, maintain at or below 1,000' MSL until past departure EOR, unless cleared by tower (avoid the ROKAF housing area).

A12.1.2. (Added-8FW) Climb to clearance altitude or VFR hemispheric altitude.

A12.1.3. (Added-8FW) At 3 DME, turn on course IAW Kunsan Transitions (see below).

A12.2. (Added-8FW) . Standard RAT Departure.

A12.2.1. (Added-8FW) A/B (if appropriate) until 300 KCAS.

A12.2.2. (Added-8FW) MIL to 350 KCAS.

A12.2.3. (Added-8FW) 800° (750° A/A configured) FTIT and maintain 350 KCAS.


A12.3. (Added-8FW) VFR Departures.

A12.3.1. (Added-8FW) Inform ground on initial taxi call of VFR departure direction and transition point. (Example: — "Viper 1, VFR North, Nampo").

A12.3.2. (Added-8FW) Takeoff on Tower frequency and contact Kunsan Departure for flight following as required/desired.


A12.3.3. (Added-8FW) At 3 DME, turn on course; remain outside 3 DME from Kunsan and climb to VFR hemispheric alt. (i.e., 3,500', 5,500' or 4,500', 6,500' MSL, etc.).

Figure A12.1. Runway 36 and 18

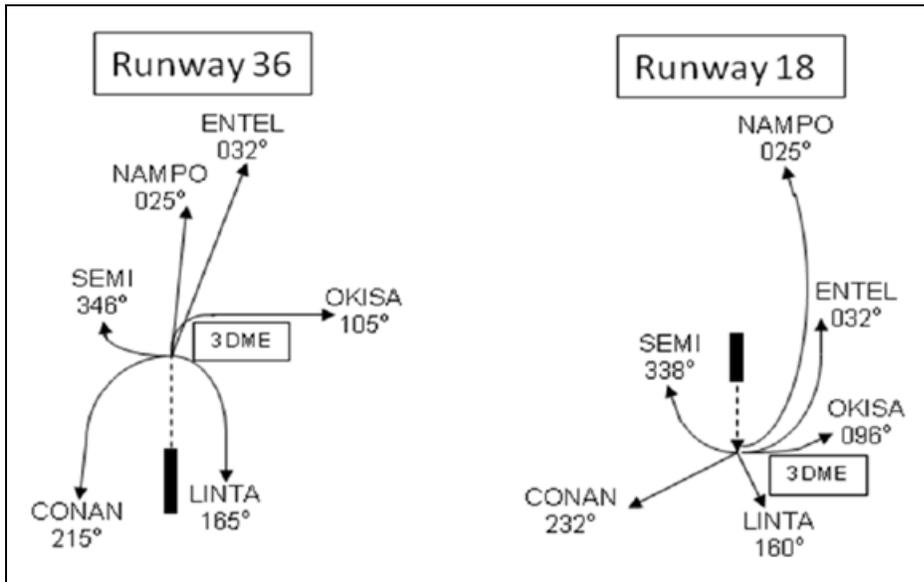

Attachment 13 (Added-8FW)
KUNSAN LOCAL CLIMBOUT

Figure A13.1. Kunsan Local Climbout

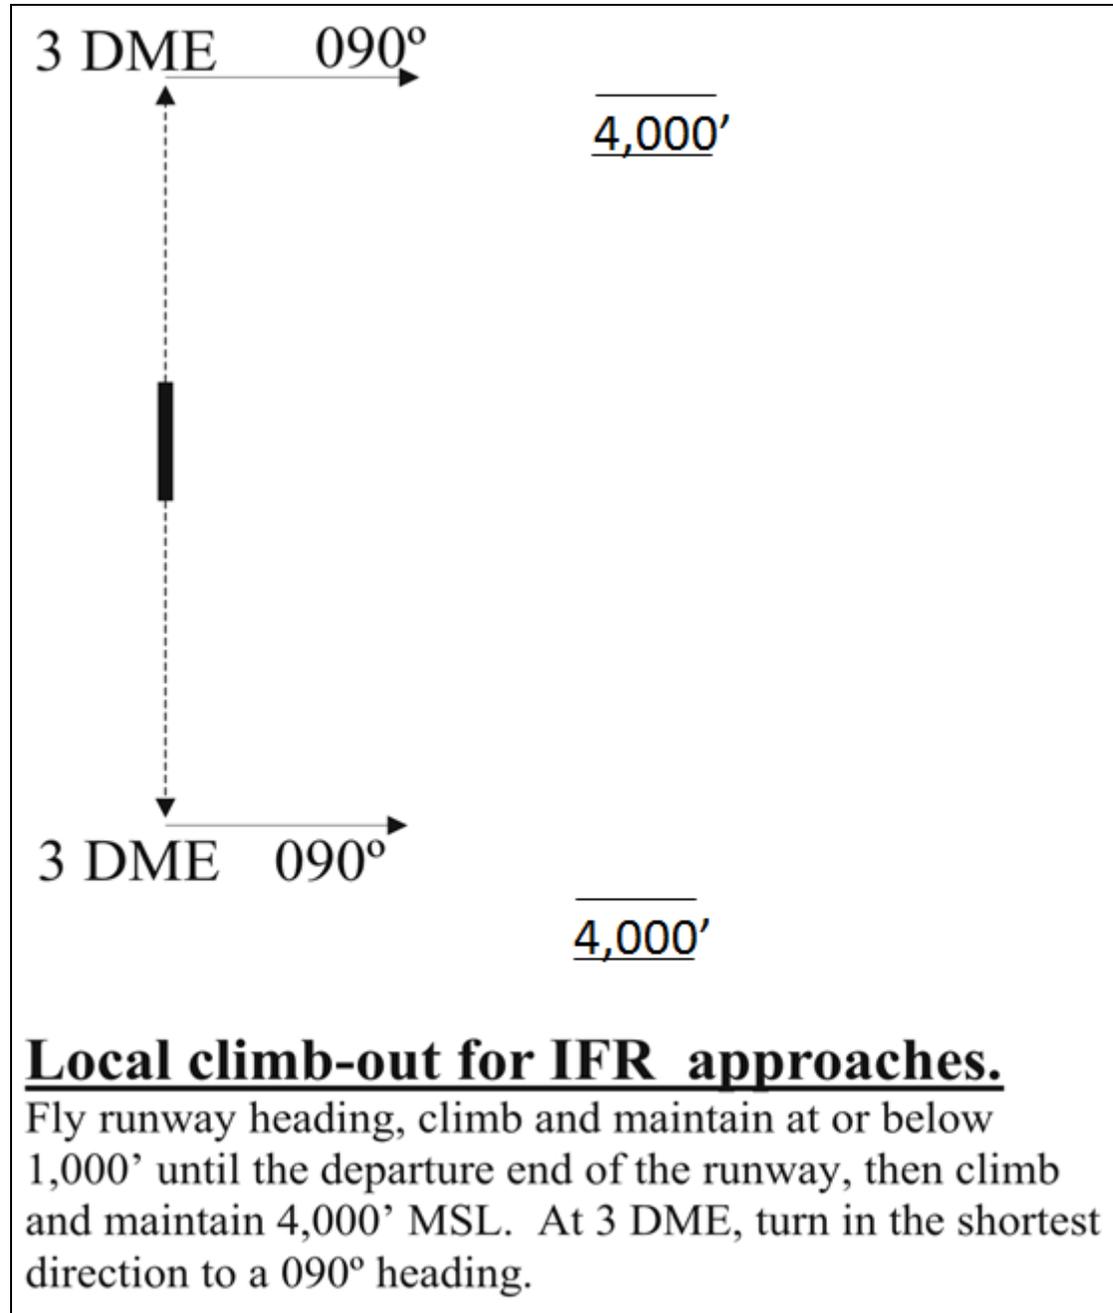

Attachment 14 (Added-8FW)
APPROVED GROUND HOLDING AREAS (POST-ARM)

Figure A14.1. Approved Ground Holding Areas (Post-Arm)

